



Cuisinart CSG-300 Instant Read Folding Thermometer User Manual

[Home](#) » [Cuisinart](#) » Cuisinart CSG-300 Instant Read Folding Thermometer User Manual 

Contents


- 1 Cuisinart CSG-300 Instant Read Folding Thermometer
- 2 PACKAGE CONTENTS
- 3 OPERATING INSTRUCTIONS
- 4 DONESS CHART
- 5 SAFETY INFORMATION
- 6 MAINTENANCE
- 7 Documents / Resources
 - 7.1 References



Cuisinart CSG-300 Instant Read Folding Thermometer



PACKAGE CONTENTS

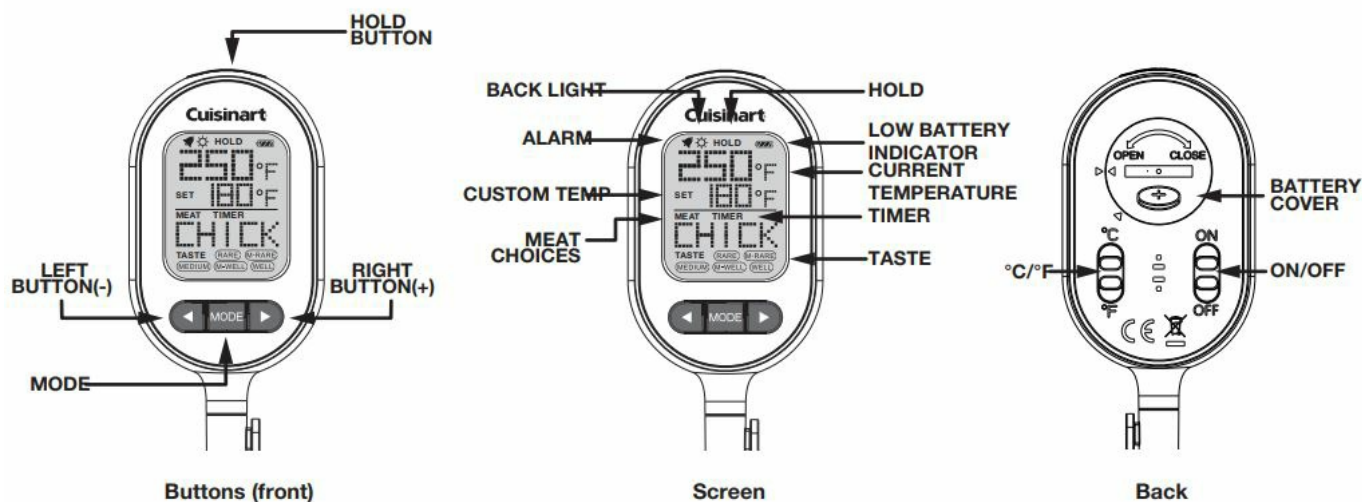


OPERATING INSTRUCTIONS

1. Remove the storage sleeve and pull off the insulation film on the back side of the product.
2. Slide ON/OFF switch to "ON" on the back side of the thermometer.
3. Slide °C/°F switch to "°C" to display Celsius or "°F" to display Fahrenheit.
4. Custom temperature mode
 1. "MEAT" mode and "BEEF-RARE" are set by default. Press ◀ and ▶ to switch to "USER" and other meat. Press "MODE", it will flash, press ◀ or ▶ to switch to meat (BEEF-LAMB-VEAL-PORK-FISH-CHICK-TURKEY-BURG-USER-BEEF). Press "MODE" to select one meat, then press ◀ or ▶ to select taste, press "MODE" to confirm taste, MEAT and TASTE will flash 2S.
 2. Press ◀ or ▶ to switch to "USER" and press "MODE" to set the temperature. "-" stands for no selected alarm temperature. Press ◀ or ▶, "-" starts at 50°C by default. Press "MODE" to confirm the selected temperature. Temperature reset: press "MODE" and then press ◀ and ▶ at the same time, it will show "-", then press "MODE". To set temperature, press ◀ or ▶. Press left button to minus or the right button to add. Press and hold in for 2S to fast-forward or fast-backward. Confirm the desired temperature. If you set "🔊 🔦" it will beep and the LCD will flash when the temperature is finished. Press any button to cancel the alarm.
5. **Temperature function:**

Insert the thermometer into the thickest part of the meat or poultry. The tip should be at least 1 inch into the meat or poultry but not in contact with bone or gristle. When the temperature is stable, press "HOLD" to lock the temperature on the screen ("HOLD" appears on the screen). Remove the thermometer to check whether the desired temperature is reached. If not, press the "HOLD" button again to release the locked-in temperature and display the current temperature ("HOLD" disappears on the screen). Repeat the above steps until the desired temperature is reached.
6. **Backlight/Alarm mode option.**


Turn on the backlight and alarm by default, and press "HOLD" for 2S to enter the backlight and alarm setting, it's set the mode icon flash, press "HOLD" to switch mode. Press "HOLD" for 2S, the corresponding icon will flash 3 times, confirm the desired mode, and exit select status. Without confirming the manually selected mode after 5S, it will confirm automatically and exit mode selection. Under the status of mode selection, other buttons can not trigger functions. Exit the mode selection state to trigger the button setting function.
7. **Timer count-up or count-down:**

Hold down "MODE" for 2s to switch between meat choice/timer mode

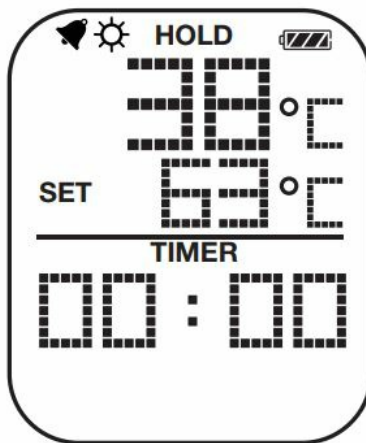

To set a count-down time, press ◀ or ▶ to set "H" and "M", press left button to minus, press right button to add, press and hold for 2S to fast-forward or fast-backward. Press "MODE" to confirm the setting of "H" or "M".

 Press "MODE" to begin or pause counting under TIMER mode, if you set "🔔🌞" it will beep and the LCD will flash when count-down is finished. Press any button to cancel the alarm. To pause the timer, press ◀ and ▶ in the meantime to reset to zero. Slide the switch to "OFF" to conserve battery life when you finish cooking. To start a count-up, start from zero, the timer will count up to 23 hours,59 minutes.



DONESS CHART


TASTE MEAT	WELL	M-WELL	MEDIUM	M-RARE	RARE
BEEF	77°C	74°C	71°C	66°C	63°C
	171°F	165°F	160°F	151°F	145°F
LAMB	77°C	74°C	71°C	63°C	
	171°F	165°F	160°F	145°F	
VEAL	77°C	74°C	71°C		
	171°F	165°F	160°F		
PORK	77°C	74°C	71°C		
	171°F	165°F	160°F		
FISH	70°C				
	158°F				
CHICKEN	82°C				
	180°F				
TURKEY	82°C				
	180°F				
BURGER	74°C				
	165°F				

Conditions of automatic sleep mode


1. Without count-up or count-down.
2. The current temperature is less than 50°C.
3. No button actions in 10 min.
4. Temperature change shall not exceed 3°C.
5. Automatic entry into sleep mode.
6. Press any button to wake up the devices from sleep mode.

Battery installation


When “Low” appears on the screen, replace with a new battery to keep the thermometer operating as normal. Locate the battery compartment on the back of thermometer. Remove by twisting counter-clockwise. Remove the flat battery and replace with a CR2032 button cell battery, matching the polarities(+/-). Secure the battery compartment by twisting it clock-wise. Refer to the figures below.

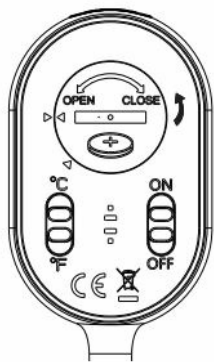


Twist counter-clockwise

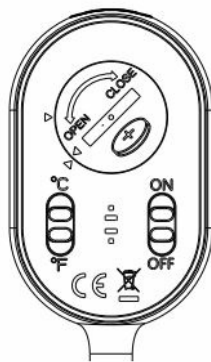 

Match triangle markers

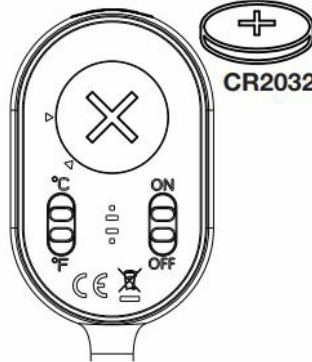 

Replace with a new battery

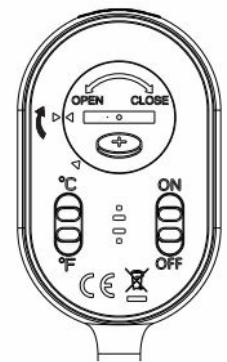

Twist clock-wise

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

WARNING

1. Do not leave in an oven or grill during cooking. Do not put in the dishwasher. Not for microwave use. Clean by hand.
2. Handle with care. The thermometer probe may become hot during use.
3. Remove the battery if the thermometer will not be used for a long period.
4. Chemical burn hazard. Keep battery away from children. The cell should be disposed of properly. Even used cells may cause injury.
5. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours.
6. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery, and keep it away from children. If you think battery might have been swallowed or placed inside any part of the body, seek immediate medical attention.

MAINTENANCE


Wash the meat probe by hand with only mild soap and hot water, rinse thoroughly, and dry thoroughly with a soft cloth.

DO NOT RETURN PRODUCT TO THE STORE

Before visiting your local retailer, call our customer service department at 1-866-994-6390 from 9:00 am to 8:00 pm Eastern time, Monday through Friday. © 2019 Cuisinart Cuisinart® is a registered trademark under license to The Fulham Group. Distributed by The Fulham Group, Newton, MA 02466 U.S.A. MADE IN CHINA One-Year Limited Warranty This quality product is warranted to be free from defects in material, construction, and workmanship.

- Model # CGWM-070 North American Distributor: The Fulham Group Newton, MA 02466

Documents / Resources

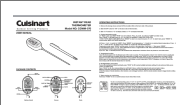	Cuisinart CSG-300 Instant Read Folding Thermometer [pdf] User Manual CSG-300 Instant Read Folding Thermometer, CSG-300, Instant Read Folding Thermometer, R ead Folding Thermometer, Folding Thermometer, Thermometer
---	---

References

- [User Manual](#)