



## Cuisinart Ice Cream Maker Instructions: Learn How to Make Soft Serve at Home

[Home](#) » [Cuisinart](#) » **Cuisinart Ice Cream Maker Instructions: Learn How to Make Soft Serve at Home** 

The Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker is a must-have for ice cream lovers who want to enjoy soft serve ice cream at home. To ensure the appliance is used safely and correctly, it is important to read the user manual thoroughly before use. The freezer bowl needs to be pre-frozen for at least 12 hours before use, and the ice cream mixture should be prepared according to the recipe provided or a recipe of your choice. The appliance has a built-in dispenser that allows users to add mix-ins like sprinkles, chocolate chips, and chopped nuts. The user manual also includes important safety precautions to reduce the risk of fire, electric shock, and injury. Additionally, it provides instructions on how to clean the appliance and prepare it for first use. With its many features and benefits, including a mixing paddle, three topping containers, and a topping chute, the Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker is an excellent addition to any household.

## **Contents**

- [1 Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 IMPORTANT SAFEGUARDS](#)
- [5 SPECIAL CORD SET INSTRUCTIONS](#)
- [6 BEFORE FIRST USE](#)
- [7 FREEZING TIME AND BOWL PREPARATION](#)
- [8 FEATURES AND BENEFITS](#)
- [9 ASSEMBLY](#)
- [10 MAKING SOFT SERVE ICE CREAM AND FROZEN DESSERTS](#)
- [11 RECOMMENDED MIX-INS](#)
- [12 DISASSEMBLING FOR CLEANING](#)
- [13 STORAGE](#)
- [14 TROUBLESHOOTING](#)
- [15 WARRANTY](#)
- [16 SPECIFICATION](#)
- [17 FAQs](#)
- [18 Documents / Resources](#)
  - [18.1 References](#)
- [19 Related Posts](#)

# **Cuisinart®**

**Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker**



## Product Information

**Mix It In™ Soft Serve Ice Cream Maker ICE-48 Series** The Mix It In™ Soft Serve Ice Cream Maker ICE-48 Series by Cuisinart is an electrical appliance designed for making soft serve ice cream at home. The appliance comes with a freezer bowl that needs to be pre-frozen before use. The appliance has a mixing arm that churns the ice cream mixture and incorporates air to make it soft and fluffy. The appliance has a built-in dispenser that dispenses soft serve ice cream and mix-ins like sprinkles, chocolate chips, and chopped nuts.

## Product Usage Instructions

1. Read all the instructions in the user manual before using the appliance.
2. Place the freezer bowl in a freezer set at or below 0°F (-18°C) for at least 12 hours before use. The freezer bowl should be completely frozen before using the appliance.
3. Prepare the ice cream mixture according to the recipe provided in the user manual or use any other recipe of your choice.
4. Remove the freezer bowl from the freezer and assemble the appliance according to the instructions provided in the user manual.
5. Plug in the appliance and turn it on.
6. Pour the ice cream mixture into the freezer bowl.
7. Add any mix-ins if desired.

8. Use the built-in dispenser to dispense soft serve ice cream.
9. Turn off the appliance and unplug it from the power source after use.
10. Disassemble the appliance and clean it according to the instructions provided in the user manual. Do not wash the freezer bowl in a dishwasher.

Follow these instructions carefully to enjoy delicious soft serve ice cream at home with the Mix It In™ Soft Serve Ice Cream Maker ICE-48 Series.

## **IMPORTANT SAFEGUARDS**

When using an electrical appliance, basic safety precautions should always be taken to reduce the risk of fire, electric shock, and/or injury, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.
2. To protect against risk of electric shock, do not place cord, plug, or base of appliance in water or any other liquids.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from appliance during operation to reduce the risk of injury and/or damage to the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Contact the manufacturer for information on examination, repair, or adjustment.
7. The use of attachments other than those made by Cuisinart may cause fire, electric shock or risk of injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Keep hands and utensils out of freezer bowl while in use to reduce the risk of injury to persons or damage to the appliance. DO NOT USE SHARP OBJECTS OR UTENSILS INSIDE THE FREEZER BOWL! Sharp objects will scratch and damage the inside of the freezer bowl. A rubber spatula or wooden spoon may be used when the appliance is in the OFF position.
11. This appliance is for household use. Any servicing other than cleaning and user maintenance should be done only by authorized Cuisinart repair personnel.
12. Do not use the freezer bowl on flames, hot plates or stoves. Do not expose to heat source. Do not wash in dishwasher; doing so may cause risk of fire, electric shock or injury.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not use appliance for other than its intended use.

**SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY**

## **SPECIAL CORD SET INSTRUCTIONS**

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use. If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over. **NOTICE** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. **CAUTION** This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative.

- Do not immerse base in water.
- To reduce the risk of fire or electric shock, do not disassemble the base. **NOTE:** The base does not contain any user-serviceable parts.
- Repairs should be made only by authorized personnel.
- Check voltage to be sure that the voltage indicated on the nameplate agrees with your voltage.
- Never clean with scouring powders or hard implements.


## **BEFORE FIRST USE**

DO NOT immerse this product in water. Wipe it with a damp cloth. Wash the lid, freezer bowl, mixing arm, topping containers, topping chute, and drip tray in warm, soapy water to remove any dust or residue from the manufacturing and shipping process. DO NOT clean any of the parts with abrasive cleaners or hard implements.

## **FREEZING TIME AND BOWL PREPARATION**

The freezer bowl must be completely frozen before you begin your recipe. Before freezing, wash and dry the bowl. Wrap it in a plastic bag to prevent freezer burn. We recommend that you place the freezer bowl in the back of your freezer where it is coldest. Be sure to place the freezer bowl on a flat surface in its upright position for even freezing. The length of time needed for the bowl to freeze completely depends on how cold your freezer is. For the most convenient frozen desserts, leave the bowl in the freezer at all times. You can take it out any time for immediate use. In general, freezing time should be a minimum of 24 hours. To determine whether the bowl is completely frozen, shake it. If you do not hear liquid moving, the cooling liquid is frozen. Reminder: Your freezer should be set to 0°F to ensure proper freezing. **REFERENCE CARD** If you lose the paper instruction booklet, there is a QR code to access the online instruction booklet and recipes. Pull the "INFO" tray on the side of the drip tray (part #12 on page 4) and scan the QR code.

## FEATURES AND BENEFITS

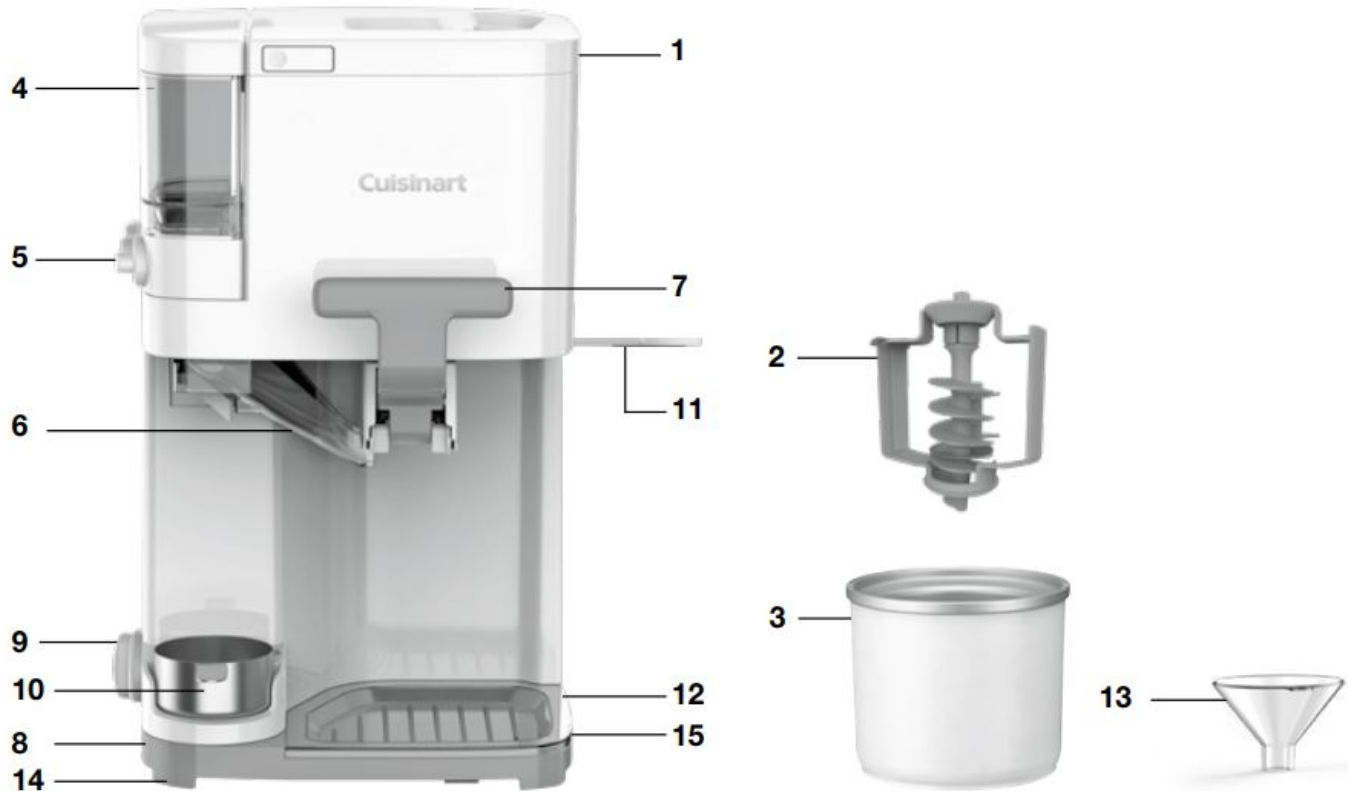

1. **Easy-Lock Lid with Opening** – Lid is designed to remove and lock easily. An ingredient opening allows you to pour ingredients directly through the top and watch the freezing process.
2. **Mixing Paddle** – Mixes and aerates ingredients in freezer bowl to create smooth, soft ice cream.
3. **1½-Quart Freezer Bowl** – Contains cooling liquid within a double-insulated wall to create fast and even freezing. Double wall keeps the bowl cool and at an even temperature.
4. **Three Topping Containers** – Dispense the mix-ins of your choice. The three topping containers dispense mix-ins such as sprinkles, mini chocolate chips, hard-shelled candies, and many more. The topping containers can dispense and mix add-ins into the ice cream or they can be taken off the machine to add toppings onto ice cream right at the table.
5. **Topping Dispensing Knobs** – Turn one of three knobs to dispense the mix-ins of your choice into your soft ice cream.
6. **Topping Chute** – Mix-ins are dispensed from the chute into your ice cream cone or bowl while you dispense ice cream. Removable for easy cleaning.
7. **Dispensing Handle Assembly** – Dispenses soft ice cream when handle is pulled down. Removable for easy cleaning.
8. **Base** – Contains heavy-duty motor strong enough to make and dispense ice cream.
9. **Power Control Knob** **4 oz. Keep Warm Cup and Heating Plate** – Keep liquid toppings warm.
10. **Cone Holder** – Conveniently holds a stack of ice cream cones. Can hold both wafer-style and sugar cones.
11. **Removable Drip Tray** – Can be removed for easy cleaning.
12. **Mix-in Gauge** – Check the size of mix-ins by dropping them through. Mix-ins that do not fit through will clog the ice cream maker.
13. **Rubber Feet** – Nonslip feet keep base stationary during use.
14. **Removable Quick Reference Card** (Not Shown)

## ASSEMBLY

1. Insert the topping containers into the indent on the top left side of the Cuisinart® Mix It In™ Soft Serve Ice Cream Maker so that they are firmly in place. The topping containers with the rounded edge should be inserted into the front and rear spaces.
2. Place the cover over each of the topping containers.
3. Attach the dispensing handle assembly by inserting the round opening under the top part of the unit, aligning the handle with “LOCK” on the side of the unit, then rotating the assembly clockwise until it locks into place (the Dispensing Handle should be in the center of the front of the unit).
4. Slide the topping chute into the space provided under the topping containers. Be sure to slide it all the way in until it snaps in place (the Dispensing Handle must be in the upright position).
5. Place the drip tray on the base under the dispensing handle.
6. Place the keep warm cup on the warming plate, if heating up toppings.

## MAKING SOFT SERVE ICE CREAM AND FROZEN DESSERTS

1. Fill the topping containers with the desired mix-ins using the mix-in gauge.
2. Do not place liquid toppings in toppings containers. Liquid toppings should be placed in keep warm cup over the heater. Do not exceed 4 oz. of liquid toppings in keep warm cup. **NOTE:** keep warm cup should only be used to keep liquid toppings warm.
3. Use Cuisinart’s recipes from the pages that follow. Do not fill the freezer bowl higher than ½ inch from the top, as the frozen dessert base will increase in volume during the freezing process. For best results, prepare frozen dessert base in a container from which it is easy to pour.
4. Push the upper part of the mixing paddle into the hole on the bottom of the lid.
5. Remove the freezer bowl from the freezer. (Remove plastic bag if you have wrapped freezer bowl.) Lift the lid and place freezer bowl inside the base. **NOTE:** Bowl will begin to defrost quickly once it has been removed from freezer. Use immediately after removing from freezer.
6. Place lid with mixing paddle on base and push down until it locks into place.
7. Turn the power control knob to “Ice Cream,” if only preparing ice cream. Turn the dial to “Ice Cream + Warm,” if preparing ice cream and warming a liquid topping. Mixing paddle will begin to turn and the warming heater will start if selected.
8. Add frozen dessert base to the freezer bowl by pouring through the opening in the lid.
9. Soft ice cream will be finished in as little as 30 minutes. The time will depend on the recipe and volume of the dessert you are making. Frozen dessert base should be refrigerated to reduce mixing time. **NOTE:** Ensure optimal soft serve consistency by checking ice cream at least 5 minutes before specified finish time. If it does become too hard to dispense, simply remove the freezer bowl, scoop, serve, and enjoy!
10. Hold an ice cream cone or bowl 1 inch below the ice cream chute and pull down the handle to dispense the ice cream. Turn cone or bowl as you dispense to swirl ice cream.
11. Turn desired knob(s) to add toppings of your choice to soft serve ice cream or dessert.
12. When finished filling the cone or bowl, push the handle back up to stop the flow of ice cream. **NOTES:** Some liquid may initially come out of the dispensing handle assembly when first pulled down. Use a cup to collect this liquid, pour liquid back into bowl, then proceed with filling the first bowl or cone. Do not store frozen desserts in the freezer bowl. Desserts will stick to the side of the freezer bowl and may damage the bowl. Transfer to an airtight container. Ice cream will lose its soft consistency and harden after it is stored in the freezer.
13. If you want to use the Keep Warm Cup, make sure the unit is turned to “Ice Cream+ Warm.” **NOTE:** The Keep

Warm feature is intended to keep only prepared toppings soft enough to pour over ice cream (hot fudge, caramel, and butterscotch).

## **RECOMMENDED MIX-INS**

These items can be found in most well-stocked grocery stores.

- Mini candy-coated chocolates
- Mini chocolate chips
- Confetti sprinkles
- Chocolate sprinkles
- Caramel sprinkles
- Praline crunch
- Decorative Crunch Bits
- Finely Chopped Nuts

**NOTE:** Always use the mix-in gauge; some mix-ins may be too large to dispense and will need to be chopped.

**SUGGESTED LIQUID TOPPINGS**

- Chocolate syrup
- Prepared hot fudge
- Prepared caramel sauce
- Prepared fruit sauce, such as strawberry, blueberry, or raspberry
- Butterscotch sauce

## **DISASSEMBLING FOR CLEANING**

1. Turn the unit OFF and unplug.
2. Remove the lid by pushing in and lifting the two side tabs. Disconnect the mixing paddle.
3. Lift the freezer bowl up and out of the base. Make sure all ice cream has been dispensed before removing.
4. Remove the topping chute by pulling it toward you.
5. Remove the dispensing handle assembly by turning counterclockwise to unlock. Once unlocked, it can be lowered from the unit.

## **CLEANING**

1. Follow section on disassembling.
2. Base: Wipe with a damp cloth and dry. Never use abrasives or immerse in water.
3. Freezer Bowl and Lid: Wash by hand in warm, soapy water and dry thoroughly. **DO NOT PUT IN THE DISHWASHER. DO NOT CLEAN WITH ABRASIVE CLEANSERS.**
4. Dispensing Handle Assembly: Wash thoroughly by hand in warm, soapy water. Be sure to eliminate all ice cream residue by cleaning it while it is opened (with the handle pushed down) and closed (with handle up).
5. Mixing Paddle, Topping Containers, Topping Chute, Keep Warm Cup and Drip Tray: Hand-wash in warm, soapy water and dry thoroughly. These items are also top rack dishwasher safe.



## STORAGE

DO NOT put freezer bowl in freezer if bowl is wet. DO NOT store lid, mixing paddle, base, drip tray, or topping containers in the freezer. You may store the freezer bowl in the freezer, in its upright position, for convenient, immediate use. We recommend, before freezing, wrap the bowl in a plastic bag to prevent freezer burn. DO NOT store frozen desserts in the freezer bowl. Transfer desserts to an airtight container for longer storage in the freezer. When filled topping containers are not in use, store in a cool, dark place. Empty containers if not used within a week. **NOTE:** Ice cream will lose its soft consistency and harden after it is stored in the freezer.

## TROUBLESHOOTING

**Problem: Ice cream is not ready in recommended time. Solution:**

- Check the ice cream base consistency as it is churning. If it is thick and cold, more churning might be necessary to get to the right consistency for dispensing.
- Should the correct consistency still not be achieved, it could be attributed to the temperature of the ice cream bowl. It is important for the freezer to be at 0°F and for the freezer bowl to be in the freezer for 24 hours before using.
- Ice cream base ingredients may not have been cold enough. Be sure to fully chill ice cream base prior to making ice cream for best results.
- Be sure to have your ice cream maker all set up with dispensing assembly in place and paddle attached to lid before removing ice cream bowl from the freezer.

**Problem: Ice cream is not dispensing. Solution:**

- Correct consistency is key to dispensing. Begin checking consistency at least 5 minutes before specified finish time.
- Once ice cream gets too thick, it will not be able to be dispensed. Should this happen, simply scoop ice cream right from the ice cream bowl.
- When checking to see if consistency is correct for dispensing, test by dispensing once base starts getting thick. If base is too soft or liquid, simply pour it back into the mix.
- Once ice cream does get to correct consistency, continue to dispense cups or cones until ice cream is completely dispensed.

**Problem: Motor stalls. Solution:**

- Ice cream may be too thick.
- Turn off ice cream maker. Freezer bowl will need to be emptied, washed and refrozen before starting the process again.

**Problem: Mix-ins are not dispensing. Solution:**

- Check topping chute to make sure that mix-ins are not stuck.
- Be sure that the topping dispenser is completely dry before adding any toppings. If wet, toppings can melt and stick together.
- Be sure that the mix-in chute is also thoroughly dry.

- Mix-ins may be too large. Use the mix-in gauge to determine the correct size for mix-ins.

**Problem: Ice cream paddle is not turning. Solution:**

- Check to make sure there is no ice in the freezer bowl.

## WARRANTY

**Limited Three-Year Warranty** This warranty is available to U.S. consumers who purchase products directly from Cuisinart or an authorized Cuisinart® reseller only. You are the consumer if you own a Cuisinart® Mix It In™ Soft Serve Ice Cream Maker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners or consumers who purchase from unauthorized Cuisinart® resellers. We warrant that your Cuisinart® Mix It In™ Soft Serve Ice Cream Maker will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase. We recommend that you visit <https://cuisinart.registria.com> for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. **CALIFORNIA RESIDENTS ONLY** California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty. **Hassle-Free Replacement Warranty** Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® Mix It In™ Soft Serve Ice Cream Maker should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, visit us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>. Or call our Consumer Service Center toll-free at 1-800-726-0190 to speak with a representative. Your Cuisinart® Mix It In™ Soft Serve Ice Cream Maker has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state. Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, to confirm that the product is serviced with the correct parts, and to ensure that the product is still under warranty. ©2022 Cuisinart Glendale, AZ 85307

## SPECIFICATION

Product Name	Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker
Product Type	Electrical appliance for making soft serve ice cream at home

Freezer Bowl	1½-quart freezer bowl that needs to be pre-frozen for at least 12 hours before use
Mixing Arm	Churns the ice cream mixture and incorporates air to make it soft and fluffy
Built-in Dispenser	Dispenses soft serve ice cream and mix-ins like sprinkles, chocolate chips, and chopped nuts
Features and Benefits	
Easy-Lock Lid with Opening	Allows for easy removal and locking of the lid. Ingredient opening allows for pouring ingredients directly through the top and watching the freezing process
Mixing Paddle	Mixes and aerates ingredients in freezer bowl to create smooth, soft ice cream
Three Topping Containers	Dispense the mix-ins of your choice. The three topping containers dispense mix-ins such as sprinkles, mini chocolate chips, hard-shelled candies, and many more. The topping containers can dispense and mix add-ins into the ice cream or they can be taken off the machine to add toppings onto ice cream right at the table
Topping Dispensing Knobs	Turn one of three knobs to dispense the mix-ins of your choice into your soft ice cream
Topping Chute	Mix-ins are dispensed from the chute into your ice cream cone or bowl while you dispense ice cream. Removable for easy cleaning
Dispensing Handle Assembly	Dispenses soft ice cream when handle is pulled down. Removable for easy cleaning
Base	Contains heavy-duty motor strong enough to make and dispense ice cream
Power Control Knob	Controls the power of the appliance
4 oz. Keep Warm Cup and Heating Plate	Keeps liquid toppings warm
Cone Holder	Conveniently holds a stack of ice cream cones. Can hold both wafer-style and sugar cones
Removable Drip Tray	Can be removed for easy cleaning
Mix-in Gauge	Checks the size of mix-ins by dropping them through. Mix-ins that do not fit through will clog the ice cream maker
Rubber Feet	Nonslip feet keep base stationary during use

## FAQS

### **What are some of the features and benefits of the appliance?**

The appliance has an easy-lock lid with an opening, a mixing paddle, a 1½-quart freezer bowl, three topping containers, topping dispensing knobs, a topping chute, a dispensing handle assembly, and a cone holder. It also has rubber feet to keep the base stationary during use.

### **How should I store and freeze the freezer bowl?**

Before freezing, wash and dry the bowl. Wrap it in a plastic bag to prevent freezer burn. We recommend that you place the freezer bowl in the back of your freezer where it is coldest. Be sure to place the freezer bowl on a flat surface in its upright position for even freezing. The length of time needed for the bowl to freeze completely depends on how cold your freezer is. For the most convenient frozen desserts, leave the bowl in the freezer at all times. You can take it out any time for immediate use.

### **Can I use attachments other than those made by Cuisinart?**

No, using attachments other than those made by Cuisinart may cause fire, electric shock or risk of injuries.

### **What are some important safety precautions to follow?**

To reduce the risk of fire, electric shock, and injury, it is important to read all instructions in the user manual before using the appliance. Avoid contact with moving parts, keep hands and utensils out of freezer bowl while in use, and do not operate any appliance with a damaged cord or plug. Close supervision is necessary when any appliance is used by or near children.

### **How do I clean the appliance?**

Disassemble the appliance and clean it according to the instructions provided in the user manual. Do not wash the freezer bowl in a dishwasher.

### **How do I add mix-ins to my ice cream?**

The appliance has a built-in dispenser that allows users to add mix-ins like sprinkles, chocolate chips, and chopped nuts.

### **How do I prepare the ice cream mixture?**

You can prepare the ice cream mixture according to the recipe provided in the user manual or use any other recipe of your choice.


### **What is the freezer bowl and how long should it be frozen?**

The freezer bowl is a part of the appliance that needs to be pre-frozen for at least 12 hours before use. The freezer bowl should be completely frozen before using the appliance.

### **What is the Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker?**

The Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker is an electrical appliance designed for making soft-serve ice cream at home.

## **Documents / Resources**

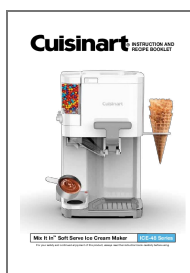

[Cuisinart ICE-48 Series Mix It In Soft Serve Ice Cream Maker](#) [pdf] User Manual  
ICE-48 Series Mix It In Soft Serve Ice Cream Maker, ICE-48 Series, Mix It In Soft Serve Ice Cream Maker, Ice Cream Maker, Cream Maker

## **References**

- [🔗 Welcome to Registria](#)
- [👤 Product Inquiry](#)
- [👤 Welcome | Cuisinart](#)

Manuals+.