

Cuisinart P-C77-SHRP Shears and Scissors



Cuisinart P-C77-SHRP Shears and Scissors User Guide

[Home](#) » [Cuisinart](#) » Cuisinart P-C77-SHRP Shears and Scissors User Guide 

Contents

- [1 Cuisinart P-C77-SHRP Shears and Scissors](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 USING INSTRUCTION](#)
- [5 LIFETIME WARRANTY](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Cuisinart®

Cuisinart P-C77-SHRP Shears and Scissors



Product Information

Specifications:

- **Product:** Shears and Sharpener Set
- **Usage:** Hand-wash for best results
- **Storage:** Close cover and fold in handle for safe, compact storage
- **Warranty:** Excludes damage caused by accident, misuse, or abuse
- **Warranty Coverage:** Repairs, replacements, and shipping covered for nonconforming products under warranty

Product Usage Instructions

Shears:

1. Hand-wash shears for best results.

Sharpener:

1. Hand-wash the sharpener for best results.
2. Close cover and fold in handle for safe, compact storage when not in use.

Warranty Information:

- This warranty excludes damage caused by accident, misuse, or abuse, including damage caused by overheating. It does not apply to scratches, stains, discoloration, or other non-functional damage to the shears or sharpeners.
- The warranty also excludes all incidental or consequential damages. Specific legal rights are provided, and additional rights may vary by state.
- California residents can return nonconforming products to Cuisinart for repair or replacement by contacting the Consumer Service Center. Cuisinart covers the cost of repair, replacement, and shipping for nonconforming products under warranty.

Frequently Asked Questions (FAQ):

- **Q: What should I do if my product is damaged?**

A: If the damage is due to accident, misuse, or abuse, it may not be covered under warranty. Contact the Consumer Service Center for assistance.

- **Q: How should I store the sharpener?**

A: Close the cover and fold in the handle for safe and compact storage when not in use.

For shears:

Hand-wash shears for best results.

For sharpener:

Hand-wash for best results. Close cover and fold in handle for safe, compact storage.

USING INSTRUCTION

- Place the sharpener on the counter with the handle extended; the silicone base prevents the unit from slipping.
- Lift the cover to expose the 3 sharpening slots.
- Grip the handle firmly and press down.
- Place the wide end (heel) of the knife blade into the appropriate slot.
- Using even pressure, pull the knife backward through the slot, from heel to tip, in one smooth motion. Repeat as needed.
- Carefully wipe the blade clean with a soft cloth or paper towel.

LIFETIME WARRANTY

LIFETIME WARRANTY (U.S. and Canada Only)

This warranty is available to consumers who purchase directly from Cuisinart or an authorized Cuisinart reseller only. You are a consumer if you own Cuisinart® Shears or a Cuisinart® Sharpener that was purchased at retail for personal, family, or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers owners or consumers who purchase from unauthorized Cuisinart resellers. Your Cuisinart® Shears or Cuisinart® Sharpener is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

HASSLE-FREE REPLACEMENT WARRANTY

Your ultimate satisfaction with Cuisinart products is our goal, so if your Cuisinart® Shears or Cuisinart® Sharpener should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product->

[assistance/product-inquiry/](#). Or call our Consumer Service Center toll-free at 1-[800-726-0190](#) to speak with a representative.

- This warranty excludes damage caused by accident, misuse, or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration, or other damage to external or internal surfaces that does not impair the functional utility of the shears or sharpener.
- This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.
- This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store that sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.


California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 1-[800-726-0190](#). To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling of such nonconforming products under warranty.

© 2023 Cuisinart

- Glendale, AZ 85307
- Visit our website: www.cuisinart.com
- 23CK088709
- Follow us @Cuisinart



Documents / Resources

	<p>Cuisinart P-C77-SHRP Shears and Scissors [pdf] User Guide P-C77-SHRP, P-C77-SHRP Shears and Scissors, Shears and Scissors, Scissors</p>
---	--

References

-  [Cuisinart's Kitchen Appliances for Professional and Home Chefs](#)

-  [Product Inquiry Form - Cuisinart.com](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.