

CULINARE Digitimer Kitchen Timer Instructions

[Home](#) » [CULINARE](#) » CULINARE Digitimer Kitchen Timer Instructions 

CULINARE Digitimer Kitchen Timer Instructions



INSTRUCTIONS

To set up the timer

Open the battery cover and remove the plastic battery saver. The digital display will remain on.

HOW TO USE

To count up:

Press the START/STOP button to start or stop the clock. The timer will count up in seconds (not minutes) to a maximum time of 19 minutes and 59 seconds. After this time the timer will reset to zero and commence counting up again. This will continue until START/ STOP button is pressed.

To reset the time:

Press and hold the MIN and HOUR buttons simultaneously to reset and switch between counting modes.

To count down:

To set the time, press the HOUR button to set the number of hours and the MIN button to set the number of minutes (Maximum time is 19 hours and 59 minutes).

The : flashes when the timer is counting up or down. When not flashing, it is in standby mode.

To start, press START/STOP button. When the timer has 15 minutes left it will beep once, then again at 10 and 5 minutes to give you warnings. Please note the timer will count down in minutes (not seconds).

When the timer reaches zero, the alarm will sound. Press START/STOP button to stop alarm, otherwise it will sound for 60 seconds.

WARNING: Use only batteries of the same or equivalent types as recommended. Insert 1 x LR44 Button Cell battery with the correct polarity. Remove any exhausted battery from product if not in use. Do not dispose of batteries in fire as they may explode or leak. Do not short-circuit the supply terminals. Button cell batteries are dangerous if swallowed. Always keep them out of reach of children and pets.



www.dkhouseholdbrands.com
www.culinare.com



DK HOUSEHOLD BRANDS LIMITED

Bridge House, Eelmoor Road, Farnborough, GU14 7UE, UK

DK HOUSEHOLD BRANDS CORP

3467 Apex Parkway, Apex, NC, 27502, USA

DK HOUSEHOLD BRANDS AG

Eggbühlstrasse 28, 8050 Zürich, Switzerland

DK HOUSEHOLD BRANDS AG GMBH

Bahnhofsplatz 6, 56410 Montabaur, Germany



PAPER
PLEASE
RECYCLE

IT. Foglietto istruzioni
Raccolta Carta

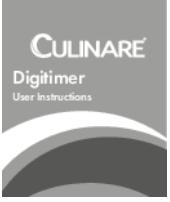
XC55403Rev0

Contents

1 Documents / Resources

1.1 References

Documents / Resources

	<p>CULINARE Digitimer Kitchen Timer [pdf] Instructions 2024, Digitimer Kitchen Timer, Digitimer, Kitchen Timer, Timer</p>
---	--

References

- [!\[\]\(511a36c244659513b679df9c639945de_img.jpg\) Essential Kitchen Gadgets | Food Preparation Tools | Culinare](#)
- [!\[\]\(2c0783baf87a2728b2fe49eb1c34c456_img.jpg\) DK Household Brands](#)
- [User Manual](#)

Manuals+ [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.