

Current IS Series LED Luminaire Endcap Installation Guide

Contents

- [1 Current IS Series LED Luminaire Endcap](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

Current IS Series LED Luminaire Endcap

Product Information

The Endcap Cover Accessory IS Series is an accessory designed for use with the IND190 product. It consists of two end caps, one female end cap (A) and one male end cap (B). These end caps are not identical and have different clipping fixtures on each side.

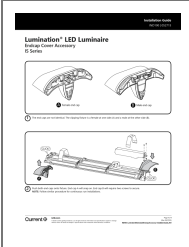
Product Usage Instructions

1. Identify the female end cap (A) and the male end cap (B) based on the clipping fixtures.
2. Push both end caps onto the fixture, ensuring that the female end cap (A) snaps on securely.
3. For the male end cap (B), use two screws to secure it to the fixture.
4. Repeat the above steps for continuous run installations.

Note: Ensure that the end caps are properly installed and secured to the fixture before proceeding with any further installation or usage.

For more information and support, please visit [LED.com](#) or refer to the product manual (Page 1 of 1, Rev 05/17/23) [IND190-LuminationISSeriesLEDEndcapAccessory-InstallationGuide_R01](#).

Documents / Resources

	Current IS Series LED Luminaire Endcap [pdf] Installation Guide IND190, IS Series LED Luminaire Endcap, LED Luminaire Endcap, Luminaire Endcap, Endcap
---	---

References

- [C LED Commercial Lighting and Lighting Controls | Current - GLI Brands](#)

Manuals+.