

cybex CY 171 Lemo Bouncer Instruction Manual

Home » CYBEX » cybex CY 171 Lemo Bouncer Instruction Manual



cybex CY 171 Lemo Bouncer Instruction Manual

THANK YOU!

We are delighted that you have chosen a CYBEX infant bouncer. You have purchased a useful, versatile, high quality product. CYBEX wishes you and your child all the best, and many magical moments with your new product.

IMPORTANT! KEEP FOR FUTURE REFERENCE

Read all instructions before assembling and/or using the CYBEX bouncer. The safety of your child is your responsibility

The product is designed for two types of use:

1. Use as infant bouncer seat for babies from birth to 9 kg/20 lbs (approx. 6 months). It complies with the European standard EN 12790:2009.

2. Use as children's chair for children who are able to sit and walk unassisted up to 15 kg/33 lbs (approx. 3 years).

WARNING

- · Never leave the child unattended.
- It is dangerous to use this reclined cradle on an elevated surface, e.g. a table.
- This reclined cradle is not intended for prolonged periods of sleeping

Use as infant bouncer seat:

- Do not use the reclined cradle once your child can sit unaided.
- Always use the restraint system.

Use as children's chair:

- Do not use the product unless your child is able to walk unaided.
- ONLY use the product in upright position

Contents

- 1 USING THE PRODUCT
- **2 MAINTENANCE AND**
- **CLEANING**
- **3 WARRANTY**
- **4 CONTACT**
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**

USING THE PRODUCT

- Use as children's chair: Please remove the harnesssystem. Make sure to adjust the product in the upright position.
- Make sure the components are properly fastened before you put your child into the bouncer.
- Use this bouncer only on flat, even and horizontal surfaces. Never elevate the product on any structure or table.
- This bouncer does not replace a cot or a bed. Should your child need to sleep, it should be placed in a suitable cot or bed.
- Do not use the bouncer if any components are broken, torn or missing.
- Only use CYBEX accessories and replacement parts. It may be unsafe to use substitutes.
- Do not use the bouncer if it is not working correctly. Seek repair in this case.

MAINTENANCE AND CLEANING

The user is responsible for the regular maintenance of the CYBEX bouncer.

- Regularly inspect and maintain this product.
- All connecting parts must be tight and secured properly.
- Re-tighten the screws regularly.
- Do not make any modifications to the product.
- Never store in a damp environment.
- If you have any complaints or problems, please contact your supplier or importer.
- Clean the CYBEX bouncer with a damp cloth and a mild detergent and dry thoroughly.
- Do not use abrasives to clean the product!
- Please check the on-product care label for detailed washing instructions.
- Remove water or other liquids immediately with a dry cloth.
- Do not expose to direct sunlight for drying.

WARRANTY

The following warranty applies solely in the country where this product was initially sold by a retailer to a customer.

- 1. The warranty covers all manufacturing and material defects, existing and appearing, at the date of purchase or appearing within a term of two (2) years from the date of purchase from the retailer who initially sold the product to a consumer (manufacturer's warranty). Please check the product with respect to completeness and manufacturing or material defects immediately at the date of purchase or immediately after receipt. Please always keep your dated proof of purchase.
- 2. In case of a defect, stop using the product immediately.
 - To obtain the warranty please take or ship the product to the original retailer, who initially sold this product to you in a clean and complete condition and submit an original proof of purchase (sales receipt or invoice). Please do not take or ship the product to the manufacturer directly.
- 3. This warranty does not cover any damages which result from misuse, environmental influence (water, fire, accidents etc.), normal wear and tear or failure to comply with the instructions provided in this user manual. The warranty does not apply if modifications and services were performed by unauthorized persons or if nonoriginal components and accessories were used.
- 4. This warranty does not affect any statutory consumer rights, including claims in tort and claims with respect toa breach of contract, which the buyer may have against the seller or the manufacturer of the product. The warranty is not transferable to anyone who obtains possession or ownership other than the original purchaser.

DISPOSAL

In order to protect the environment, remember to properly dispose of your product. When you stop using yourproduct, please make sure you dispose of the product in accordance to your local waste management regulations for correct disposal.

CONTACT

Europe and Asia CYBEX GmbH Riedingerstr. 18 95448 Bayreuth Germany

info@cybex-online.com www.cybex-online.com

Americas

Columbus Trading-Partners USA Inc. 1801 Commerce Dr. Piqua, OH 45356 USA


Customer Service: 1 844 543 2020 support.us@columbustp.com

China

8 www.cybexchina.com 400 828 0000



Documents / Resources

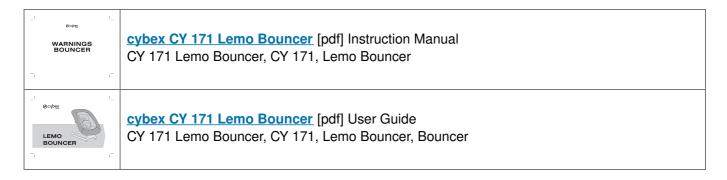

References

- O CYBEX Online Shop | Child Car Seats, Strollers, Baby Carriers and Furniture from CYBEX
- © CYBEX Online Shop | Child Car Seats, Strollers, Baby Carriers and Furniture from CYBEX

Manuals+, home privacy