



CYP EL-42M-PIP Matrix with Picture in Picture & Seamless Switching User Manual

[Home](#) » [CYP](#) » CYP EL-42M-PIP Matrix with Picture in Picture & Seamless Switching User Manual 



EL-42M-PIP
4×2 Matrix with Picture-in-Picture & Seamless Switching
OPERATION MANUAL

Contents

- 1 EL-42M-PIP Matrix with Picture in Picture & Seamless Switching
- 2 SAFETY PRECAUTIONS
- 3 INTRODUCTION
- 4 APPLICATIONS
- 5 PACKAGE CONTENTS
- 6 SYSTEM REQUIREMENTS
- 7 FEATURES
- 8 OPERATION CONTROLS AND FUNCTIONS
- 9 CONNECTION DIAGRAM
- 10 SPECIFICATIONS
- 11 ACRONYMS
- 12 Documents / Resources
 - 12.1 References

EL-42M-PIP Matrix with Picture in Picture & Seamless Switching

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI licensing Administrator, Inc.



DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. CYP (UK) Ltd assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use. CYP (UK) Ltd assumes no responsibility for any inaccuracies that may be contained in this document. CYP (UK) Ltd also makes no commitment to update or to keep current the information contained in this document. CYP (UK) Ltd reserves the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from CYP (UK) Ltd.

© Copyright 2020 by CYP (UK) Ltd.

All Rights Reserved.

Version 1.1

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may

damage parts inside the unit.

- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

VERSION HISTORY

REV.	DATE	SUMMARY OF CHANGE
v1.00	2019/11/22	Preliminary release
v1.01	2020/06/15	Added 3840×2400@60rb output support

INTRODUCTION

This 4 by 2 HDMI Matrix with PiP is a high performance HDMI switch with integrated scaling and multi-windowing technology which can connect up to four 4K UHD + HDMI sources to up to two 4K UHD + HDMI displays and freely switch between them. It is an ideal solution for monitoring or displaying multiple sources simultaneously for use in control rooms, conference rooms or classrooms. Video resolutions up to 4K@60Hz and LPCM audio up to 7.1 channels at 192kHz are supported and this unit is fully compatible with the HDCP 1.x and 2.2 standards. Any of 4 different HDMI sources may be displayed individually, full screen, with seamless switching in Matrix mode, or they can be displayed using a variety of multi-window modes including standard views like PiP (Picture in Picture) and PoP (Picture outside of Picture) as well as fully customizable quad-window modes. Control of input/window routing, position and sizing is easy using the front panel controls with OSD menu as well as by WebGUI, RS-232, and Telnet.

APPLICATIONS

- /// Entertainment Room & Home Theater
- /// Show Room & Demo Room
- /// Lecture Room & Hall Presentation
- /// Public Commercial Display

PACKAGE CONTENTS

- /// 1× UHD + 4×2 HDMI Matrix with PiP
- /// 1× 24V/2.7A DC Power Adapter
- /// 1× Rackmount Ears (Set of 2)
- /// 1× Shockproof Feet (Set of 4)
- /// 1× Operation Manual

SYSTEM REQUIREMENTS


- /// HDMI source equipment such as media players, video game consoles or set-top boxes.
- /// HDMI receiving equipment such as HDTVs, monitors or audio amplifiers.

FEATURES

- /// HDMI 2.0 and DVI 1.0 compliant (with the use of an HDMI-DVI adapter)
- /// HDCP 1.x and 2.2 compliant
- /// 4 HDMI inputs and 2 HDMI outputs
- /// Supports up to 4K UHD + (18Gbps, 4K@50/60Hz 4:4:4, 8-bit) video input and output
- /// Seamless switching (no loss of sync to display) when switching sources in Matrix mode
- /// Supports up to four simultaneous, freely scalable, windows in multiwindowing modes
- /// Supports the ability to store a multi-window arrangement as a preset that can be recalled later
- /// Independent audio source selection and routing in all modes
- /// Inputs 1 & 2 support pass-through of many audio formats including 8 channel LPCM, Bitstream, and HD Bitstream (Inputs 3 & 4 are limited to 2 channel LPCM only)
- /// Each window can have a border with a selectable colour
- /// Uploadable and freely positionable graphic logo support
- /// Intuitive and easy adjustment of window size, position and settings in multi-window modes via the WebGUI
- /// Per-input EDID management with internal or external EDID options
- /// Controllable via front panel buttons, WebGUI, Telnet, and RS-232

OPERATION CONTROLS AND FUNCTIONS


6.1 Front Panel

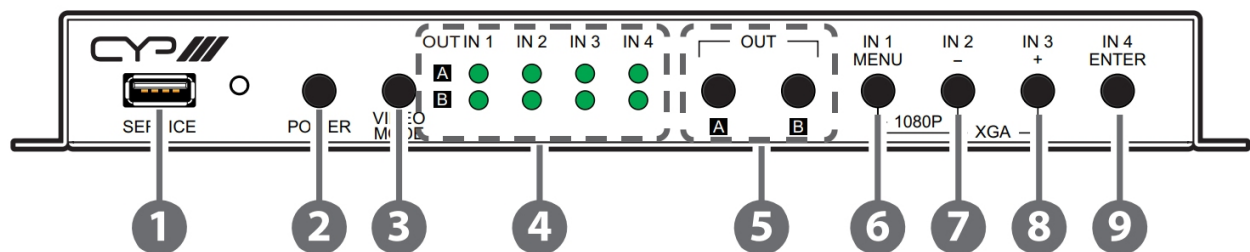

1. SERVICE Port: This port is reserved for firmware update and user EDID/logo upload use only.
2. POWER LED & Button: Press this button to power the unit on (green LED) or place it into stand-by mode (red LED).
Note: Ethernet and RS-232 remain active when the unit is in stand-by mode.
3. VIDEO MODE Button: Press this button to sequentially switch the unit's operational mode between Matrix, PiP, PoP, and Quad.
4. OUT A~B/IN 1~4 LED Array: In Matrix mode, these LED's indicate the currently selected sources (IN 1~4) routed to each of the two outputs (OUT A~B). When the unit is in a multi-windowing mode (PiP/PoP/Quad/Preset) all LEDs will be illuminated simultaneously.
Note: When source selection is active the associated output's LED(s) will blink.
5. OUT A/B Buttons: In Matrix mode, either of these buttons to activate/ deactivate discrete source selection for the associated output. In multi-windowing modes (PiP/PoP/Quad/Preset) either button will activate/deactivate sequential source selection for the 4 windows.
Note: These buttons only activate/deactivate the ability to change sources. Actual source selection is accomplished using the IN 1~4 buttons.
6. IN 1/MENU Button: When not in source selection mode, press to enter the OSD menu, or to back out from menu items. When source selection is active, pressing this button will either select input 1 (Matrix mode) or sequentially switch through all 4 inputs for window 1 (PiP/ PoP/Quad/Preset modes).
Note: Pressing "MENU" and "+" together will reset the output resolution to XGA (1024×768@60Hz). Pressing "MENU" and "-" together will reset the output resolution to 1080p@60Hz.
7. IN 2/- (MINUS) Button: When not in source selection mode, press to move down or adjust selections within

- OSD menus. When source selection is active, pressing this button will either select input 2 (Matrix mode) or sequentially switch through all 4 inputs for window 2 (PiP/ PoP/Quad/Preset modes).
8. IN 3/+ (PLUS) Button: When not in source selection mode, press to move up or adjust selections within OSD menus. When source selection is active, pressing this button will either select input 3 (Matrix mode) or sequentially switch through all 4 inputs for window 3 (PiP/ PoP/Quad/Preset modes).
9. IN 4/ENTER Button: When not in source selection mode, press to confirm a selection within the OSD or to go deeper into a menu item. When source selection is active, pressing this button will either select input 4 (Matrix mode) or sequentially switch through all 4 inputs for window 4 (PiP/PoP/Quad/Preset modes).

6.2 Rear Panel

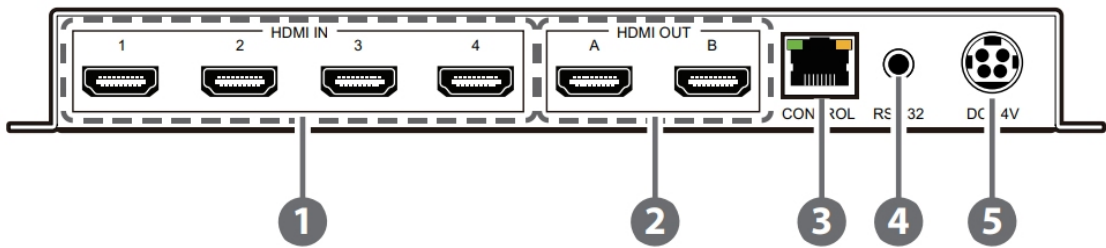


1. HDMI IN 1~4 Ports: Connect to HDMI source equipment such as media players, game consoles, or set-top boxes.
- Note:** Audio support on inputs 3~4 is limited to 2 channel LPCM.
2. HDMI OUT A~B Ports: Connect to HDMI TVs, monitors, or amplifiers for digital video and audio output.
3. CONTROL Port: Connect directly, or through a network switch, to your PC/laptop to control the unit via Telnet/WebGUI.
4. RS-232 Port: Connect directly to a PC, laptop, or other serial control device with a 3.5mm adapter cable to send RS-232 commands to control the unit.
5. DC 24V Port: Plug the 24V DC power adapter into this port and connect it to an AC wall outlet for power.

6.3 RS-232 Pinout and Defaults

Serial Port Default Settings	
Baud Rate	19200
Data Bits	8
Parity Bits	None
Stop Bits	1
Flow Control	None

3.5mm to DE-9 Adapter Cable

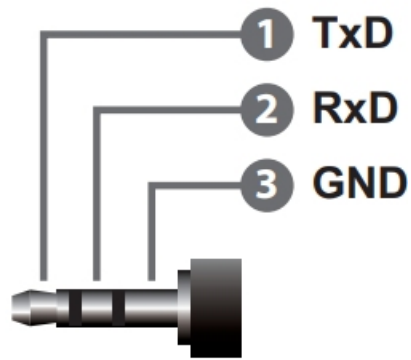

6.4 OSD Menu

All functions of this unit can be controlled by using the OSD (On Screen Display) which is activated by pressing the MENU button on the front of the unit. Use the + (PLUS), – (MINUS), and ENTER buttons to navigate the OSD menu. Press the MENU button to back out from any menu item and then press it again to close the menu.

MAIN MENU

- Video Mode
- Window Layout
- Picture
- Audio
- Input EDID
- HDCP Mode
- Output Resolution
- OSD Settings
- Logo Settings
- Ethernet
- Preset
- Setup
- Information

The individual functions of the OSD will be introduced in the following section. Items marked in **BOLD** are the factory default settings.

VIDEO MODE	
2ND LEVEL	3RD LEVEL
Video Mode	Matrix
	PiP
	PoP
	QUAD
	Preset 1
	Preset 2
	Preset 3
	Preset 4
PiP/PoP/Quad/Preset Mode	
WIN 1 Source	In 1~4 [1]
WIN 2 Source	In 1~4 [2]
WIN 3 Source	In 1~4 [3]
WIN 4 Source	In 1~4 [4]
Matrix Mode	
OUT A Source	In 1~4 [1]
OUT B Source	In 1~4 [2]

1. **Video Mode:** Select the preferred operation mode of the unit.

Note: Selecting some modes will limit available features.

2. **WIN 1/2/3/4 Source:** Select the source for the specified window in multi-windowing modes (PiP, PoP, Quad).

3. **OUT A/B Source:** Select the source for the specified HDMI output when in Matrix mode.

Window Layout (Matrix Mode)	
2ND LEVEL	3RD LEVEL
Input Select	In 1~4 [1]
Aspect Ratio	FULL
	16:9
	16:10
	4:3
	Best Fit
Mirror	NO
	Yes
Border On/Off	On
	OFF
Border Colour	Black
	Red
	GREEN
	Blue
	Yellow
	Magenta
	Cyan
	White
	Dark Red
	Dark Green
	Dark Blue
	Dark Yellow
	Dark Magenta
	Dark Cyan
	Gray
Window Reset	NO
	Yes

1. **Input Select:** Select the input to modify.

Note: All settings are individually saved, per-input.

2. **Aspect Ratio:** Select a fixed aspect ratio for the currently selected window. Selecting the “Full” aspect ratio will stretch the source to fill the output, regardless of original aspect. Selecting “Best Fit” will automatically set the ratio based on the window’s current source resolution.

3. **Mirror:** Selecting “On” will flip the currently selected input horizontally.
4. **Border On/Off:** Enables or disable the colour border around the currently selected input.
5. **Border Colour:** Select the colour to use for the border of the currently selected input.
6. **Window Reset:** Reset the current input to its default settings.

Window Layout (PiP/PoP/Quad/Preset Modes)	
2ND LEVEL	3RD LEVEL
Window Select	Win 1~4 [1]
Window On/Off	ON
	Off
Position X	0~Max H resolution
Position Y	0~Max V resolution
Size Width	1~Max H resolution
Size Height	1~Max V resolution
Priority	1~4 [4]
Aspect Ratio	FULL
	16:9
	16:10
	4:3
	Best Fit
	User
Mirror	NO
	Yes
Border On/Off	On
	OFF

Border Colour	Black
	Red
	GREEN
	Blue
	Yellow
	Magenta
	Cyan
	White
	Dark Red
	Dark Green
	Dark Blue
	Dark Yellow
	Dark Magenta
	Dark Cyan
	Gray
Window Reset	NO
	Yes

1. **Window Select:** Select the window to modify.
Note: All settings are individually saved, per-window/per-mode.
2. **Window On/Off:** Enable or disable the currently selected window.
3. **Position X/Y:** Set the X and Y coordinate position of the upper left corner of the currently selected window.
4. **Size Width/Height:** Set the horizontal and vertical size of the currently selected window.
5. **Priority:** Select the layer priority of the currently selected window. Priority 1 is at the front and priority 4 is at the back.
6. **Aspect Ratio:** Select a fixed aspect ratio for the currently selected window. The aspect ratio will be based on the window's current height. Selecting the "Full" aspect ratio will return the window to the current mode's default size and shape for that window. Selecting "Best Fit" will automatically set the ratio based on the window's current source resolution.
7. **Mirror:** Selecting "On" will flip the currently selected window horizontally.
8. **Border On/Off:** Enables or disable the colour border around the currently selected window.
9. **Border Colour:** Select the colour to use for the border of the currently selected window.
10. **Window Reset:** Reset the current window to its default settings based on the currently selected mode.

Picture	
2ND LEVEL	3RD LEVEL
Input Select	IN 1
	In 2
	In 3
	In 4
Contrast	0~100 [75]
Brightness	0~100 [50]
Saturation	0~100 [50]
Hue	0~100 [50]
Sharpness H	0~10 [10]
Sharpness V	0~10 [10]
Reset	NO
	Yes

1. Input Select: Select the input to modify.
2. Contrast: Set the overall contrast of the currently selected input.
3. Brightness: Set the overall brightness of the currently selected input.
4. Saturation: Set the overall saturation of the currently selected input.
5. Hue: Set the hue shift of the currently selected input.
6. Sharpness H/V: Set the amount of sharpness processing to apply to the currently selected input.
7. Reset: Reset the current input to its default settings.

Audio (Matrix Mode)	
2ND LEVEL	3RD LEVEL
OUT A Source	WINDOW
	In 1
	In 2
	In 3
	In 4
OUT A Mute	On
	OFF
OUT B Source	WINDOW
	In 1
	In 2
	In 3
	In 4
OUT B Mute	On
	OFF

1. OUT A Source: Select the audio source to pair with video output A.
2. OUT A Mute: Enable or disable muting audio output A.
3. OUT B Source: Select the audio source to pair with video output B.
4. OUT B Mute: Enable or disable muting audio output B.

Audio (PiP/PoP/Quad/Preset Modes)	
2ND LEVEL	3RD LEVEL
OUT A Source	WIN 1
	Win 2
	Win 3
	Win 4
	In 1
	In 2
	In 3
	In 4
OUT A Mute	On
	OFF
OUT B Source	WIN 1
	Win 2
	Win 3
	Win 4
	In 1
	In 2
	In 3
	In 4
OUT B Mute	On
	OFF

1. OUT A Source: Select the audio source to pair with video output A.
2. OUT A Mute: Enable or disable muting audio output A.
3. OUT B Source: Select the audio source to pair with video output B.
4. OUT B Mute: Enable or disable muting audio output B.

Input EDID	
2ND LEVEL	3RD LEVEL
EDID Mode	ALL
	Independent
All EDID	1080P60 2CH
	4Kp30 2CH
	4Kp60 2CH
	Sink OUT A
	Sink OUT B
	User 1
	User 2
	User 3
	User 4
IN 1 EDID	Same as [All EDID]
IN 2 EDID	Same as [All EDID]
IN 3 EDID	Same as [All EDID]
IN 4 EDID	Same as [All EDID]
User 1 Update	NO
	Yes
User 2 Update	NO
	Yes
User 3 Update	NO
	Yes
User 4 Update	NO
	Yes

1. EDID Mode: Select how to assign EDIDs to the unit's inputs. Selecting "Independent" allows for a different EDID to be assigned to each input, selecting "All" allows for a single EDID to be assigned to all inputs.
2. All EDID: Select the EDID to assign to all inputs.
Note: Only available in the "All" EDID Mode.
3. In 1~4 EDID: Select the EDID to assign to the specified input.
Note: Only available in the "Independent" EDID Mode.
4. User 1~4 EDID: To update any of the unit's 4 User EDIDs via USB, select "Yes" next to the appropriate User EDID and then insert a USB stick containing the new EDID into the Service port. The upload will occur immediately.
Note: The USB stick must contain, in the root directory, a compatible and properly named (EDID_User_*.BIN)

EDID file.

HDCP Mode	
2ND LEVEL	3RD LEVEL
In 1~4	HDCP Support Off
	Refer to Source
	REFER TO DISPLAY
OUT A	[Current HDCP status display]
OUT B	
Win 1	
Win 2	
Win 3	
Win 4	

1. In 1~4: Select the HDCP behavior for each input.
 - HDCP Support Off: Completely disables support for HDCP on that input.
 - Refer to Source: Makes the input port support the same HDCP version as required by the connected source.
 - Refer to Display: Makes the input support the HDCP version of the currently connected displays.
2. HDCP Status: Displays the current HDCP status of all sources and outputs.

Output Resolution

2ND LEVEL

640×480p59

480p60

576p50

800×600p60

848×480p60

1024×768p60

1280×720p50

1280×720p60

1280×768p60

1280×800p60

1280×960p60

1280×1024p60

1360×768p60

1366×768p60

1400×1050p60

1440×900p60

1600×900p60RB

1600×1200p60

1680×1050p60

1920×1080p24

1920×1080p25

1920×1080p30

1920×1080p50

1920×1080P60

1920×1200RB

2048×1152RB
 3840×2160p24
 3840×2160p25
 3840×2160p30
 4K p24 (DCI)
 4K p25 (DCI)
 4K p30 (DCI)
 4K p50 (DCI)
 4K p59 (DCI)
 4K p60 (DCI)
 3840×2160p50
 3840×2160p59
 3840×2160p60
 3840×2400p60RB
 Native OUT A
 Native OUT B

1. Output Resolution: Select the preferred video output resolution.

Note: Both outputs always share the same resolution selection.

OSD Settings	
2ND LEVEL	3RD LEVEL
Menu Position	TOP LEFT
	Top Right
	Bottom Right
	Bottom Left
Menu Timeout	Off
	5~60 [10]
Info. Timeout	Off
	5~60 [5]
Info. Display	ON
	Off
Transparency	OFF
	1~10
Background	Black
	GRAY
	Blue

1. **Menu Position:** Set the position of the OSD menu on the output.

2. **Menu Timeout:** Set the length of time, in seconds, that the OSD menu will continue to be displayed if there is no user input, or disable the timeout completely.

3. **Info. Timeout:** Set the length of time, in seconds, that the informational OSD will be displayed after a signal or

source change, or disable the timeout completely.

4. **Info. Display:** Enable or disable the informational OSD.
5. **Transparency:** Set the transparency level of the background of the OSD menu.
6. **Background:** Set the colour of the background of the OSD menu.

Logo Settings	
2ND LEVEL	3RD LEVEL
Logo On/Off	On
	OFF
Position X	0~100 [10]
Position Y	0~100 [10]
Load Default Logo	NO
	Yes
Logo Update	NO
	Yes

1. **Logo On/Off:** Enable or disable displaying the logo graphic.
2. **Position X/Y:** Sets the position of the logo's upper left corner, within the output. The position values are a relative percentage of the available output resolution.
3. **Load Default Logo:** Selecting yes will reset the logo and install a default test image.
Note: The reset process can take a few moments. Progress information will be displayed on the OSD while the default logo is being installed. The unit will automatically reboot when it is finished.
4. **Logo Update:** To upload a graphic logo via USB, select "Yes" and then insert a USB stick containing the new logo graphic file (8-bit *.BMP format, 960×540 max resolution) into the Service port. The upload will occur immediately.
Note: The USB stick must contain, in the root directory, a compatible and properly named (Logo_User_*.BMP) graphic file.

Ethernet	
2ND LEVEL	3RD LEVEL
IP Mode	STATIC
	DHCP
Static IP Config	
IP Address	X.X.X.X [192.168.1.50]
Subnet Mask	X.X.X.X [255.255.255.0]
Gateway	X.X.X.X [192.168.1.254]
Link Status	
IP Mode	[Current IP Mode]
IP Address	[Current Network Info]
Subnet Mask	
Gateway	
MAC Addr.	[Unit's MAC Address]

1. **IP Mode:** Set the unit's IP address mode to Static or DHCP.
2. **Static IP Config:** When the unit is in Static IP mode the IP address, netmask and gateway addresses may be manually set here. Changes will occur immediately.
Note: Only editable in Static IP mode.
3. **Link Status:** Displays the unit's current IP configuration and the unit's MAC address.

Preset	
2ND LEVEL	3RD LEVEL
Save	PRESET 1
	Preset 2
	Preset 3
	Preset 4
Recall	PRESET 1
	Preset 2
	Preset 3
	Preset 4

1. **Save Preset 1~4:** Select a preset and then press the "ENTER" button to store the unit's current video window configuration to the currently selected preset.
2. **Recall Preset 1~4:** Select a preset and then press the "ENTER" button to activate the currently selected preset.

Setup	
2ND LEVEL	3RD LEVEL
Auto Sync Off	ALWAYS ON
	5 sec.
	10 sec.
	15 sec.
	30 sec.
	1 min.
	1.5 min.
	2 min.
	2.5 min.
	3 min.
	5 min.
	10 min.

Firmware Update	NO
	Yes
User EDID Reset	NO
	Yes
Factory Reset	NO
	Yes

1. **Auto Sync Off:** Set the amount of time to continue outputting sync with a black screen if there are no live sources and no operations have been executed on the unit. Setting this to “Always On” forces the unit to always output sync.
2. **Firmware Update:** To update the firmware via USB, select “Yes” and then insert a USB stick containing the new firmware into the Service port. The upload will occur immediately.
Note: The USB stick must contain, in the root directory, a compatible and properly named (*.BIN) firmware file.
3. **User EDID Reset:** Select “Yes” to reset the unit’s User EDIDs to their factory default states.
4. **Factory Reset:** Select “Yes” to reset the unit to its factory default state.
After the reset is complete, the unit will reboot automatically.

Information	
2ND LEVEL	3RD LEVEL
IN 1	[Current Input Resolutions]
IN 2	
IN 3	
IN 4	
OUT	[Current Output Resolution]
Video Mode	[Current Mode]
Sink A Native	[Native resolutions as report- ed by EDID]
Sink B Native	
Firmware	[Current Firmware Versions]
RX3/RX4 Firmware	

1. **Information:** Shows the currently detected details for all inputs and both outputs as well as listing the status of a few critical system settings and relevant firmware versions.


6.5 WebGUI Control

Device Discovery

Please obtain the “Device Discovery” software from your authorised dealer and save it in a directory where you can easily find it.

Connect the unit and your PC/Laptop to the same active network and execute the “Device Discovery” software. Click on “Find Devices on Network” and a list of devices connected to the local network will show up indicating their current IP address.

Note: The unit’s default IP address is 192.168.1.50.

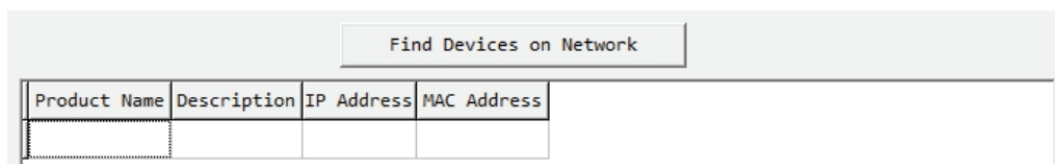

By clicking on one of the listed devices you will be presented with the network details of that particular device.

Product ID	
Product Name	
MAC Address	00:00:00:00:00:00
IP Address	<input type="text"/>
Subnet Mask	<input type="text"/>
Gateway IP	<input type="text"/>
DNS	<input type="text"/>
IP Mode	Static
Web GUI Port	Static
Telnet Port	0
S / N	
Firmware Version	
Hardware Version	
Description	
Web GUI	Web GUI
<input type="button" value="Save"/> <input type="button" value="Reboot"/>	

1. **IP Mode:** If you choose, you can alter the static IP network settings for the device, or switch the unit into DHCP mode to automatically obtain proper network settings from a local DHCP server. To switch to DHCP mode, please select DHCP from the IP mode drop-down, then click “Save” followed by “Reboot”.
2. **WebGUI Hotkey:** Once you are satisfied with the network settings, you may use them to connect via Telnet or WebGUI. The network information window provides a convenient link to launch the WebGUI directly.

WebGUI Overview

After connecting to the WebGUI’s address in a web browser, the login screen will appear. Please enter the appropriate user name and password then click “Submit” to log in.


Note: The default user name and password is “admin”.

Login

Username:

Password:

On the left side of the browser you will see the following menu tabs where all primary functions of the unit are controllable via the built in WebGUI. The individual functions will be introduced in the following sections.

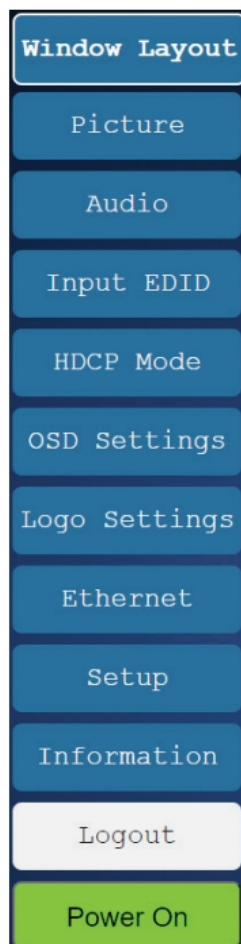

Clicking the red “Logout” tab will automatically log the currently connected user out of the WebGUI and return to login page. Clicking on the “Power” button will toggle the unit’s current power state between on (green) and stand-by (red).

6.5.1 Upper Tab Windows

This upper section of the web interface is visible on every tab and provides control over the unit’s operational mode, source selection, and output resolution as well as containing basic information about the currently connected source and display devices.

Source	Display	Video Mode
Input 1: 1920x1080P60	Resolution: 1920x1080p60	Video Mode: Quad
Input 2: 1920x1080P60	Sink A Native: 3840x2160P60	Win 1: IN 1 Out A: IN 1
Input 3: 1920x1080P60	Sink B Native: Not Linked	Win 2: IN 2 Out B: IN 1
Input 4: 1920x1080P60		Win 3: IN 3
		Win 4: IN 4

1. **Source:** This section displays the currently detected resolution for the sources connected to each input.

2. **Display:**

■ **Resolution:** Use the dropdown to select the preferred output resolution for the unit.

Note: Both outputs will always share the same output resolution, even in Matrix mode.

■ **Sink A/B Native:** Displays the native resolution of both connected displays as reported by their respective EDIDs.

3. **Video Mode:**

■ **Video Mode:** Use the dropdown to select the unit’s operational mode. Available options are: Matrix, PiP, PoP, Quad, and Presets 1~4.

Note: Switching between video modes will cause the output to briefly go to black, but audio output will not be affected if the selected audio source is the same in both modes.

■ **Win 1~4:** Select the video source to use in each window of a multiwindow mode (PiP/PoP/Quad/Preset).

Note: Only available when a multi-window mode is active.

■ **Out A~B:** Select the video source for each output in Matrix mode.

Note: Only available when Matrix mode is active.

6.5.2 Window Layout Tab

This tab provides control over the position, size, aspect, priority, and other settings of each window in multi-viewer modes. A graphical representation of the layout is also provided. When the unit is in Matrix mode, only a limited selection of controls are available.

Note: Only the information from the currently selected window/input is displayed. A window's position and size cannot exceed the current output resolution.



1. **Selection:** In multi-windowing modes, use the dropdown to select the window to modify. In Matrix mode select the input to modify.

Note: Changes made while a “Preset” video mode is selected will automatically be applied and saved to that preset.

2. **Display:** Enable or disable the currently selected window.

Note: Not available in Matrix mode.

3. **Position X/Y:** Set the X and Y coordinate position of the upper left corner of the currently selected window. Click on the “Save” button, after making changes, to make them active.

Note: Not available in Matrix mode.

4. **Size Width/Height:** Set the horizontal and vertical size of the currently selected window. Click on the “Save” button, after making changes, to make them active.

Note: Not available in Matrix mode.

5. **Priority:** Select the layer priority of the currently selected window. Priority 1 is at the front and priority 4 is at the back.

Note: Not available in Matrix mode.

6. **Aspect Ratio:** Use the dropdown to select a fixed aspect ratio for the currently selected window or input. Available options are: Full, 16:9, 16:10, 4:3, Best Fit, and User. In multi-windowing modes the aspect ratio will be based on the window's current height. Selecting the “Full” aspect ratio will return the window to the current mode's default size and shape for that window. Selecting “Best Fit” will automatically set the ratio based on the window's current source resolution.

Note: The “User” aspect ratio is not available in Matrix mode.

7. **Mirror:** Turning this switch on will flip the currently selected window/ input horizontally.
 8. **Border:** This switch enables or disables the colour border around the currently selected window or input.
 9. **Border Colour:** Use the dropdown to select the colour to use for the border of the currently selected window/input. Available colours are: Black, red, green, blue, yellow, magenta, cyan, white, dark red, dark green, dark blue, dark yellow, dark magenta, dark cyan, gray.
 10. **Reset:** Reset the current window/input to its default settings based on the currently selected mode.
 11. **Visual Layout Window:** When in a multi-windowing mode, individual windows may be selected, moved and resized simply by clicking and dragging on them in the layout window. To select a window, click on it and the information will be displayed on the left. Click and drag the center of a window to reposition it. Click and drag the bottom right corner of a window to manually resize it. The results of a change will be displayed on the outputs as soon as the mouse button has been released.
- Note:** Not available in Matrix mode.

6.5.3 Picture Tab

This tab provides controls over each input's contrast, brightness, saturation, hue, and sharpness levels.

Note: All picture settings are per-input and are mode-independent.



1. **Input Select:** Use the dropdown to select the input to modify.
2. **Reset:** Reset the current input to its default settings.
3. **Contrast:** This slider provides control over the overall contrast of the currently selected source video.
4. **Brightness:** This slider provides control over the overall brightness of the currently selected source video.
5. **Saturation:** This slider provides control over the overall saturation of the currently selected source video.
6. **Hue:** This slider provides control over the hue shift of the currently selected source video.
7. **Sharpness H/V:** These sliders provide control over the amount of sharpness processing to apply to the currently selected source video.

Note: Horizontal and vertical processing is independently controlled, providing finer control over the image quality.

6.5.4 Audio Tab

This tab provides control over the audio output behavior of the unit, including routing selection and muting.

Note: Due to Matrix mode only supporting a single “window”, changing modes between a multi-windowing mode and Matrix mode when an audio source is set to windows 2~4 will result in the source reverting to window 1.

Audio

OUT A Source: WIN 1 OUT B Source: WIN 1

OUT A Mute: OFF OUT B Mute: OFF

1. **OUT A Source:** Use the dropdown to choose the audio source to pair with video output A.
 - **IN 1~4:** Always use the audio from the specified input.
 - **WIN 1~4:** Always use audio from the source currently displayed in the specified window.
 - Note:** WIN 2~4 is not available as a source in Matrix mode.
2. **OUT B Source:** Use the dropdown to choose the audio source to pair with video output A.
 - **IN 1~4:** Always use the audio from the specified input.
 - **WIN 1~4:** Always use audio from the source currently displayed in the specified window.
 - Note:** WIN 2~4 is not available as a source in Matrix mode.
3. **OUT A Mute:** Click the switch to toggle between muted and unmuted audio on output A.
4. **OUT B Mute:** Click the switch to toggle between muted and unmuted audio on output A.

6.5.5 Input EDID Tab

This unit provides the option of three standard EDIDs, two sink sourced EDIDs and four user uploaded EDIDs that can be assigned to all inputs at the same time, or to each input independently.

Note: In most cases, assigning a new EDID to an input will cause the affected input to briefly blink out while the source adapts to the new information.

Input EDID

EDID Mode: All

All EDID: FHD 2CH	Save	User 1 Update: Choose File	No file chosen	Update
IN 1 EDID: FHD 2CH	Save	User 2 Update: Choose File	No file chosen	Update
IN 2 EDID: FHD 2CH	Save	User 3 Update: Choose File	No file chosen	Update
IN 3 EDID: FHD 2CH	Save	User 4 Update: Choose File	No file chosen	Update
IN 4 EDID: FHD 2CH	Save			

1. **EDID Mode:** Use the dropdown to select how to assign EDIDs to the unit's inputs. Selecting "Independent" allows for a different EDID to be assigned to each input, selecting "All" allows for a single EDID to be assigned to all inputs.
2. **All EDID:** Select the EDID to assign to all inputs.
 - Note:** Only available in "All" EDID Mode.
3. **IN 1~4 EDID:** Select the EDID to assign to the specified input.
 - Note:** Only available in "Independent" EDID Mode.
4. **User 1~4 Update:** To update any of the unit's 4 User EDIDs, click the "Choose File" button to open the file selection window and then select the EDID file (*.bin format) located on your local PC. After selecting the file, click the "Update" button to begin the EDID upload process.
 - Note:** In some rare cases it is possible for custom or external EDIDs to cause compatibility issues with certain sources. If this happens, it is recommended to switch to one of the 3 default EDIDs for maximum compatibility.

6.5.6 HDCP Mode Tab

This tab provides control over the HDCP settings for all inputs.

The screenshot shows two sections of a configuration interface. The top section, titled 'HDCP Mode', contains four dropdown menus labeled 'Input 1:', 'Input 2:', 'Input 3:', and 'Input 4:'. All four dropdowns are currently set to 'Refer to Source'. The bottom section, titled 'HDCP Status', contains eight buttons labeled 'OUT A:', 'OUT B:', 'Win 1:', 'Win 2:', 'Win 3:', and 'Win 4:'. Each button is currently set to 'Normal'.

1. HDCP Mode Input 1~4: Use the dropdown to select the HDCP behavior for each input.

- **HDCP Support Off:** Completely disables support for HDCP on that input.
- **Refer to Source:** Makes the input port support the same HDCP version as required by the connected source.
- **Refer to Display:** Makes the input support the HDCP version of the currently connected displays.

6.5.7 OSD Settings Tab

This tab provides control over the behavior of the OSD menu and informational display.


The screenshot shows the 'OSD Settings' configuration interface. It contains several settings: 'Menu Position:' is a dropdown set to 'Top Left'; 'Menu Timeout:' is a dropdown set to '10'; 'Info. Timeout:' is a dropdown set to '5'; 'Info. Display:' is a toggle switch currently set to 'ON'; 'Menu Transparency:' is a dropdown set to 'Off'; and 'Menu Background:' is a dropdown set to 'Gray'.

1. **Menu Position:** Use the dropdown to set the position of the OSD menu on the output. Available choices are: Top Left, Top Right, Bottom Right, and Bottom Left.
2. **Menu Timeout:** Set the length of time, in seconds, that the OSD menu will continue to be displayed if there is no user input, or disable the timeout completely.
3. **Info. Timeout:** Set the length of time, in seconds, that the informational OSD will be displayed after a signal or source change, or disable the timeout completely.
4. **Info. Display:** Enable or disable the informational OSD.
5. **Menu Transparency:** Set the transparency level of the background of the OSD menu with a range from Off (opaque) to 10 (mostly transparent).
6. **Menu background:** Set the colour of the background of the OSD menu. Available choices are: Gray, Black,

and Blue.

6.5.8 Logo Settings Tab

This tab provides control over the user uploaded logo graphic. Controls include positioning, an uploading a new logo directly from the WebGUI and an option to reset the logo to a built in default image that can be used for testing.

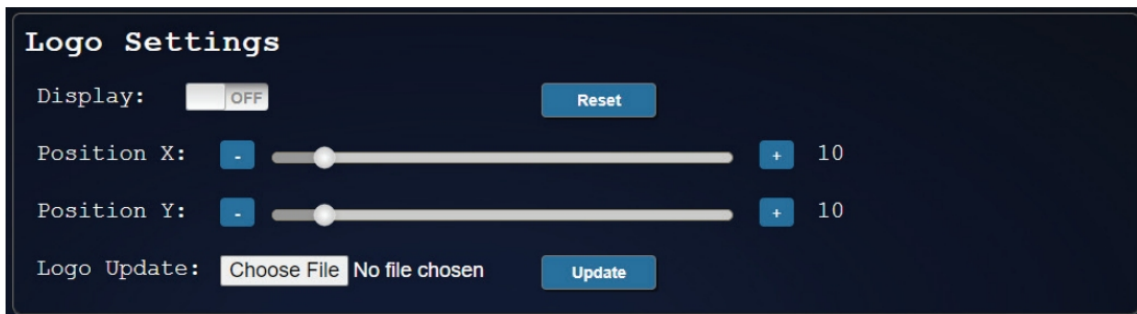

1. **Display:** Enable or disable displaying the logo graphic.

2. **Reset:** Resets the logo and installs a default test image.

Note: The reset process can take a few moments. Progress information will be displayed on the OSD while the default logo is being installed. The unit will automatically reboot when it is finished.

3. **Position X/Y:** Sets the position of the logo's upper left corner, within the output. The position values are a relative percentage of the available output resolution.


4. **Logo Update:** To upload a graphic logo, please click the “Choose File” button to open the file selection window and then select the graphic logo file (8-bit *.bmp format, 960×540 max resolution) located on your local PC. After selecting the file, click the “Update” button to upload the logo to the unit.

Note: The upload process can take a while, depending on the size of the logo. Progress information will be displayed on the OSD while the logo is being installed. The unit will automatically reboot when it is finished.

6.5.9 Ethernet Tab

This tab provides controls to change the network settings for the unit. You can manually set the IP address, netmask and gateway address in “Static IP” mode, or you can obtain an IP address automatically by enabling DHCP.

Note: The unit's default Static IP address is 192.168.1.50. If the IP address is changed then the IP address required for WebGUI/Telnet access will also change accordingly.

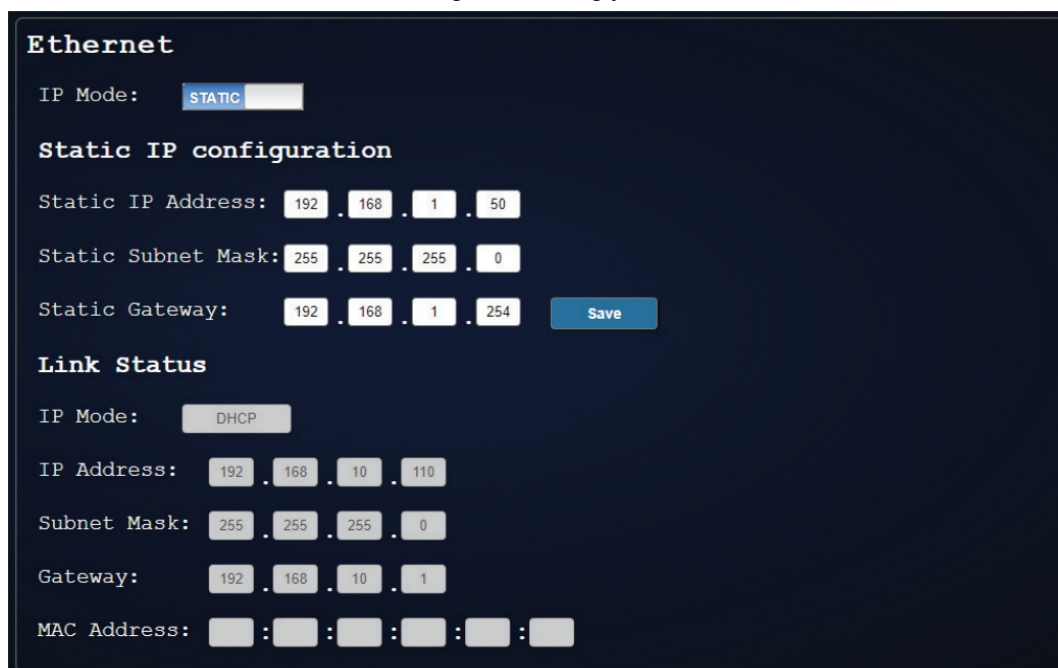

1. **IP Mode:** Click this button to toggle between the Static IP and DHCP modes. In DHCP mode, the unit will attempt to automatically obtain its IP configuration details from a local DHCP server. In Static mode the unit will use the manually assigned IP configuration information.
2. **Static IP Config:** When the unit is in Static IP mode the IP address, netmask and gateway addresses may be manually set here. Click “Save” to apply and use the newly entered address.
3. **Link Status:** Displays the unit’s current IP configuration and the unit’s MAC address.

6.5.10 Setup Tab

Provides a way to update firmware and reset various sections within the unit. Control over the unit’s Auto Sync Off feature, storing/recalling presets as well as configuring the WebGUI login settings is also provided here.

The screenshot shows two sections of the WebGUI interface. The top section, titled "Setup", contains several controls: a "Preset Save:" dropdown menu set to "Preset 1" with a "Save" button; a "Preset Recall:" dropdown menu also set to "Preset 1" with a "Recall" button; an "Auto Sync Off:" dropdown menu set to "Always On"; a file selection area for "F/W:" with a "Choose File" button, the text "No file chosen", and an "Update" button; a "User EDID:" label with a "Reset" button; and a "Factory:" label with a "Reset" button. The bottom section, titled "Web Login Settings", contains: a "Username:" input field with "admin" and a "Save" button; a "Password:" input field with masked characters; a "Confirm Password:" input field with masked characters; and a "Timeout:" input field with "0" and a "Save" button.

1. **Preset Save:** Select a preset from the dropdown list and then click the “Save” button to store the unit’s current video window configuration to the currently selected preset.
2. **Preset Recall:** Select a preset from the dropdown list and then click the “Recall” button to activate the currently selected preset.
Note: this can also be achieved by selecting a Preset from the Video Mode dropdown at the top of the WebGUI.
3. **Auto Sync Off:** Sets the amount of time to continue outputting sync with a black screen if there are no live sources and no operations have been executed on the unit. Setting this to “Always On” forces the unit to always output sync.
4. **Firmware Update:** To update the unit’s firmware, click the “Choose File” button to open the file selection window and then select the firmware update file (*.bin format) located on your local PC. After selecting the file, click the “Upgrade” button to begin the firmware update process. After the upgrade is complete, the unit will reboot automatically.
5. **User EDID Reset:** Press this button to reset the unit’s User EDIDs to their factory default states.
6. **Factory Reset:** Press this button to reset the unit to its factory default state. After the reset is complete, the unit will reboot automatically.
7. **Web Login Settings:** WebGUI login settings can be set here.
■ **Username/Password:** To change the login username and password, enter the new information in the spaces


provided and press “Save”.

Note: The default user name and password is “admin”.

■ **Timeout:** Set the length of time to wait, in minutes, before logging out a user due to inactivity. Setting this to “0” disables the timeout.

6.5.11 Information Tab

This tab displays the unit’s serial number as well as the current firmware versions.

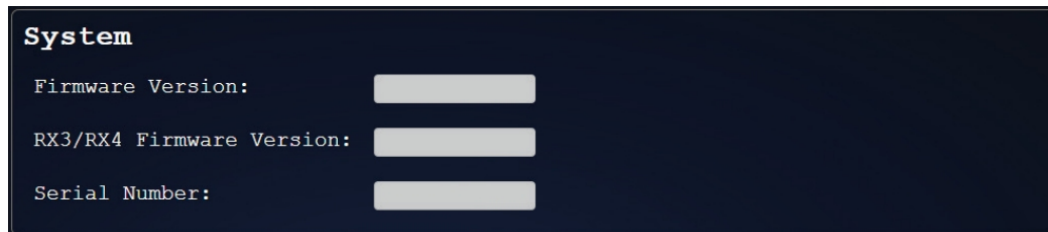


6.6 Telnet Control

Before attempting to use Telnet control, please ensure that both the unit and the PC are connected to the same active networks.

To Access the Command Line Interface (CLI)	
Windows 7	Click Start, type “cmd” in the search field, and press Enter.
Windows XP	Click Start > Run, type “cmd”, and press Enter.
Mac OS X	Click Go > Applications > Utilities > Terminal.

Once in the Command Line Interface (CLI) type “telnet” followed by the IP address of the unit (and the port number if it is non-standard) and then hit “Enter”. This will connect us to the unit we wish to control.

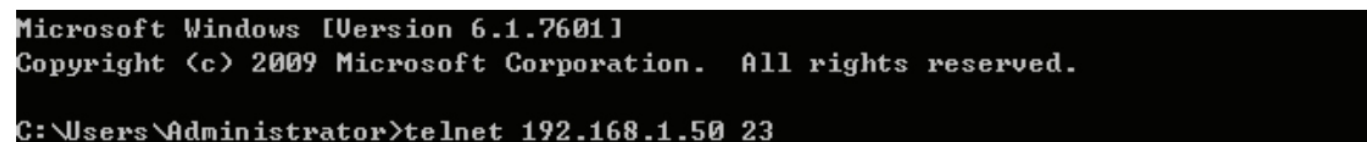

Note 1: If the IP address is changed then the IP address required for Telnet access will also change accordingly.

Note 2: The default IP address is 192.168.1.50.

6.7 Serial and Telnet Commands

COMMAND

Description and Parameters

help↵

Show the full command list.

help N1↵

Show details about the specified command.

N1 = {Command}

?↵

Show the full command list.

? N1↵

Show details about the specified command.

N1 = {Command}

get fw ver↵

Show the unit’s current firmware version.

get command ver↵

Show the unit’s current command version.

get mac addr↵

Show the unit’s MAC address.

get model name ↵

Show the unit's model name.

get model type ↵

Show the unit's product type.

set feedback broadcast N1 ↵

Enable or disable the broadcast of console command feedback.

Available values for N1:

ON	[Enabled]
OFF	[Disabled]

get feedback broadcast ↵

Show the current console command feedback broadcast state.

set ip mode N1 ↵

Set the IP address assignment mode.

Available values for N1:

STATIC	[Static IP mode]
DHCP	[DHCP mode]

get ip mode ↵

Show the current IP address assignment mode.

get ipconfig ↵

Show the unit's current IP configuration information.

get ipaddr ↵

Show the unit's current IP address.

get netmask ↵

Show the unit's current netmask.

get gateway ↵

Show the unit's current gateway address.

set static ipaddr N1 ↵

Set the unit's static IP address.

N1 = X.X.X.X	[X = 0~255, IP address]
--------------	-------------------------

get static ipaddr ↵

Show the unit's static IP address.

set static netmask N1 ↵

Set the unit's static IP address.

N1 = X.X.X.X	[X = 0~255, IP address]
--------------	-------------------------

get static netmask ↵

Show the unit's static netmask.

set static gateway N1 ↵

Set the unit's static IP address.

N1 = X.X.X.X	[X = 0~255, IP address]
--------------	-------------------------

get static gateway ↵

Show the unit's static gateway address.

set webgui username N1 ↵

Set the WebGUI login username.

N1 = {Username}	[16 characters max]
-----------------	---------------------

get webgui username ↵

Show the current WebGUI login username

set webgui password N1 ↵

Set the WebGUI login password.

N1 = {Username}	[16 characters max]
-----------------	---------------------

get webgui password ↵

Show the current WebGUI login password.

set webgui login timeout N1 ↵

Set the WebGUI inactivity timeout value.

N1 = 0~240	[Minutes]
------------	-----------

get webgui login timeout ↵

Show the current WebGUI inactivity timeout value.

set telnet login N1 ↵

Enable or disable allowing Telnet logins.

Available values for N1:

ON	[Enabled]
OFF	[Disabled]

get telnet login ↵

Show the current state of Telnet login allowance.

set telnet username N1 ↵

Set the Telnet login username.

N1 = {Username}	[16 characters max]
-----------------	---------------------

get telnet username ↵

Show the current Telnet login username.

set telnet password N1 ↵

Set the Telnet login password.

N1 = {Username}	[16 characters max]
-----------------	---------------------

get telnet password ↵

Show the unit's Telnet access port.

set window layout mode N1 ↵

Set the window layout mode.

Available values for N1:

0	[Matrix mode]
1	[PiP mode]
2	[PoP mode]
3	[Quad mode]
4	[Preset 1]
5	[Preset 2]
6	[Preset 3]
7	[Preset 4]

get window layout mode ↵

Show the window current layout mode.

set window N1 route N2 ↵

Set the input to route to the specified window.

N1 = 1~4	[Window number]
N2 = 1~4	[Input port]

Note: Valid in multi-windowing modes only.

get window N1 route ↵

Show the input currently routed to the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set out N1 route N2 ↵

Route the specified input to the specified output.

N1 = A~B	[Output port]
N2 = 1~4	[Input port]

Note: Valid in matrix mode only.

get out N1 route ↵

Show the current input routed to the specified output.

N1 = A~B	[Output port]
----------	---------------

Note: Valid in matrix mode only.

set window N1 display N2 ↵

Enable or disable the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Available values for N2:

ON	[Enabled]
OFF	[Disabled]

Note: Valid in multi-windowing modes only.

get window N1 display ↵

Show the visibility status of the specified window,

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set window N1 hposition N2 ↵

Set the horizontal position of the specified window.

N1 = 1~4	[Window number]
N2 = 0~{Max res}	[Horizontal size]

Note: Valid in multi-windowing modes only.

get window N1 hposition ↵

Show the current horizontal position of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set window N1 vposition N2 ↵

Set the vertical position of the specified window.

N1 = 1~4	[Window number]
N2 = 0~{Max res}	[Vertical size]

Note: Valid in multi-windowing modes only.

get window N1 vposition ↵

Show the current vertical position of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set window N1 hsize N2 ↵

Set the horizontal size of the specified window.

N1 = 1~4	[Window number]
N2 = 0~{Max res}	[Vertical size]

Note: Valid in multi-windowing modes only.

get window N1 hsize ↵

Show the current horizontal size of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set window N1 vsize N2 ↵

Set the vertical size of the specified window.

N1 = 1~4	[Window number]
N2 = 0~{Max res}	[Vertical size]

Note: Valid in multi-windowing modes only.

get window N1 vsize ↵

Show the current vertical size of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set window N1 priority N2 ↵

Set the priority of the specified window.

N1 = 1~4	[Window number]
N2 = 1~4	[Vertical size]

Note: Valid in multi-windowing modes only.

get window N1 priority ↵

Show the current priority of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Note: Valid in multi-windowing modes only.

set window N1 aspect N2 ↵

Set the aspect of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Available values for N2:

1	[Full]
2	[16:9]
3	[16:10]
4	[4:3]
5	[Best Fit]
6	[User]

get window N1 aspect ↵

Show the current aspect of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

set window N1 mirror N2 ↵

Set the mirror mode of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Available values for N2:

ON	[Enabled]
OFF	[Disabled]

get window N1 mirror ↵

Show the current mirror mode of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

set window N1 border N2 ↵

Set the border mode of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Available values for N2:

ON	[Enabled]
OFF	[Disabled]

get window N1 border ↵

Show the current border mode of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

set window N1 border color N2 ↵

Set the border colour of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

Available values for N2:

1	[Black]
2	[Red]
3	[Green]
4	[Blue]
5	[Yellow]
6	[Magenta]
7	[Cyan]
8	[White]
9	[Dark Red]
10	[Dark Green]
11	[Dark Blue]
12	[Dark Yellow]
13	[Dark Magenta]
14	[Dark Cyan]
15	[Gray]

get window N1 border color↵

Show the current border colour of the specified window.

N1 = 1~4	[Window number]
----------	-----------------

set window N1 reset ↵

Reset the settings of the specified window

N1 = 1~4	[Window number]
----------	-----------------

set in N1 contrast N2 ↵

Set the contrast level of the specified input.

N1 = 1~4	[Input port]
N2 = 0~100	[Contrast level]

get in N1 contrast←↵

Show the current contrast level of the specified input.

N1 = 1~4	[Input port]
----------	--------------

set in N1 brightness N2←↵

Set the brightness level of the specified input.

N1 = 1~4	[Input port]
N2 = 0~100	[Brightness level]

get in N1 brightness ←↵

Show the current brightness level of the specified input.

N1 = 1~4	[Input port]
----------	--------------

set in N1 saturation N2←↵

Set the saturation level of the specified input.

N1 = 1~4	[Input port]
N2 = 0~100	[Saturation level]

get in N1 saturation←↵

Show the current saturation level of the specified input.

N1 = 1~4	[Input port]
----------	--------------

set in N1 hue N2←↵

Set the hue value of the specified input.

N1 = 1~4	[Input port]
N2 = 0~100	[Saturation level]

get in N1 hue ←↵

Show the current hue value of the specified input.

N1 = 1~4	[Input port]
----------	--------------

set in N1 sharpness h N2←↵

Set the horizontal sharpness level of the specified input.

N1 = 1~4	[Input port]
N2 = 0~20	[Horizontal sharpness level]

get in N1 sharpness h ↵

Show the current horizontal sharpness level of the specified input.

N1 = 1~4	[Input port]
----------	--------------

set in N1 sharpness v N2 ↵

Set the vertical sharpness level of the specified input.

N1 = 1~4	[Input port]
N2 = 0~20	[Horizontal sharpness level]

get in N1 sharpness v ↵

Show the current vertical sharpness level of the specified input.

N1 = 1~4	[Input port]
----------	--------------

set in N1 picture reset ↵

Set the picture settings reset.

N1 = 1~4	[Input port]
----------	--------------

set audio out N1 mute N2 ↵

Enable or disable muting the specified audio output.

N1 = A~B	[Output port]
----------	---------------

Available values for N2:

ON	[Mute]
OFF	[Unmute]

get audio out N1 mute ↵

Show the current mute state of the specified output.

N1 = A~B	[Output port]
----------	---------------

set audio out N1 route N2 ↵

Route the specified audio source to the specified audio output.

N1 = A~B	[Output port]
----------	---------------

Available values for N2:

1	[Input 1]
2	[Input 2]
3	[Input 3]
4	[Input 4]
5	[Window 1]
6	[Window 2]
7	[Window 3]
8	[Window 4]

get audio out N1 route ↵

Show the current audio source routed to the specified audio output.

N1 = A~B	[Output port]
----------	---------------

set all in edid mode N1 ↵

Select the EDID management mode to use (All or Independent) for all inputs.

Available values for N1:

1	[All mode]
2	[Independent mode]

get all in edid mode ↵

Show the current EDID management mode used by all inputs.

set all in edid N1 ↵

Set the EDID to use when the “All” EDID mode is active.

Available values for N1:

1	[1080p60 2-Channel]
2	[4Kp30 2-Channel]
3	[4Kp60 2-Channel]
7	[User 1]
8	[User 2]
9	[User 3]
10	[User 4]
15	[Sink A]
16	[Sink B]

get all in edid ↵

Show the current EDID used by the “All” EDID mode.

set in N1 edid N2 ↵

Set the EDID to use on the specified input.

N1 = 1~4	[Input port]
----------	--------------

Available values for N2:

1	[1080p60 2-Channel]
2	[4Kp30 2-Channel]
3	[4Kp60 2-Channel]
7	[User 1]
8	[User 2]
9	[User 3]
10	[User 4]
15	[Sink A]
16	[Sink B]

get in N1 edid ↵

Show the EDID currently being used on the specified input.

N1 = 1~4	[Input port]
----------	--------------

set user edid N1 update ↵

Upload a new EDID for use as the specified User EDID.

N1 = 1~4	[User EDID number]
----------	--------------------

set in N1 hdcp mode N2 ↵

Set the HDCP behavior of the specified input.

N1 = 1~4	[Input port]
----------	--------------

Available values for N2:

0	[HDCP off]
1	[Refer to Source]
2	[Refer to Display]

get in N1 hdcp mode ↵

Show the current HDCP behavior used by the specified input.

N1 = 1~4	[Input port]
----------	--------------

set out A timing N1 ↵

Set the output resolution to use for both outputs.

Available values for N1:

0	[640x480p59]
1	[480p60]
2	[576p50]
3	[800x600p60]
4	[848x480p60]
5	[1024x768p60]
6	[1280x720p50]
7	[1280x720p60]
8	[1280x768p60]
9	[1280x800P60]
10	[1280x960p60]
11	[1280x1024p60]
12	[1360x768P60]
13	[1366x768p60]
14	[1400x1050p60]
15	[1440x900p60]
16	[1600x900p60rb]
17	[1600x1200p60]

18	[1680x1050p60]
19	[1920x1080p24]
20	[1920x1080p25]
21	[1920x1080p30]
22	[1920x1080p50]
23	[1920x1080p60]
24	[1920x1200rb]
25	[2048x1152rb]
26	[3840x2160p24]
27	[3840x2160p25]
28	[3840x2160p30]
29	[4K p24 DCI]
30	[4K p25 DCI]
31	[4K p30 DCI]
32	[4K p50 DCI]
33	[4K p59 DCI]
34	[4K p60 DCI]
35	[3840x2160p50]
36	[3840x2160p59]
37	[3840x2160p60]
38	[3840x2400p60rb]
39	[Native OUT A]
40	[Native OUT B]

get out A timing ↩

Show the current resolution used by both outputs.

set out A osd position N1 ↩

Set the OSD menu location.

Available values for N1:

0	[Top Left]
1	[Top Right]
2	[Bottom Right]
3	[Bottom Left]

get out A osd position ↩

Show the current OSD menu location.

set out A osd timeout N1 ↵

Set the OSD menu's timeout value (in seconds).

Available values for N1:

OFF	[Disabled]
5~60	[Timeout in seconds]

get out A osd timeout ↵

Show the current OSD menu's timeout value.

set out A osd info display N1 ↵

Enable or disable the info OSD.

Available values for N1:

ON	[Enabled]
OFF	[Disabled]

get out A osd info display ↵

Show the current info OSD state.

set out A osd info timeout N1 ↵

Set the OSD info's timeout value (in seconds).

Available values for N1:

OFF	[Disabled]
5~60	[Timeout in seconds]

get out A osd info timeout ↵

Show the current OSD info's timeout value.

set out A osd transparency N1 ↵

Set the transparency level of the OSD.

N1 = 0~10	[Transparency level]
-----------	----------------------

set out A osd background color N1 ↵

Set the colour of the background of the OSD banner.

Available values for N1:

0	[Black]
1	[Gray]
2	[Blue]

get out A osd background color ↵

Show the current colour of the background of the OSD banner on the specified output.

set out A osd logo display N1 ↵

Enable or disable the graphical logo overlay.

Available values for N1:

ON	[Enabled]
OFF	[Disabled]

get out A osd logo display ↵

Show the current state of the graphical logo overlay.

set out A osd logo hposition N1 ↵

Set the horizontal position of the graphical logo overlay.

N1 = 0~100	[Horizontal position]
------------	-----------------------

get out A osd logo hposition ↵

Show the current horizontal position of the graphical logo overlay.

set out A osd logo vposition N1 ↵

Set the vertical position of the graphical logo overlay.

N1 = 0~100	[Vertical position]
------------	---------------------

get out A osd logo vposition↵

Show the current vertical position of the graphical logo overlay.

set osd logo default↵

Resets the logo and installs a default test image.

set osd logo update↵

Initiates the logo update process via USB.

set save preset N1 ↵

Saves the current unit's settings to the specified preset.

N1 = 1~4	[Preset number]
----------	-----------------

set auto sync off N1 ↵

Enable or disable the Auto Sync Off function and set the timeout length.

Available values for N1:

0	[Always on]
1	[5 seconds]
2	[10 seconds]
3	[15 seconds]
4	[30 seconds]
5	[1 minutes]
6	[1.5 minutes]
7	[2 minutes]
8	[2.5 minutes]
9	[3 minutes]
10	[5 minutes]
11	[10 minutes]

get auto sync off ↵

Show the current Auto Sync Off settings.

set firmware update ↵

Initiates the firmware update process via USB.

set factory user edid default ↵

Restore the unit's User EDIDs to their factory default settings.

set factory ipconfig default ↵

Reset the unit's network settings to the factory defaults.


set factory default ↵

Restore the unit's settings, except for User EDIDs, to the their factory default settings.

Note: Commands will not be executed unless followed by a carriage return.

Commands are not case-sensitive. 6.6 WebGUI Control

CONNECTION DIAGRAM

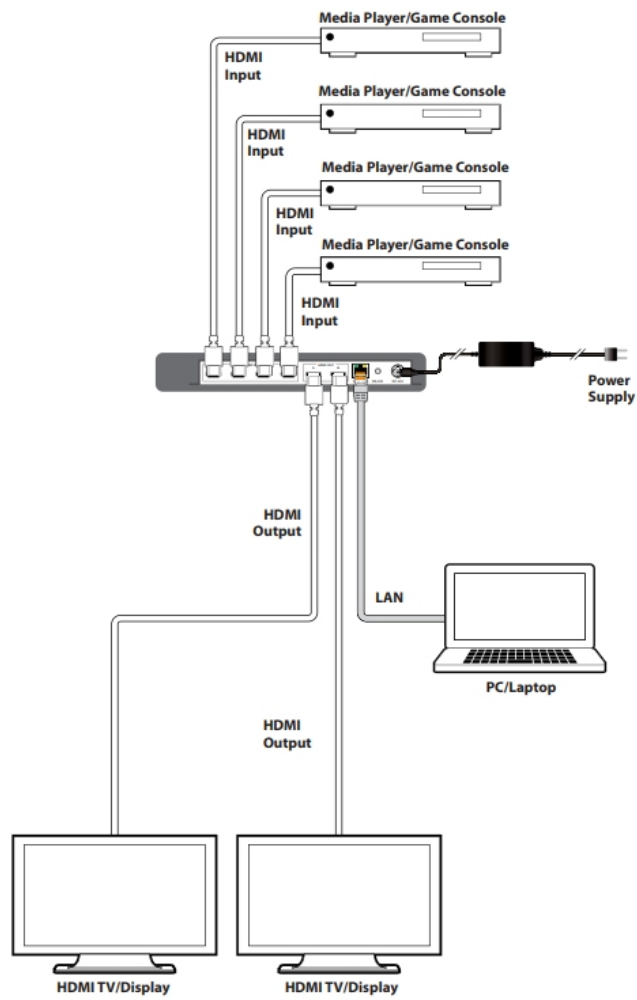

SPECIFICATIONS

8.1 Technical Specifications

HDMI Bandwidth	18Gbps
Input Ports	4×HDMI (Type-A)
Output Ports	2×HDMI (Type-A)
Control Ports	1×RS-232 (3.5mm) 1×IP Control (RJ-45)
Service Port	1×USB 2.0 (Type A)
Baud Rate	19200
Power Supply	24V/2.7A DC (US/EU standards, CE/FCC/UL certified)
ESD Protection (HBM)	±8kV (Air Discharge) ±4kV (Contact Discharge)
Dimensions (W×H×D)	231.5mm×25mm×158mm [Case Only] 231.5mm×25mm×161mm [All Inclusive]
Weight	968g
Chassis Material	Metal (Steel)
Chassis Colour	Black
Operating Temperature	0°C – 40°C/32°F – 104°F
Storage Temperature	-20°C – 60°C/-4°F – 140°F
Relative Humidity	20 – 90% RH (Non-condensing)
Power Consumption	15.3W

8.2 Video Specifications

Supported Resolutions (Hz)	Input	Output
	HDMI	HDMI
720×400p@70/85	?	?
640×480p@60/72/75/85	?	60Hz
720×480i@60	?	?
720×480p@60	?	?
720×576i@50	?	?
720×576p@50	?	?
800×600p@56/60/72/75/85	?	60Hz
848×480p@60	?	?
1024×768p@60/70/75/85	?	60Hz
1152×864p@75	?	?
1280×720p@50/60	?	?
1280×768p@60/75/85	?	60Hz
1280×800p@60/75/85	?	60Hz
1280×960p@60/85	?	60Hz
1280×1024p@60/75/85	?	60Hz
1360×768p@60	?	?
1366×768p@60	?	?
1400×1050p@60	?	?
1440×900p@60/75	?	60Hz
1600×900p@60RB	?	?
1600×1200p@60	?	?
1680×1050p@60	?	?
1920×1080i@50/60	?	?

1920×1080p@24/25/30	?	?
1920×1080p@50/60	?	?
1920×1200p@60RB	?	?
2560×1440p@60RB	?	?
2560×1600p@60RB	?	?
2048×1080p@24/25/30	?	?
2048×1080p@50/60	?	?
3840×2160p@24/25/30	?	?
3840×2160p@50/60 (4:2:0)	?	?
3840×2160p@24, HDR10	?	?
3840×2160p@50/60 (4:2:0), HDR10	?	?
3840×2160p@50/60	?	?
3840×2400@60RB	?	?
4096×2160p@24/25/30	?	?
4096×2160p@50/60 (4:2:0)	?	?
4096×2160p@24, HDR10	?	?
4096×2160p@50/60 (4:2:0), HDR10	?	?
4096×2160p@50/60	?	?

8.3 Audio Specifications

8.3.1 Digital Audio

HDMI Inputs 1~2/ All Outputs	
LPCM	
Max Channels	8 Channels
Sampling Rate (kHz)	32, 44.1, 48, 88.2, 96, 176.4, 192
Bitstream	
Supported Formats	Standard & High-Definition
HDMI Inputs 3~4	
LPCM	
Max Channels	2 Channels
Sampling Rate (kHz)	48
Bitstream	
Supported Formats	None

8.4 Cable Specifications

Cable Length	1080p		4K30	4K60
	8-bit	12-bit	(4:4:4) 8-bit	(4:4:4) 8-bit
High Speed HDMI Cable				
HDMI Input	15m	10m	5m	3m
HDMI Output	15m	10m	5m	3m

Bandwidth Category Examples:

1080p (FHD Video)

- Up to 1080p@60Hz, 12-bit colour
- Data rates lower than 5.3Gbps or below 225MHz TMDS clock

4K30 (4K UHD Video)

- 4K@24/25/30Hz & 4K@50/60Hz (4:2:0), 8-bit colour
- Data rates higher than 5.3Gbps or above 225MHz TMDS clock but below 10.2Gbps

4K60 (4K UHD + Video)

- 4K@50/60Hz (4:4:4, 8-bit)
- 4K@50/60Hz (4:2:0, 10-bit HDR)
- Data rates higher than 10.2Gbps


ACRONYMS

ACRONYM	COMPLETE TERM
ASCII	American Standard Code for Information Interchange
CLI	Command-Line Interface
DHCP	Dynamic Host Configuration Protocol
DVI	Digital Visual Interface
EDID	Extended Display Identification Data
Gbps	Gigabits per second
GUI	Graphical User Interface
HDCP	High-bandwidth Digital Content Protection
HDMI	High-Definition Multimedia Interface
HDTV	High-Definition Television
IP	Internet Protocol
kHz	Kilohertz
LAN	Local Area Network
LED	Light-Emitting Diode
LPCM	Linear Pulse-Code Modulation
MAC	Media Access Control
MHz	Megahertz
OSD	On-Screen Display
PiP	Picture in Picture
PoP	Picture outside of Picture
TCP	Transmission Control Protocol
TMDS	Transition-Minimised Differential Signaling
4K UHD	4K Ultra-High-Definition (10.2Gbps max)
4K UHD+	4K Ultra-High-Definition (18Gbps max)

UHDTV	Ultra-High-Definition Television
USB	Universal Serial Bus
VGA	Video Graphics Array
WUXGA (RB)	Widescreen Ultra Extended Graphics Array (Reduced Blanking)
XGA	Extended Graphics Array



Documents / Resources

 <p>The image shows a black electronic device, likely a set-top box or receiver, with the CYP logo and product name 'EL-42M-PIP' printed on it. The device has a sleek, rectangular design with a front panel featuring buttons and a small display area.</p>	<p>CYP EL-42M-PIP Matrix with Picture in Picture & Seamless Switching [pdf] User Manual EL-42M-PIP Matrix with Picture in Picture Seamless Switching, EL-42M-PIP, Matrix with Picture i n Picture Seamless Switching, Picture in Picture Seamless Switching, Picture Seamless Switchi ng, Seamless Switching, Switching</p>
--	---

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.