



# CYSSJF K-302 Wireless Queue Calling Management System User Manual

[Home](#) » [CYSSJF](#) » CYSSJF K-302 Wireless Queue Calling Management System User Manual 

## CYSSJF

K-302 Work with Remote Simple Manuals

### Contents

- [1 K-302 Wireless Queue Calling Management System](#)
- [2 Brief Instruction](#)
- [3 F1 Storage Mode](#)
- [4 F6 Voice Setting](#)
- [5 F8 Key Settings](#)
- [6 F9 Restore Factory Setting](#)
- [7 FP Set the Starting Number](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

### K-302 Wireless Queue Calling Management System

- This is a simple manuals that teach you how to connect button transmitter to display, and adjust prompt voice what you need. More functions can be read from another manuals.
- This system can work directly after connecting the display's adapter to power.  
Please press "NEXT" button to start the calling, then the display will show 001.  
When restart the displays after turning off, the calling number will start from 002.
- Default voice is "Please number XXX go to counter" or "Number XXX". If you want to change this voice of "counter" to "room" or "office", please go to F8-E2 to set. If need the simple "ding dong" sound, please go to F6-E1-4 to set.

You need to reconnect if it doesn't work, first setting F9-E1 and then set F1-E1.

**Note:** Can adjust the volume directly by UP/DOWN key when the displays in stand-by.

## Brief Instruction

### F1 Storage Mode (Set Transmitters Number)

E1-Register Transmitters

E2-Register Counter Number

### F6 Voice Setting

E1-Voice Mode

E2-The Times of Voice Broadcast

E4 Volume Setting

### F8 Key Settings

E2-Voice Pairing

### F9 Restore Factory Settings

### FP Set the Starting Number

### FU Power-off Memory Function



: Setting key, Confirm key, Move digit key



: Exit system











: Up key, Increase number key



: Down key, Decrease number key

## F1 Storage Mode

### E1 Register Transmitters








1. Press “” key for 2 seconds, the screen show F1, press “” key again to show E1
2. Press “” key to confirm, the screen show 001, “1” is flashing, press “” “” “” key to choose the number you want to save. (first digit can be 0-9, A/b/C/d/E/ F/H/o/P/t/U)
3. Press any key from button transmitter, you will hear a voice (success) and number skip to next one, means the number 001 registered successfully.
4. Press “” key, it will exit to “E1”, press “” key again to exit setting state.

**NOTE:** If you hear a voice (failure), it means the number has been used.

If only buy one transmitter, you just need register 001 and exit setting, number will start from 001 when press NEXT button.

If you buy more two transmitters, you need register 001 and 002, then exit setting. Press any NEXT button, the number will start from 001 and go to next one in order.

### E2 Register Counter Number









1. Press “” key for 2 seconds, the screen show F1, press “” key again to show E1, then press “” key to show E2
2. Press “” key to confirm, the screen show 1, “1” is flashing, press “” “” “” key to choose the number you want to save. (can be 0-9, A/b/C/d/E/ F/H/o/P/t/U)
3. Press any key on the button transmitter, you will hear a voice (success) and number skip to next one, means

the counter number registered successfully.

4. Press “” key, it will exit to “E2”, press “” key again to exit setting state.

## F6 Voice Setting

### E1 Voice Mode

1. Press “” key for 2 seconds, the screen show F1
2. Press “” key to find F6, then press “” key to show E1
3. Press “” key again to confirm, the screen show 0 (or other numbers)
4. Press “” “” key to choose the number from 0-7
  - “0” means English pronunciation (eg. No.105: please number one zero five go to counter)
  - “1” means English pronunciation (eg. No.105: please number one zero five)
  - “2” means English pronunciation  
(eg. No.105: Please number one hundred and five go to counter)
  - “3” means English pronunciation (eg. No.105: Please number one hundred and five)
  - “4” means Ding Dong voice alert
  - “5” means music alert 1
  - “6” means music alert 2
  - “7” means warning sound
5. Press “” key, it will exit to “E1”, press “” key again to exit setting state.

NEXT button + K-302 displays, you can choose 2 or 3 or 4.










For example now the counter is calling “Number 022”

2 : please number twenty two go to counter





3 : number twenty two





4 : show number 022 on the screen come with ding dong sound only

### E2 The Times of Voice Broadcast (Default : 1 times)

1. Press “” key for 2 seconds, the screen show F1
2. Press “” key to find F6
3. Then press “” key to show E1, press “” key to show E2
4. Press “” key to confirm, the screen show 1 (or other numbers)
5. Press “” “” key to choose the number from 1 to 9. (The number means the times of broadcast)
6. Press “” key it will exit to “E2”, press “” key again to exit setting state.









### E4 Volume Setting

1. Press “” key for 2 seconds, the screen show F1
2. Press “” key to find F6
3. Then press “” key to show E1, press “” key till show E4

4. Press “” “” key to choose the number from 00 to 09 (00 means MUTE)
5. Press “” key it will exit to “E2”, press “” key again to exit setting state.

## F8 Key Settings

### E2 Voice Pairing

1. Press “” key for 2 seconds, the screen show F1
2. Press “” key to find F8, press “” key and the screen show E1
3. Press “” key to E2, then press “” key to confirm, you will see 00 (“cancel” sound)
4. Press “” “” key to choose the number (voice) you need.  
For example, the sound you need is “room”, you need to choose 20, and press NEXT button.  
Then you will hear “successful”.
5. Press “” key again to exit setting state.





When you press “NEXT” key on the transmitter, you will hear voice like “please number

XXX go to X room”








(X means room number, it will be broadcast if you have set on F1-E2 function)

12 Kitchen 13 Office 16 Doctor 17 Nurse 20 Room 24 Department 31 Counter





## F9 Restore Factory Setting


1. Press “” key for 2 seconds, the screen show F1
2. Press “” key to find F9, press “” key and the screen show E1
3. Hold down “” key for 2 seconds to confirm, you will hear a voice (success), then it is successful, and display will exit setting state automatically.

## FP Set the Starting Number

1. Press “” key for 2 seconds, the screen show F1
2. Press “” key to choose FP, hold down “” key and the screen show 000  
(3-digit number, first number can be alphabet A/b/C/d/E/ F/H/o/P/t/U )
3. You can choose the number you need by “” “” or “” key, such as A05
4. Press “” key again to exit setting state, then press the transmitter, the first number will be shown from A05 as a beginning.

## FU Power-offMemory Function

1. Press “” key for 2 seconds, the screen show F1
2. Press “” “” key to choose FU, hold down “” key and the screen show 0 or 1

3. Choose the number you need, and press “” key to confirm this choice.

4. Press “” key again to exit setting state.

“0” means the calling will be start from the first number which you set on FP.

e.g.: 001 is first number you choose as a beginning, when you restart the displays after turning off and press the transmitter to call, the number will start from 001. No matter which number was called last time, the calling will start from 001 when the power turned on again.

“1” means the calling will be start from “last number +1” after re-connect the power.

For example: 056 is last number what the counter worker call yesterday, the calling will start from 057 when counter worker calling today.

Please contact us if you have any setup problems.

Email: [suojiang2021@outlook.com](mailto:suojiang2021@outlook.com)


Mobile/Whatsapp: +8613305952933

We chat: 13305952933

Skype: koqichina

---

## Documents / Resources

	<a href="#">CYSSJF K-302 Wireless Queue Calling Management System</a> [pdf] User Manual K-302 Wireless Queue Calling Management System, K-302, Wireless Queue Calling Management System, Queue Calling Management System, Calling Management System, Management System, System
---	---

## References

- [User Manual](#)