



# CYSSJF K-999 Wireless Queue Calling System Restaurant Pager User Manual

[Home](#) » [CYSSJF](#) » CYSSJF K-999 Wireless Queue Calling System Restaurant Pager User Manual 

## Contents

- [1 CYSSJF K-999 Wireless Queue Calling System Restaurant Pager](#)
- [2 Product Information](#)
- [3 Description](#)
- [4 Brief Instruction of K-Q13 Displays](#)
- [5 Brief Introduction of K-999 Keypad](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

**CYSSJF**

**CYSSJF K-999 Wireless Queue Calling System Restaurant Pager**



## Product Information

### Specifications

- **Model:** K-999+K-Q13
- **Function:** Voice Setting

### Description

The K-999+K-Q13 is a keypad and display system that allows users to connect the keypad to the display and adjust the E1 Voice Modeprompt voice. It offers various functions that can be explored in another manual.

This is a simple manual to teach you how to connect the keypad to display and adjust the prompt voice you need. More functions can be known from another manual.

When you get this system, just plug in and then press any number + ENT key on the keypad, the displays will show this number with prompt voice. Common Voice Mode:

- Press 5+ENT on the keypad, the displays will broadcast like this:  
Please number five go to counter (F6-E1-2)
- Press 5+F2 or F3 or F4, and the displays will broadcast like this:  
Number Five (F6-E1-3)
- Press 5+ENT or F2 or F3 or F4, the displays will prompt by dingdong sound (F6-E1-4)
- Press 5+F1, number 005 will be canceled from the display.

Change the service type from “counter” to “room” or “office”, just go to F8-E2 to set

**Note:** Can adjust the volume directly by the UP/DOWN key when the displays in standby

### Brief Instruction of K-Q13 Displays

- **F6 Voice Setting**
  - EI Voice Mode

- E4 Volume Setting
- **F7 Keyboard Setting**
  - E1 Partition Setting
- **F8 Key Settings**
  - E2 Voice Pairing
- **F9 Restore Factory Settings**



Setting key / Confirm key / Move digit key



Exit system










Up key / Increase number key









Down key / Decrease number key

## F6 Voice Setting

### E1 Voice Mode

1. Press "  " key for 2 seconds, and the screen show F1
2. Press "  " key to find F6, then press the "  " key to show E1
3. Press "  " key again to confirm, and the screen shows 0 (or other numbers)
4. Press the "  " key to choose the number from 0-7 "3" means English pronunciation—e.g. No.105: One hundred and five, we recommend choosing this one. When you press a number + ENT on the keypad, it will broadcast "Please number XXX". And if this one isn't suitable, you can press a number + F2 or F3 or F4 on the keypad, it will broadcast "number XXX", this voice mode is suitable for any scene. "4" means Ding Dong voice—if you don't want to broadcast in English, you can choose the ding dong sound
5. Press "  " key, and it will exit to "E1", press "  " key again to exit the setting state.





 



## E4 Volume Setting

1. Press "  " key for 2 seconds, the screen show F1
2. Press "  " key to find F6
3. Then press "  " key to show E1, and press "  " key till show E4
4. Press the key to choose the number from 00 to 09 (00 means MUTE)
5. Press "  " key it will exit to "E2", press "  " key again to exit the setting state.

## F7 Keyboard Setting

Simply use the F7 function to connect the keyboard to the displays.







 

## EI Partition Setting

1. Press " " key for 2 seconds, and the screen show F1
2. Press " " key to find F7, then press the " " key to show EI
3. Press " " key again to confirm, and the screen show "OF" or "ON" or "1" "2" "3" "4" "5" "6" "7" "8" "9" "0" "A" "b" "c" "d" "E" "F" "OF" means the screen can't receive all signals from keyboard in all partitions. "ON" means the screen can receive all signals from the keyboard in different partitions. "O" or "1" or "2" ... "9" "A" "b" "C" "d" "E" "F" means the screen ONLY can receive one specific partition's signal.
4. Press " " " key to choose the partition number you need.
5. Press " " key, it will exit to "EI", press " " key again to exit the setting state.





**NOTE:** If the keyboard is in partition 5, the displays also must choose "5" to pair the signal between of transmitters and receivers.

## F8 Key Settings

### E2 Service Type Pairing

1. Press " " key for 2 seconds, the screen show F1
2. Press " " key to find F8, then press " " key to show E1
3. Press " " key to show E2 and press " " key to confirm, show 00 with the "cancel" sound
4. Press " " " key to choose the number (service type) you need. For example, the service type you need is "room", just need to choose 20 and press any number + ENT key on the keypad, then you will hear "success".
5. Press " " key to exit the setting state. When you press a number + ENT on the keypad, you will hear a broadcasting voice like this: "Please number XXX go to room" (F6-E1-2)  
12 Kitchen 13 Office 16 Doctor 17 Nurse 20 Room 24 Department 31 Counter

## F9 Restore Factory Setting

1. Press " " key for 2 seconds, and the screen show F1
2. Press " " key to find F9, then press " " key to show E1
3. Hold down " " key for 2 seconds to confirm, you will hear a voice (success), and then it is successful, and the displays will exit the setting state automatically

## Brief Introduction of K-999 Keypad

Install the antenna before using, can enhance the signal distance.

### **LAST**

Call the previous number, for example, the current calling number is 009, it will call 008 when you press the LAST key.

### **DIGIT**

Can set keypad in 3-digit or 4-digit (hold down to switch)

### **ON/OFF**

Turn ON/OFF the keypad easily.

### **ZONE**

Hold down for 5 seconds to change zone data. Can choose the zone from A and 0-9, for example, if you want all signals to work in zone 8, just need to adjust to "8" on the keypad. Then enter to F7-E1 function on the display receiver, and choose "8" or "ON", "ON" means the displays can receive the signal from all zones. After pairing, press any number on the keypad to call, this number will show on the displays with clear voice prompting

### **F1**

1. **Short press:** Number + F1 = Cancel this number from the displays
2. **Long press:** Have 3 modes—none dot, 2 dots, 3 dots (hold down to switch)

#### **None dot:**

This mode is selected by default when only one keyboard is available.

#### **dots:**

Two or more keypads of the same zone work together. For example, two keypads is in the same zone, when the first keypad calls number 005, just need to press the NEXT key on the second keypad, it will skip to 006, then press ENT to call number 006.

#### **dots:**

Whichever zone is chosen, two or more keyboards can interact together. For example, if there are 4 keypads, you can set those keypads in zone 1/2/3/4 or 1/2/2/3, then press the NEXT/LAST key on each keypad to call, and the number will be called one by one. Note: please choose the "ON" on the displays' F7-E1 function if want to let the keypad in a different zone.

### **NEXT**

This key can call the customer one by one, it has 2 situations:

1. Single counter e.g.: Start Calling from NO.001, it will skip to 002 if press "NEXT", then 003, 004, 005.....
2. Multiple counters e.g.: Counter 1 call the NO. 001, it will skip to 002 if counter 2 presses the "NEXT" key.....

**Note:** This function is applicable in F1-3 dots cases.

Hold down the "F1" key for 5 seconds to check whether to open the "zone function" or not.

When you see the small red dot displayed in the bottom right corner of the last two/three digits, it means OPEN.

Default this function is turned off, so will not show a small red dot.

### **F2-F3-F4-ENT:**

**CALL function:** Number + F2 or F3 or F4 or ENT are all call functions. The default is to simply press the "Number + ENT" to call.


0 KEY

Hold down the “0” key for 3 seconds, can turn on/off the operate sound.

Please contact us if you have any setup problems-

- Email: [suojiang2021@outlook.com](mailto:suojiang2021@outlook.com)
- Mobile/Whatsapp: +8613305952933
- WeChat: 13305952933
- Skype: koqichina

Documents / Resources

	<a href="#">CYSSJF K-999 Wireless Queue Calling System Restaurant Pager</a> [pdf] User Manual K-999, K-Q13, K-999 Wireless Queue Calling System Restaurant Pager, K-999, Wireless Queue Calling System Restaurant Pager, Queue Calling System Restaurant Pager, Calling System Restaurant Pager, System Restaurant Pager, Restaurant Pager, Pager
---	--

References

- [User Manual](#)