



CYSSJF K-C31 Work with Remote Simple User Manual

[Home](#) » [CYSSJF](#) » CYSSJF K-C31 Work with Remote Simple User Manual 

Contents

- [1 CYSSJF K-C31 Work with Remote Simple User Manual](#)
- [2 K-C31 Work with Remote Simple User Manuals](#)
- [3 Brief Instruction](#)
- [4 F1 Storage Mode](#)
- [5 F9 Restore Factory Setting](#)
- [6 FP Set the Starting Number](#)
- [7 FU Power-off Memory Function](#)
- [8 Read More About This Manual & Download PDF:](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

CYSSJF K-C31 Work with Remote Simple User Manual



K-C31 Work with Remote Simple User Manuals

●This is simple manuals that teach you how to connect button transmitter to display, and adjust prompt voice what you need. More functions can be read from another manuals. ●This system can work directly after connecting the display's adapter to power. Please press "NEXT" button to start the calling, then the displays will show 001→1. When restart the displays after turning off, the calling number will start from 002. ●Default voice is "Please number XXX go to X counter". If you want to change this voice of "counter" to "room" or "office", you need go to F8-E2 to set. If need the simple "ding dong" sound, please go to F6-E1-4 to set. You need to reconnect if it doesn't work, first setting F9-E1 and then set F1-E1. Note: Can adjust the volume directly by UP/DOWN key when the displays in stand-by

Brief Instruction

F1 Storage Mode (Set Transmitters Number)

E1-Register Transmitters

E2-Register Counter Number

F6 Voice Setting

E1-Voice Mode

E2-The Times of Voice Broadcast

E4 Volume Setting

F8 Key Settings

E2-Voice Pairing

F9 Restore Factory Settings

FP Set the Starting Number

FU Power-off Memory Function

: Setting key, Confirm key, Move digit key

: Exit system

: Up key, Increase number key

: Down key, Decrease number key

F1 Storage Mode

E1 Register Transmitters

1. Press “ ” key for 2 seconds, the screen show F1. 2. Press “ ” key, the screen show E1. 3. Press “ ” key to confirm, the screen show 001, “1” is flashing, and press “ ” key to choose the number you want to save. (first digit can be 0-9, A/b/C/d/E/ F/H/o/P/t/U) 4. Press any key from remoter control transmitter, you will hear a voice (success) and number skip to next one, means the number 001 registered successfully. 5. Press “ ” key, it will exit to “E1”, press “ ” key again to exit setting state. NOTE: If you hear a voice (failure), it means the number has been used. If only buy one transmitter, you just need register 001 and exit setting, number will start from 001 when press NEXT button. If you buy more two transmitters, you need register 001 and 002, then exit setting. Press any NEXT button, the number will start from 001 and go to next one in order. E2 Register Counter Number

1. Press “ ” key for 2 seconds, the screen show F1. 2. Press “ ” key, the screen show E1, press “ ” key to E2. 3. Press “ ” key to confirm, the screen show 1, “1” is flashing, and press “ ” key to choose the number you want to save. (0-9, A/b/C/d/E/ F/H/o/P/t/U) 4. Press any key on the remote control transmitter, you will hear a voice (success) and number skip to next one, means the counter number registered successfully. 5. Press “ ” key, it will exit to “E2”, press “ ” key again to exit setting state. F6 Voice Setting

E1 Voice Mode

1. Press “ ” key for 2 seconds, the screen show F1
2. Press “ ” key to find F6
3. Then press “ ” key, the screen show E1
4. Press “ ” key again to confirm, the screen show 0 (or other numbers)
5. Press “ ” “ ” key to choose the number from 0-7
“0” means English pronunciation (eg. No.105: please number one zero five go to counter) “1” means English pronunciation (eg. No.105: please number one zero five) “2” means English pronunciation (eg. No.105: Please number one hundred and five go to counter

“3” means English pronunciation (eg. No.105: Please number one hundred and five) “4” means Ding Dong voice alert “5” means music alert 1

“6” means music alert 2

“7” means warning sound

5. Press “ ” key, it will exit to “E1”, then press “ ” key again to exit setting state. NEXT button + K-C31 displays, you can choose 2 or 3 or 4. For example now is “number 22, counter 1” 2 : please number twenty two go to one counter

3 : please number twenty two

4 : show 022→1 on the screen come with ding dong sound

E2 The Times of Voice Broadcast (Default:1 times)

1. Press “ ” key for 2 seconds, the screen show F1
2. Press “ ” key to find F6
Press “ ” key, the screen show E1, press “ ” key to show E2
3. Press “ ” key to confirm, the screen show 1 (or other numbers)
4. Press “ ” “ ” key to choose the number from 1 to 9. (The number means the times of broadcast)
5. Press “ ” key it will exit to “E2”, then press “ ” key again to exit setting state. E4 Volume Setting

1. Press “ ” key for 2 seconds, the screen show F1
2. Press “ ” key to find F6
3. Then press “ ” key to show E1, press “ ” key till show E4
4. Press “ ” “ ” key to choose the number from 00 to 09 (00 means MUTE)
5. Press “ ” key it will exit to “E2”, then press “ ” key again to exit setting state. F8 Key Settings

E2 Voice Pairing

1. Press “ ” key for 2 seconds, the screen show F1
2. Press “ ” key to find F8, press “ ” key and the screen show E1
3. Press “ ” key to E2, then press “ ” key to confirm, you will see 00 (“cancel” sound)
4. Press “ ” “ ” key to choose the number (voice) you need. For example, the sound you need is “room”, you need to choose 20, and press NEXT button. Then you will hear “successful”.

“3” means English pronunciation (eg. No.105: Please number one hundred and five) “4” means Ding Dong voice alert “5” means music alert 1

“6” means music alert 2

“7” means warning sound

5. Press “ ” key, it will exit to “E1”, then press “ ” key again to exit setting state. NEXT button + K-C31 displays, you can choose 2 or 3 or 4. For example now is “number 22, counter 1” 2 : please number twenty two go to one counter

3 : please number twenty two

4 : show 022→1 on the screen come with ding dong sound

E2 The Times of Voice Broadcast (Default:1 times)

1. Press “ ” key for 2 seconds, the screen show F1

2. Press “ ” key to find F6

Press “ ” key, the screen show E1, press “ ” key to show E2

3. Press “ ” key to confirm, the screen show 1 (or other numbers)

4. Press “ ” “ ” key to choose the number from 1 to 9. (The number means the times of broadcast)

5. Press “ ” key it will exit to “E2”, then press “ ” key again to exit setting state. E4 Volume Setting

1. Press “ ” key for 2 seconds, the screen show F1

2. Press “ ” key to find F6

3. Then press “ ” key to show E1, press “ ” key till show E4

4. Press “ ” “ ” key to choose the number from 00 to 09 (00 means MUTE)

5. Press “ ” key it will exit to “E2”, then press “ ” key again to exit setting state. F8 Key Settings

E2 Voice Pairing

1. Press “ ” key for 2 seconds, the screen show F1

2. Press “ ” key to find F8, press “ ” key and the screen show E1

3. Press “ ” key to E2, then press “ ” key to confirm, you will see 00 (“cancel” sound)

4. Press “ ” “ ” key to choose the number (voice) you need. For example, the sound you need is “room”, you need to choose 20, and press NEXT button. Then you will hear “successful”.

5. Press “ ” key again to exit setting state. When you press “NEXT” key on the transmitter, you will hear voice like this “pleasenumberXXX go to X room” 12 Kitchen 13 Office 16 Doctor 17 Nurse 20 Room 24 Department 31Counter

F9 Restore Factory Setting

1. Press “ ” key for 2 seconds, the screen show F1

2. Press “ ” key to find F9, press “ ” key and the screen show E1

3. Hold down “ ” key for 2 seconds to confirm, you will hear a voice (success), then it is successful, and display will exit setting state automatically

FP Set the Starting Number

1. Press “ ” key for 2 seconds, the screen show F1

2. Press “ ” key to choose FP, hold down “ ” key and the screen show 000 (3-digit number, first number can be alphabet A/b/C/d/E/ F/H/o/P/t/U)

3. You can choose the number you need by “ ” “ ” or “ ” key, such as A054. Press “ ” key again to exit setting state, press the transmitter, the first number will be shown from A05 as a beginning.

FU Power-off Memory Function

1. Press “ ” key for 2 seconds, the screen show F1

2. Press “ ” “ ” key to choose FU, hold down “ ” key and the screen show 0 or 13. Choose the number you need, and press “ ” key to confirm this choice. 4. Press “ ” key again to exit setting state. “0” means the calling will be start from the first number which you set on FP. For example: 001 is first number you choose to as a beginning, when you switch on the display and press the button to call, the number will start from 001. No matter which last number was called last time, the calling will start from 001 when the power turned on again. “1” means the calling will be start from “last number +1” after re-connect the power. For example: 056 is last number what the counter worker call yesterday, the calling will start from 057 when counter worker calling today. Please contact us if you have any setup problems. Email: suojiang2021@outlook.com


Mobile/Whatsapp: +8613305952933

We chat: 13305952933

Skype: koqichina

Read More About This Manual & Download PDF:

Documents / Resources

	CYSSJF K-C31 Work with Remote Simple [pdf] User Manual K-C31 Work with Remote Simple, K-C31, Work with Remote Simple, Remote Simple, Simple
---	--

References

- [🐾 baidu.com/link?url=5jktj_W-htaUe-eiKJ5pmf7AnFO6gbW_I3dBEMRnK9PgN99YCurEa8wqvJXvEODrjxBm4m4nUBMAG73fd6_Oyruv4oeCOBfi](#)
- [User Manual](#)