

**D.Gruoiza**  
JC-E Switch  
Joypad Controller



## D Gruoiza JC-E Switch Joypad Controller User Manual

[Home](#) » [D Gruoiza](#) » D Gruoiza JC-E Switch Joypad Controller User Manual 

### Contents

 
- [1 D Gruoiza JC-E Switch Joypad Controller](#)
- [2 Key Function Instruction](#)
- [3 Turbo/AutoFunction](#)
- [4 N-S Controller Mode](#)
- [5 Specification](#)
- [6 Update](#)
- [7 FCC Warning](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

**D.Gruoiza**

D Gruoiza JC-E Switch Joypad Controller



## Key Function Instruction

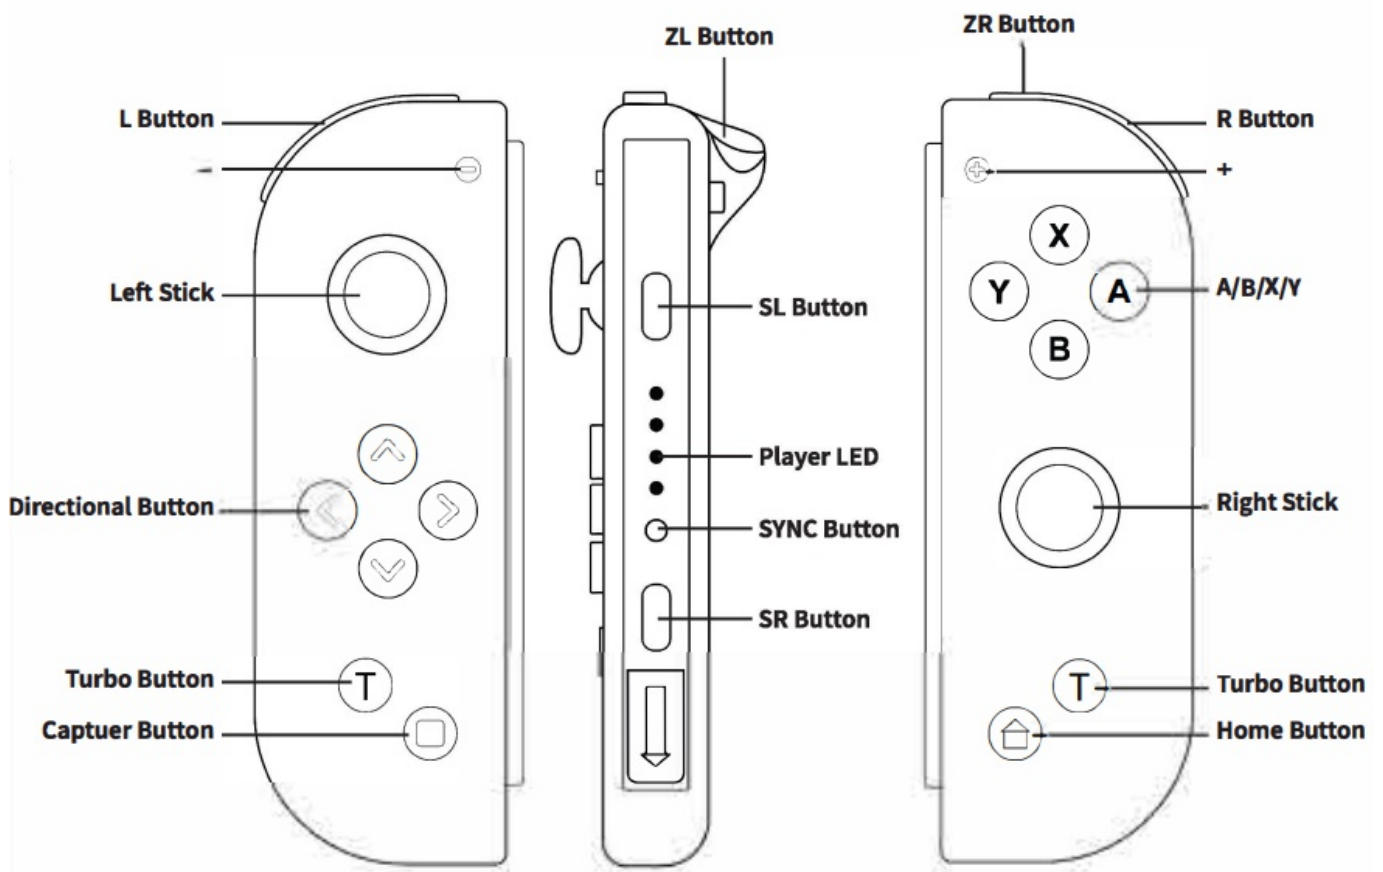

## RGB Lighting Control

### Light modes

- Rainbow Mode – ?-Color Auto Cycling – Light Breath Mode – Long Light Mode

### Adjust RGB mode or color

- Step 1: Double-click the "+" or "-" button to unlock the light mode
- Step 2: Move the joystick up and down to change the light mode
- Step 3: Toggle the joystick left and right to change the light color
- Step 4: Double click "+" or "-" to lock the light

### **Sleeping Mode & Reconnect**

- Sleeping Mode: The joycon will turn into sleeping mode automatically without coercion within 5 minutes.
- Wake up & Reconnect: Press the HOME button shortly, and the joy-con will power on recommended the device, which connected last time.

### **Power Off**

- Press the SYNC button long with 3-5 seconds, and the joy-con will power off with all LED lights off.

### **Turbo/AutoFunction**

Buttons (which are called short function buttons) can be set TURBO/AUTO: A B/X/Y/LJZUR/ZR/D-pad button

### **Enable/Disable the TURBO/AUTO speed function. tion**

- Step 1: Press the Turbo button and one the function button simultaneously, to enable the Turbo semi-AUTO function
- Step 2: Repeat the step1 to enable the AUTO function
- Step 3: Repeat Step1 to disable the AUTO function

### **Clear TURBO /AUTO function**

 
Press the TURBO button for 5 seconds long wait the LED 1.2.3.4 light and turn it to flash together with 1 second's vibration. Then all TURBO functions clear

### **Calibrate Control Sticks**


- If the characters in the games are automatically drifting, please complete the "calibrate motion controls" by following the steps:
- Step 1: System Setting-Controller and Sensors-Calibrate Control Sticks
- Step 2: Enter calibrate control sticks interface and operate it according to the guide on the NS console

### **N-S Controller Mode**

- Method 1: Attaching the controller to the console will connect them automatically.
- Method 2: (Power on your N-S Console, then follow the steps to pair and connect your controller.)
- Step 1: Find Controllers] Option.-Image 1

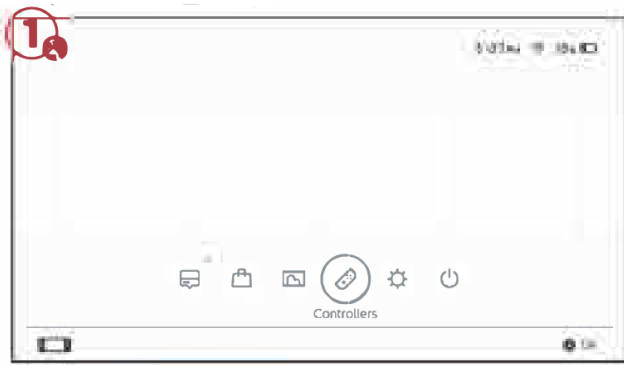

 - Step 2: Click Change Grip/Order -Image2
- Step 3: Press SYNC button to power on the gamepad, 4 LED lights blink in turn, waiting for the connection to complete
- 5-7s later. The controller will connect to the console automatically:

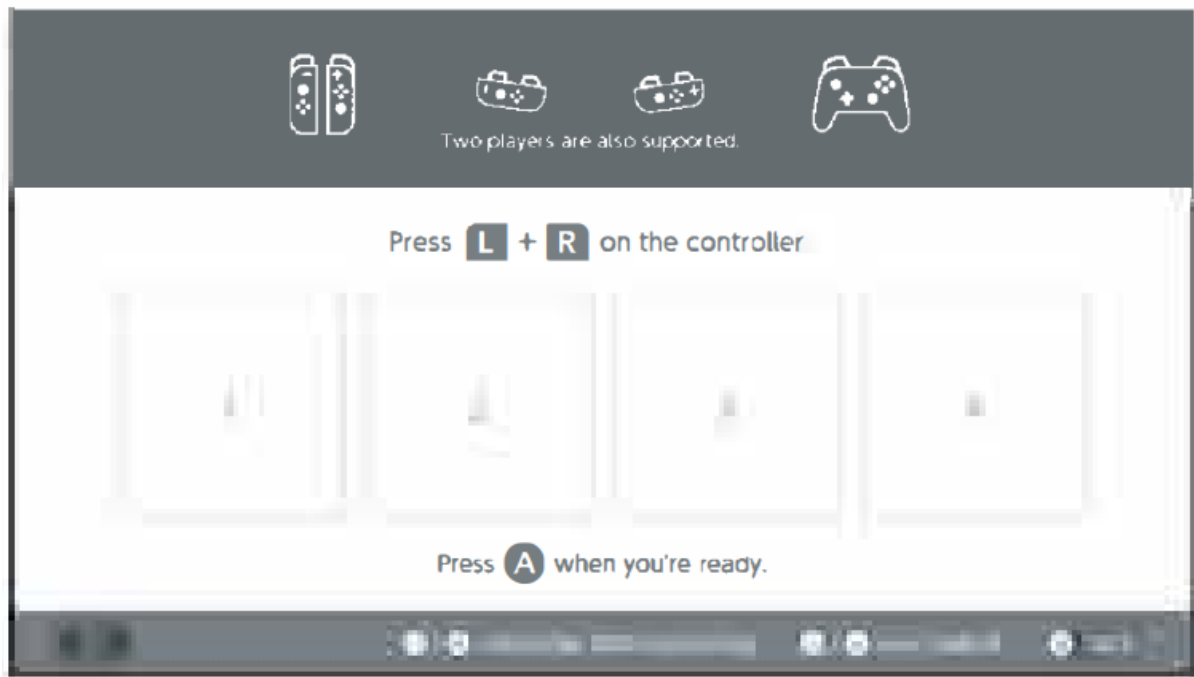

### Reconnect: Press HOME Button

If your controller was once paired and connected to your N-S console, press the HOME button to rapidly connect next time.

**Note:** The gamepad suppresses the HOME button to wake up the console under sleep mode. You just need to press the HOME button to finish reconnecting. When one of the following conditions occurs, please reconnect referring to the first time to pair and connect.

1. Upgrade
2. Reset
3. Change the console.

### Specification

- Product name: Switch Joypad Controller
- Model number: JC-E
- Product size: 125mm/44mm/122mm
- Product weight: 185g

- Power supply: built-in 500mAh polymer battery Gametime:5-10h
- Charging time: 3-4H
- Packing: color box
- Package Contents: gamepad, strap, grip, instruction manual

## Update

 
 
If there is a problem with the connection while the console is updated, we can offer the update method. You can download the “QMacro” app with a QR code, and then install it on your cellphone; and follow the steps to update your controller.




- Download the “QMacro”

## Update Steps

1. The left joystick needs to press and hold the “-” and “screenshot” keys to enter the search mode; the right joystick needs to press the “+” and “HOME” keys to enter the search mode, and the 3/4 LED lights (1) this device may not cause harmful interference, and (2) this device must accept any interference flash quickly.

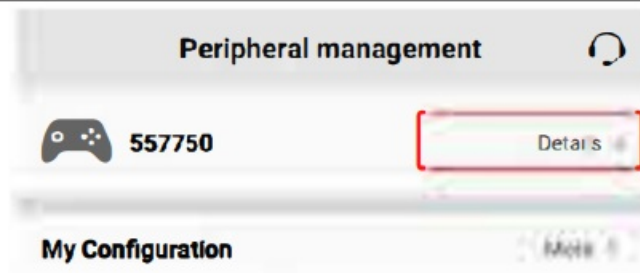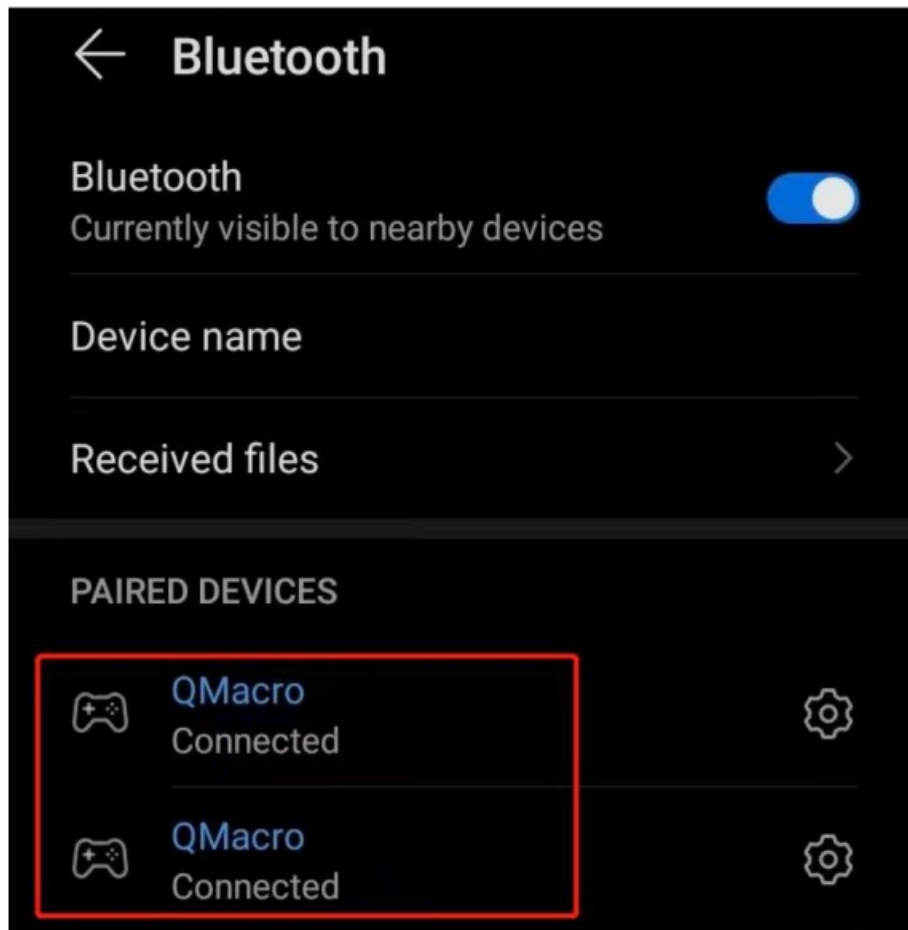

### 3.Click "Details"

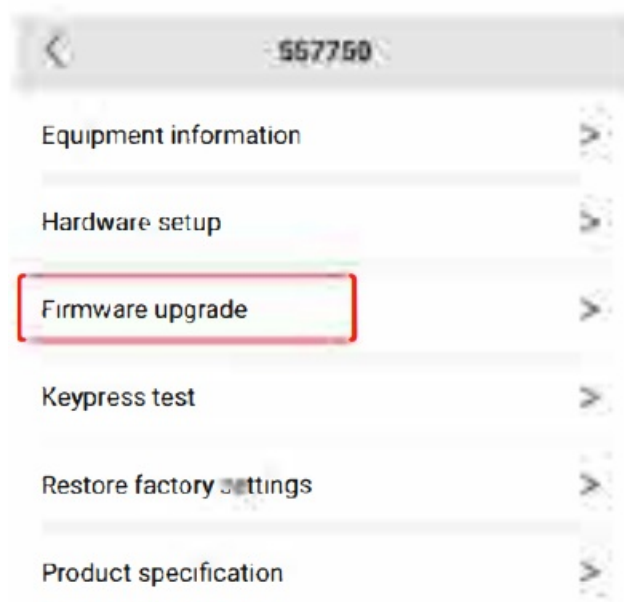 

2. Open the Bluetooth connection to QMacro
3. Click "Firmware Upgrade"

4. After the upgrade, you need to turn off the controller and reconnect the Switch

## FCC Warning

This device complies with Part 15 of the FCC Rules.

### Operation is subject to the following two conditions

1. this device may not cause harmful interference
  2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the use of authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

### RF exposure

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction

## Documents / Resources



[D Gruoiza JC-E Switch Joypad Controller](#) [pdf] User Manual  
JC-E, JC-E Switch Joypad Controller, Switch Joypad Controller, Joypad Controller, Controller

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.