



D-Link Ethernet Switches User Guide

[Home](#) » [D-Link](#) » D-Link Ethernet Switches User Guide 



D-Link Ethernet Switches User Guide





Contents

- 1 WHAT'S IN THE BOX
- 2 DESKTOP MOUNTING
- 3 RACK MOUNTING
- 4 WALL MOUNTING
- 5 SWITCH GROUNDING
- 6 ATTACHING POWER CORD RETAINER
- 7 CONNECTING DEVICES
- 8 ACCESSING THE WEB USER INTERFACE
- 9 Switch Configuration
- 10 ACCESSING THE COMMAND LINE INTERFACE
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

WHAT'S IN THE BOX

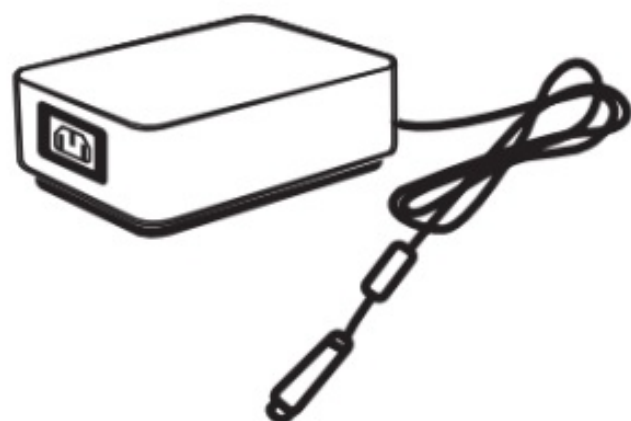
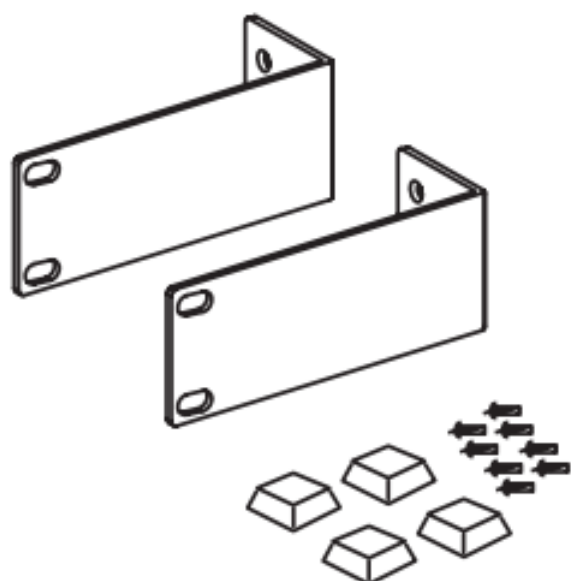


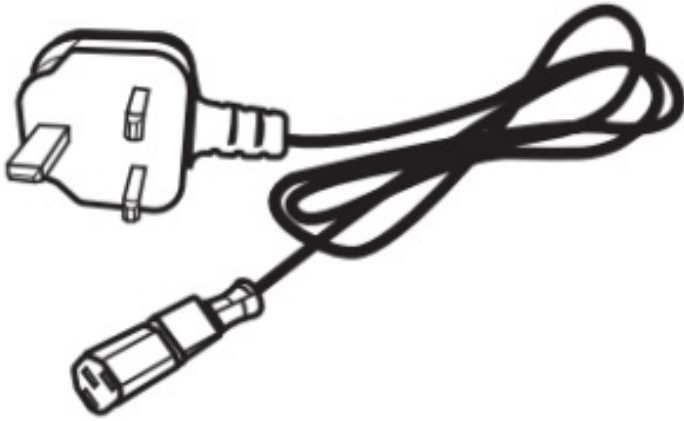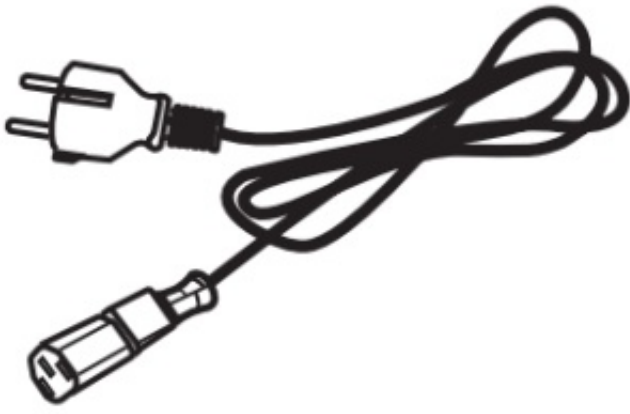



Availability is model and/or region-dependent.

DESKTOP MOUNTING

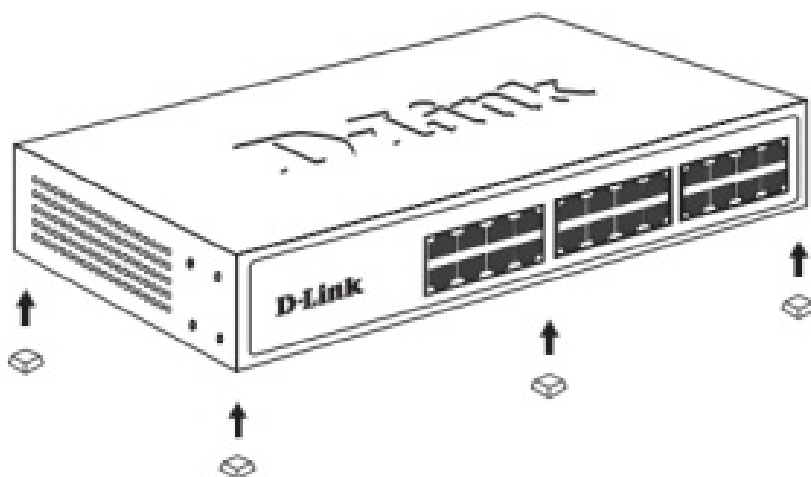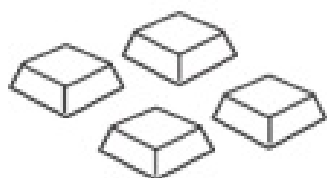


RACK MOUNTING

1




2

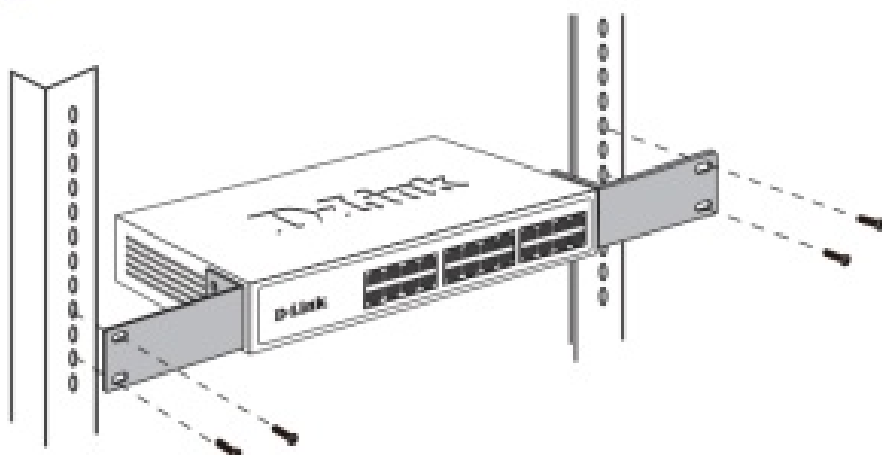


WALL MOUNTING

1

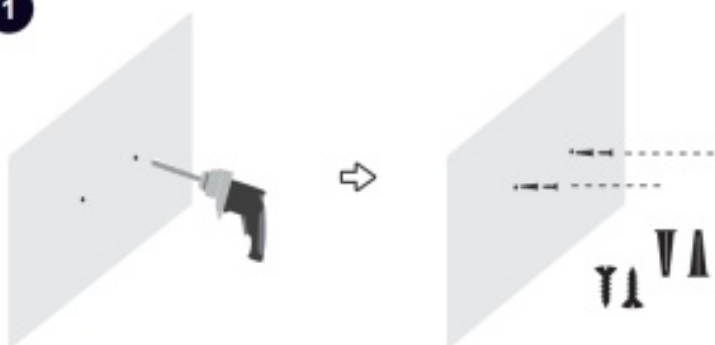


2

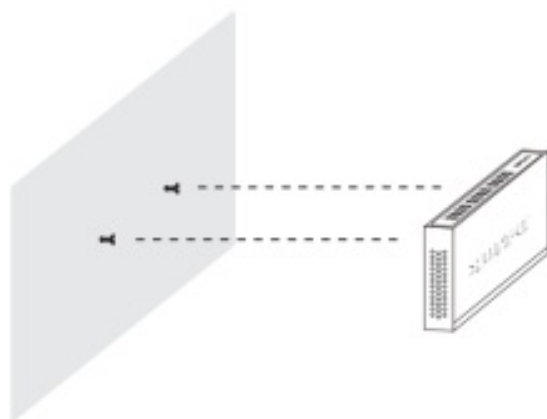


SWITCH GROUNDING

1

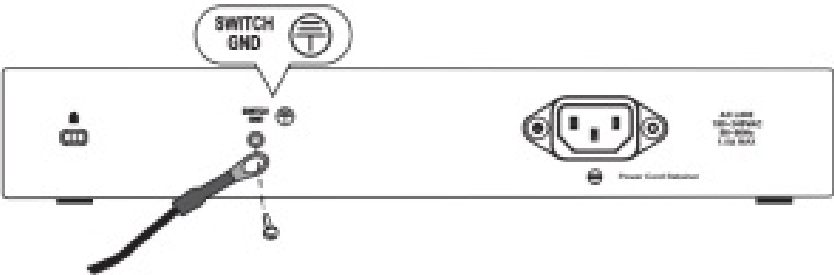


2

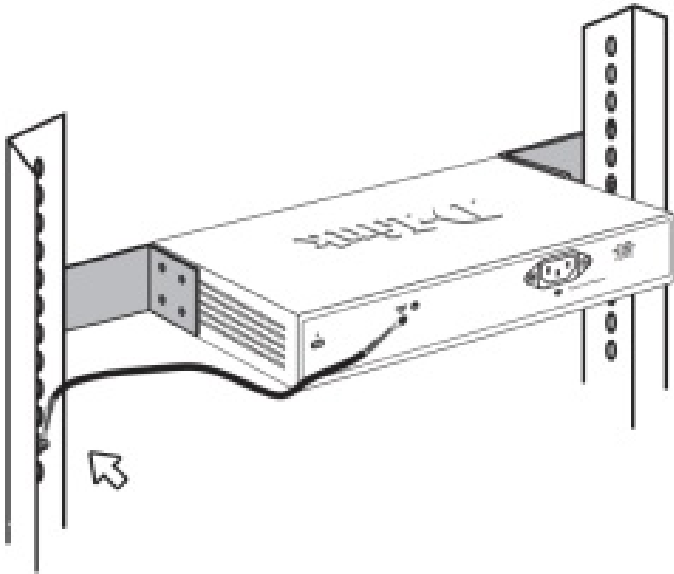


ATTACHING POWER CORD RETAINER


1

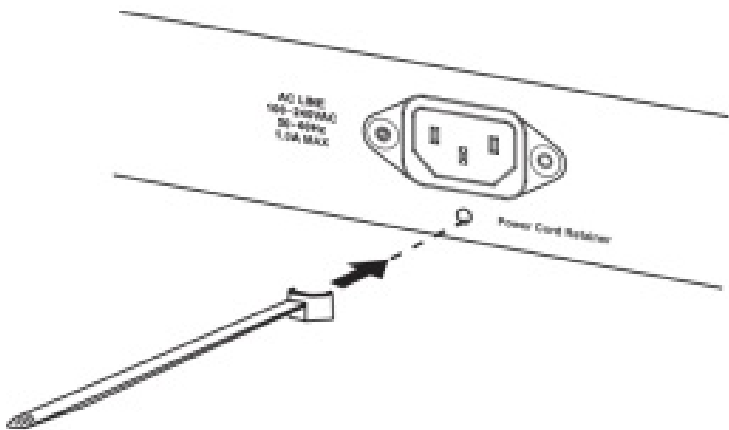

2

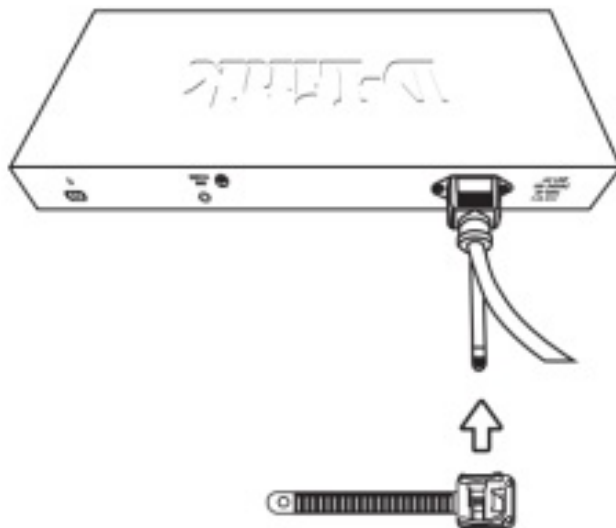


3

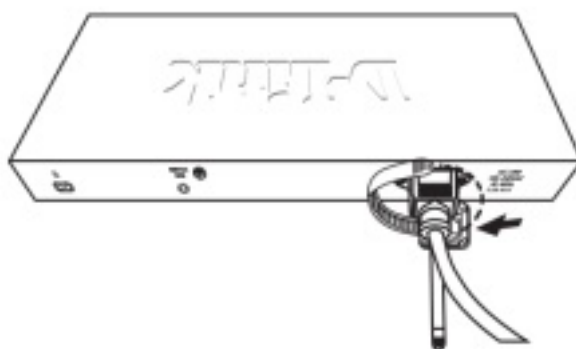


4



CONNECTING DEVICES

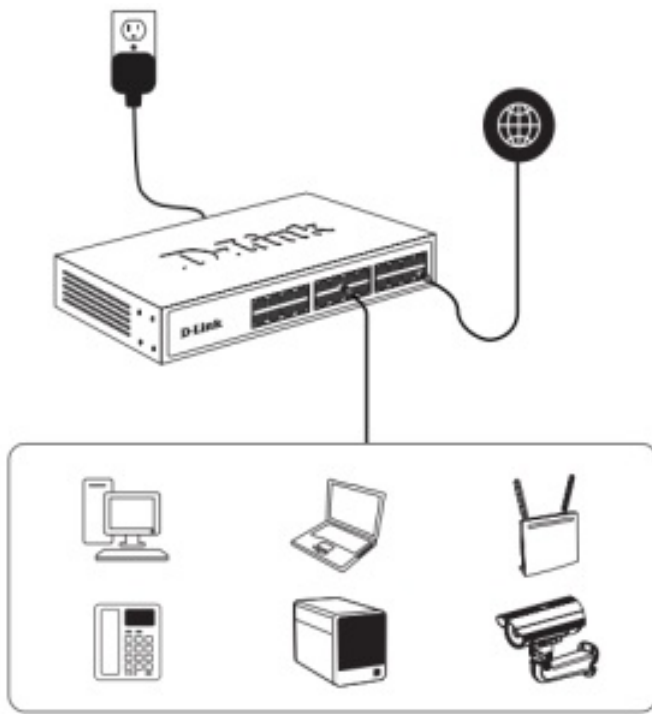

ACCESSING THE WEB USER INTERFACE

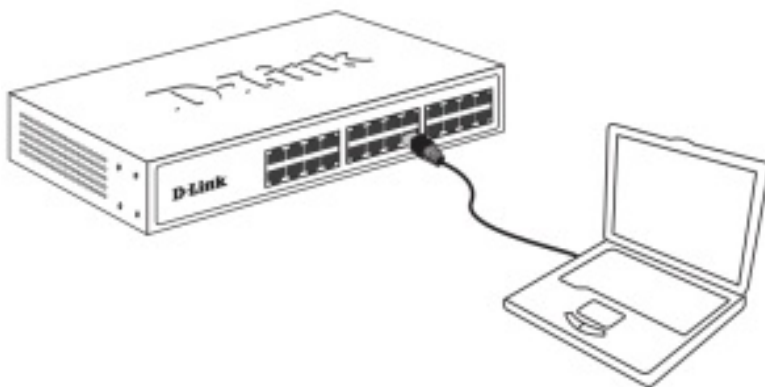

Through an access port


Item	Value
IP Address	10.90.90.90
Subnet Mask	255.0.0.0
User Name	admin
Password	admin

Managed switches require both user name & password to left blank.

Switch Configuration

For more information on accessing and configuring the D-Link switch, refer to the user manual.

ACCESSING THE COMMAND LINE INTERFACE

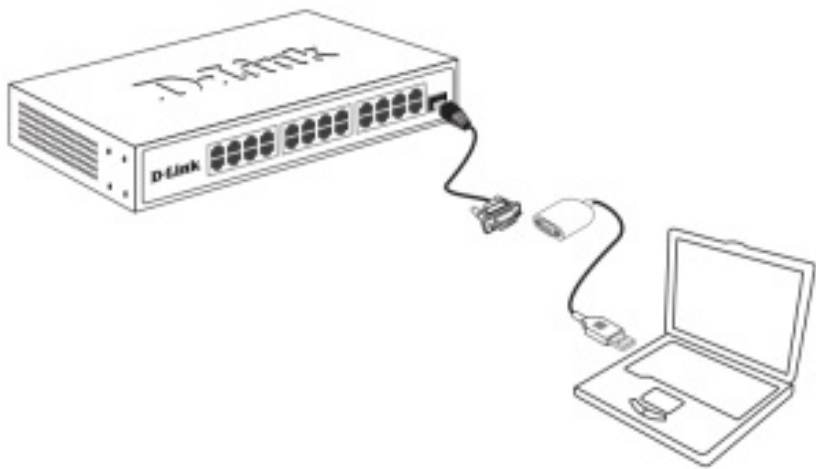

Through a console port

Item	Value
Baud rate	115200 bps
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

Online Documentation



www.dlink.com/resources/business

Online Support



<http://www.dlink.com/en/support>

Warranty Information



<http://warranty.dlink.com>

D-Link Network Assistant




<http://tools.dlink.com/intro/dna/>





Documents / Resources

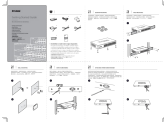	D-Link D-Link Ethernet Switches [pdf] User Guide D-Link, Ethernet, Switches
---	--

References

- [D warranty.dlink.com](#)
- [D D-Link Document Center](#)
- [D D-Link Network Assistant | D-Link](#)
- [D Support | D-Link](#)