



D-Link DEM-424XT 10GBase-ZR Single-Mode XFP Transceiver up to 80 km Installation Guide

[Home](#) » [D-Link](#) » D-Link DEM-424XT 10GBase-ZR Single-Mode XFP Transceiver up to 80 km Installation Guide 

D-Link DEM-424XT 10GBase-ZR Single-Mode XFP Transceiver up to 80 km




Contents

- [1 Connecting the transceiver](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Connecting the transceiver

Plug the DEM-424XT transceiver into the XFP port of your switch. Connect a fiber cable to the DEM-424XT transceiver in order to connect your switch to fiber media.

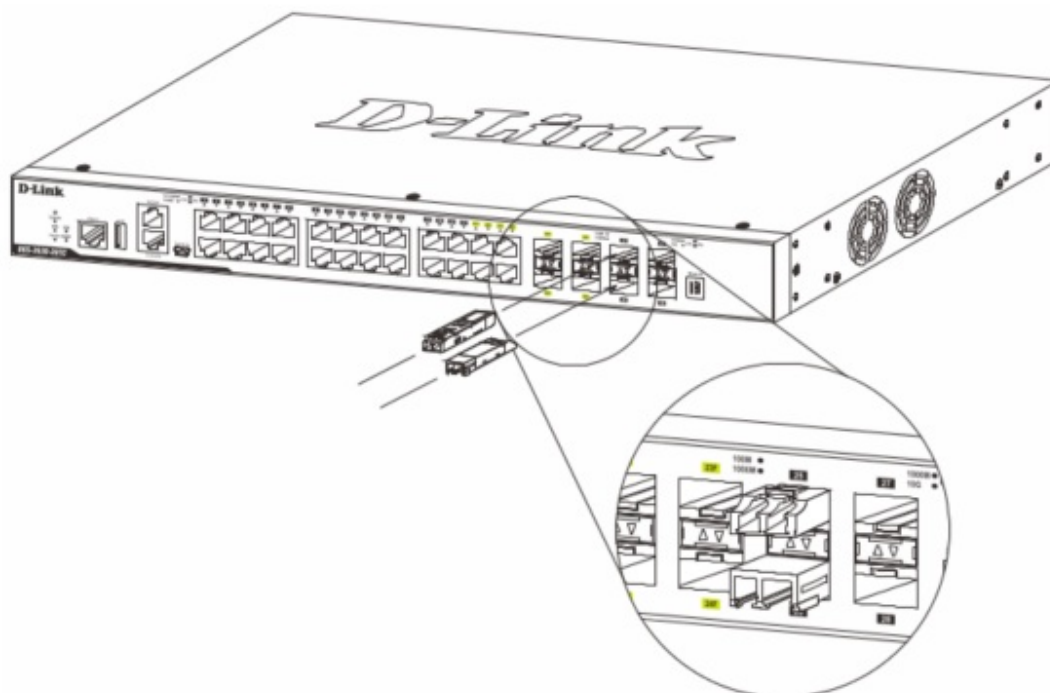

The DEM-424XT transceiver is hot pluggable. You can connect the transceiver while the system is powered on without causing any issues, and easily plug or unplug the transceiver without interrupting the network operation.



Documents / Resources

	D-Link DEM-424XT 10GBase-ZR Single-Mode XFP Transceiver up to 80 km [pdf] Installation Guide DEM-424XT, 10GBase-ZR Single-Mode XFP Transceiver up to 80 km
---	--

References

- [D almaty@dlink.ru](mailto:almaty@dlink.ru)
- [D info@dlink.am](mailto:info@dlink.am)
- [D info@dlink.ee](mailto:info@dlink.ee)
- [D info@dlink.lt](mailto:info@dlink.lt)
- [D info@dlink.md](mailto:info@dlink.md)
- [D mail@dlink.ru](mailto:mail@dlink.ru)
- [D support@dlink.by](mailto:support@dlink.by)

- [!\[\]\(7e19807c61da14f515588e95cd49886c_img.jpg\) support@dlink.co.il](mailto:support@dlink.co.il)
- [!\[\]\(8ff9e60a4b0560d7ec99179ef4779d9e_img.jpg\) ua@dlink.ua](mailto:ua@dlink.ua)
- [!\[\]\(ab9b69bf5753a01c76b30af859454360_img.jpg\) D-Link Главная](#)

Manuals+.