



D-Link DSL-G604T Wireless ADSL Router Instruction Manual

[Home](#) » [D-Link](#) » D-Link DSL-G604T Wireless ADSL Router Instruction Manual 

Contents

- [1 D-Link DSL-G604T Wireless ADSL Router](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Connecting the Router to your Computer](#)
- [5 Configure IP Settings](#)
- [6 Connecting Additional Computers To The DSL-G604T](#)
- [7 Configuring the Router](#)
- [8 Configuring the WAN Connection](#)
- [9 Documents / Resources](#)



D-Link DSL-G604T Wireless ADSL Router

Product Information



This product is the DSL-G604T Wireless ADSL Router. It allows you to share your high-speed internet connection with other computers. The router acts as a DHCP server and assigns the necessary IP address information on your network. It is compatible with any current web browser, such as Internet Explorer 6 or Netscape Navigator 6.2.3.

The package includes the following items

- DSL-G604T Wireless ADSL Router
- Antenna and stand
- CD-ROM containing Manual and Warranty
- Ethernet Cable (CAT5 UTP Straight-Through)
- ADSL Cable (standard telephone cable)
- 12V, 1.2A Power Adapter (Do not use a power adapter with a different voltage rating as it will void the warranty)

Product Usage Instructions

Connecting the Router to your Computer

1. Connect the power adapter to the power input at the back panel of the DSL-G604T and plug the other end into a wall outlet or power strip. The Power LED on the front of the device should turn ON.
2. Insert one end of the Ethernet cable into an Ethernet (LAN) port on the back panel of the DSL-G604T and the other end into an Ethernet Adapter or available Ethernet port on your computer.

3. Insert the telephone cable included with the Router into the ADSL port, then connect the cable to your telephone line.
4. Check the LED display on the front of the Router to confirm that the connections have been made.

Configure IP Settings

To connect to the network, make sure the network adapter in your computer is configured properly. Follow these steps to configure the network adapter to obtain an IP address automatically for the DSL-G604T Wireless ADSL Router

1. For Microsoft Windows XP, go to Start > select Settings > click Control Panel > Double-click on the Network Connections icon.
2. Double-click on Network Connections.
3. Right-click the Local Area Connection icon, and then select Properties.
4. In the Properties dialog box, click on Internet Protocol (TCP/IP) and then click Properties.
5. Select "Obtain an IP address automatically".
6. Click OK.

Connecting Additional Computers To The DSL-G604T Wireless ADSL Router

Using additional Ethernet (CAT5 UTP) cables, connect your Ethernet-equipped computers to the LAN ports on the back panel of the DSL-G604T.

Before You Begin

Check Your Package Contents



DSL-G604T

shown with antenna and stand



CD-Rom

containing Manual and Warranty



Ethernet Cable

(CAT5 UTP Straight-Through)



ADSL Cable (standard telephone cable)

 


12V, 1.2A Power Adapter

Using a power adapter with a different voltage rating will a different voltage rating willva different voltage rating will If any of the above items is missing, please contact your reseller.

©2004 D-Link Systems, Inc. All rights reserved. Trademarks or registered trademarks are the property of their respective holders. Software and specifications subject to change without notice. DSL-G604T Wireless ADSL Router

Connecting the Router to your Computer

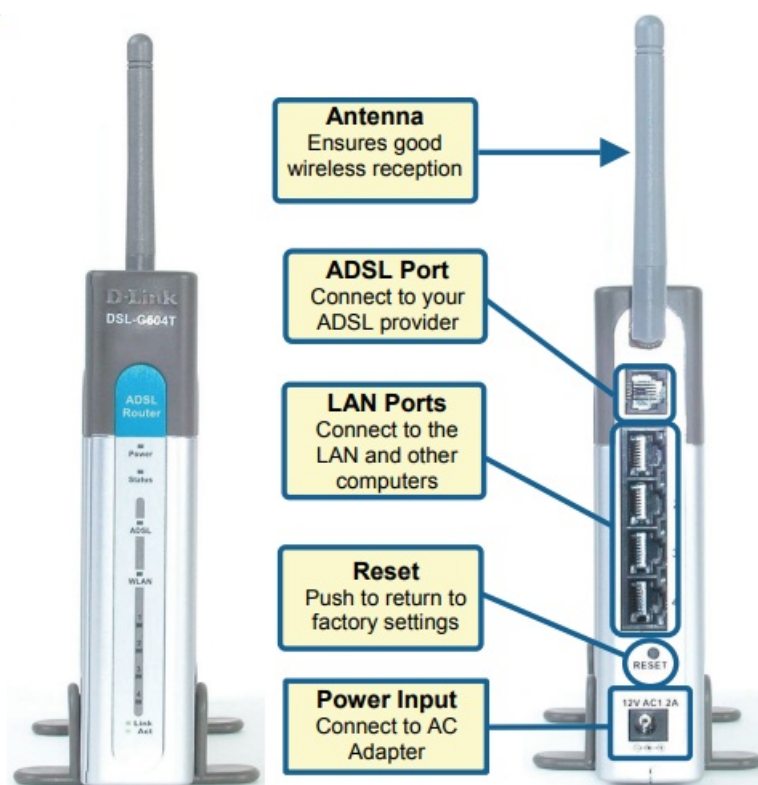

- First, connect the power adapter to the power input at the back panel of the DSL-G604T and then plug the other end of the power adapter to a wall outlet or power strip. On the front of the device, the Power LED will turn ON to indicate proper operation.
- Insert one end of the Ethernet cable into an Ethernet (LAN) port on the back panel of the DSL-G604T and the other end of the cable to an Ethernet Adapter or available Ethernet port on your computer.
- Insert the telephone cable included with the Router into the ADSL port, then connect the cable to your telephone line.
- Check the LED display on the front of the Router to confirm that the connections have been made.

Configure IP Settings

To connect to the network, make sure the network adapter in your computer is configured properly. Here's how to configure the network adapter to obtain an IP address automatically for the DSL-G604T Wireless ADSL Router.

For Microsoft Windows XP

 
Go to **Start** > select **Settings** > click **Control Panel** > **Double-click** on the **Network Connections** icon

Double-click on **Network Connections**




Right-click the Local Area Connection icon, and then select **Properties**.


Select Properties

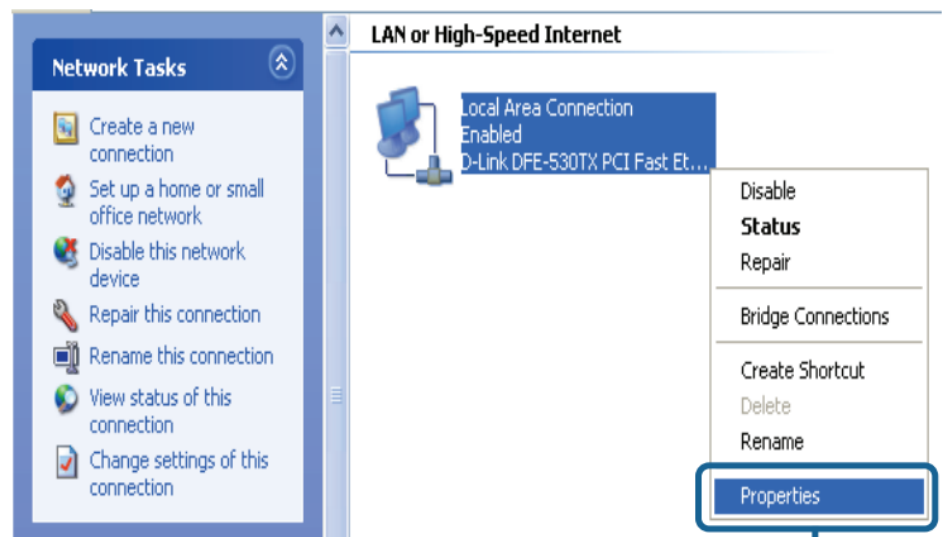

 The dialog box displays with a list of currently installed network items.

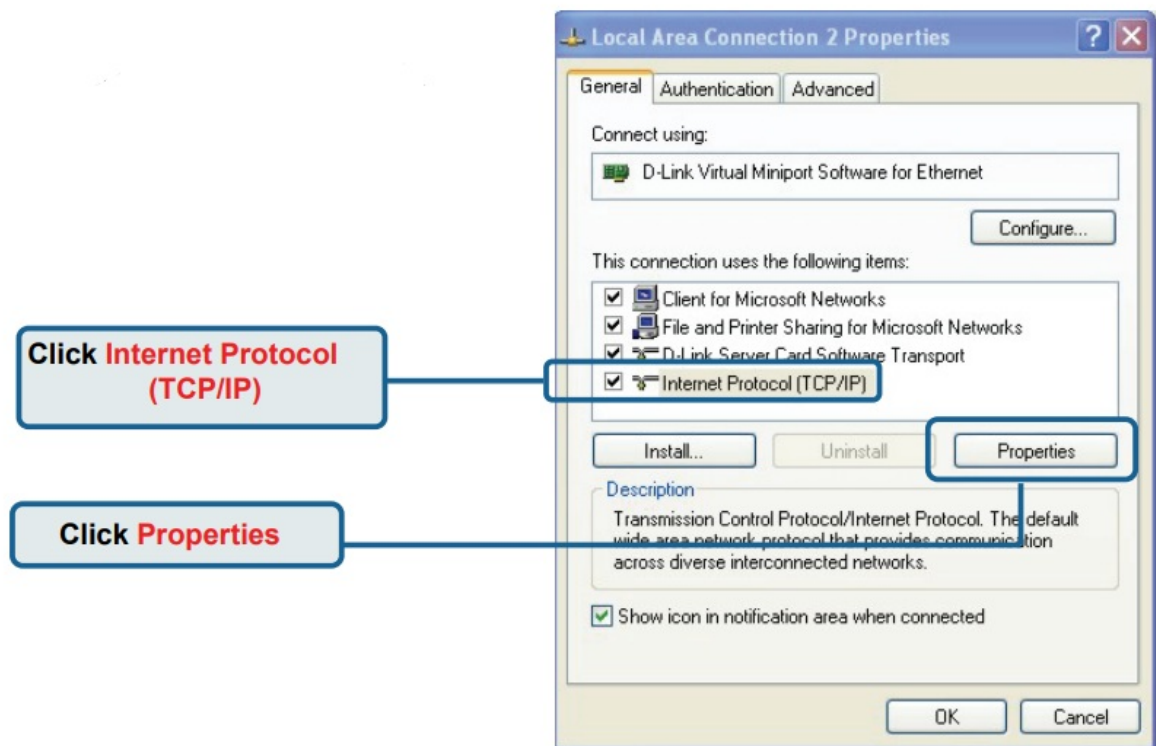

 
Make the choice to get IP settings assigned automatically.

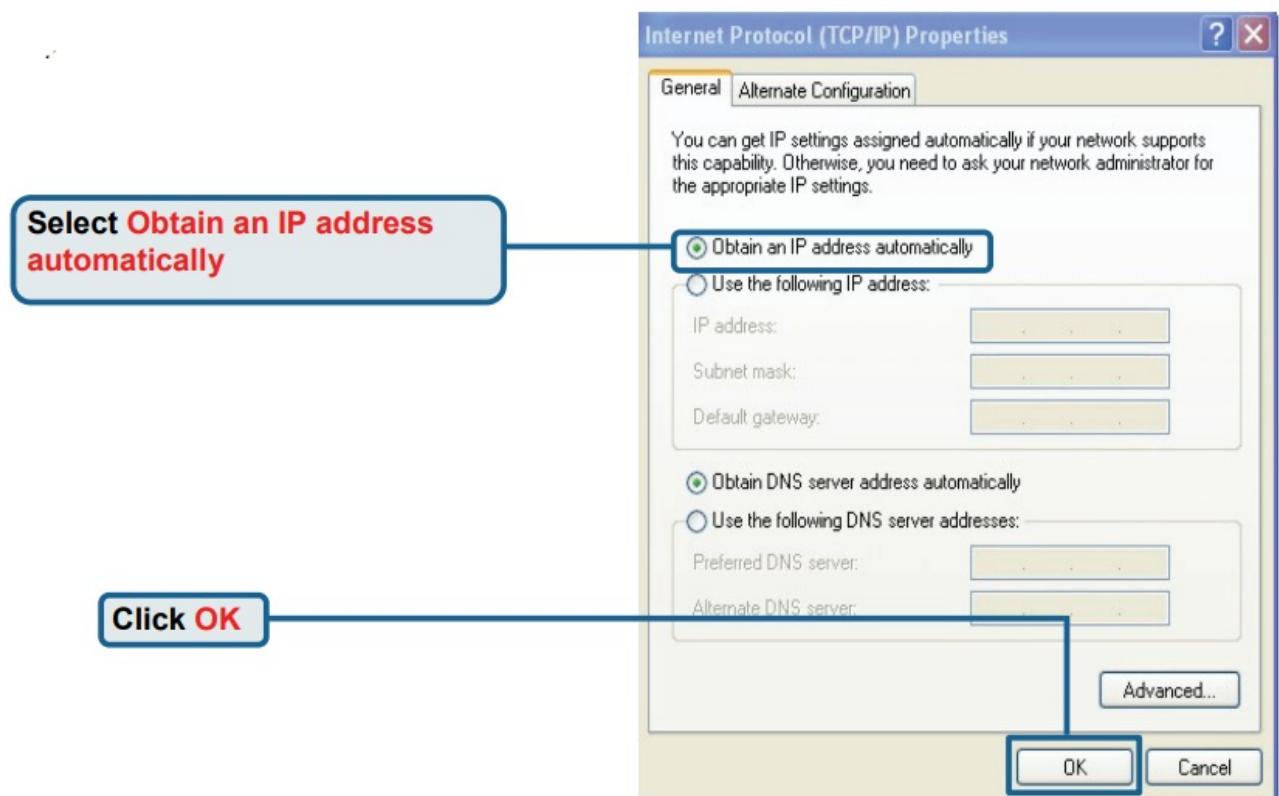

Connecting Additional Computers To The DSL-G604T

Wireless ADSL Router

 - Using additional Ethernet (CAT5 UTP) cables, connect your Ethernet-equipped computers to the LAN ports on the back panel of the DSL-G604T.
- When you have completed the steps in this Quick Installation Guide, your connected network should look similar to this

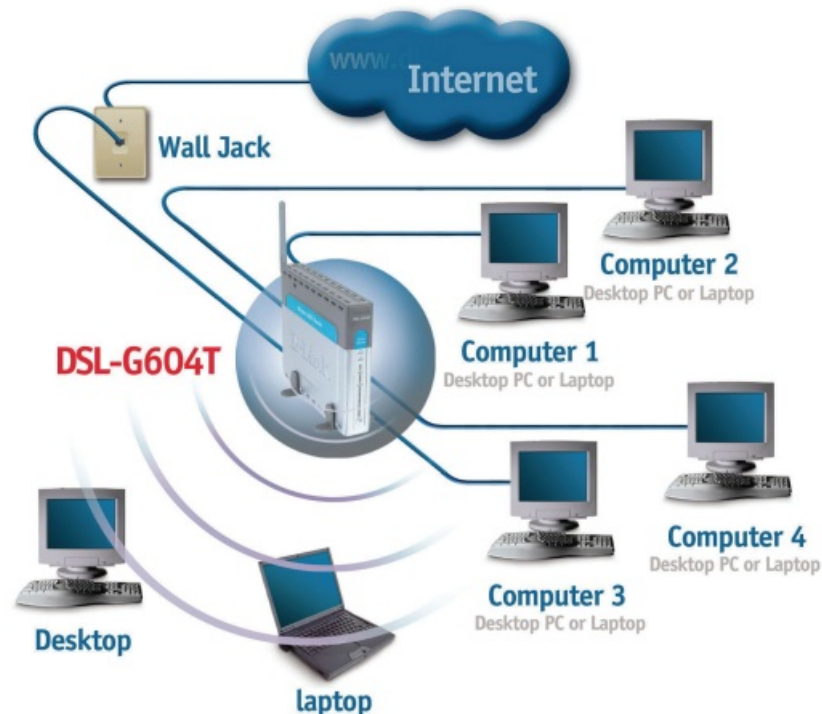


Configuring the Router

You can select two methods to configure your new router. The first method is by using D-Link Click'n Connect Utility, which is included on the CD designed to run on Windows XP/2000. Just follow the instructions step by step to configure your router for Internet access for the first time.


The second method is to use your Web browser to access the built in web server pages used to setup the Router, your computer's network adapter must be configured to "Obtain an IP address automatically", that is, you must set the IP network settings of your computer so it is DHCP Client. If you are using Windows XP and do not know how to change your network settings, skip ahead to Appendix and follow the instructions provided. You may also read the User Manual for instructions on changing IP settings for computers running other Windows operating systems.

 Open your Web browser and type **http://192.168.1.1** into the URL address box. Press **Enter** or **Return**.

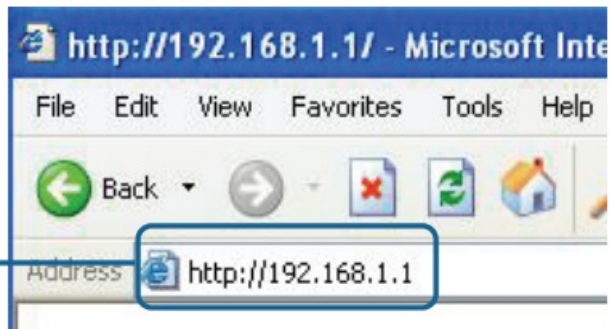


The **Home/Login** page appears.

 When you first log in, your Login Name is **admin**; your password is also **admin**. These may be changed later.

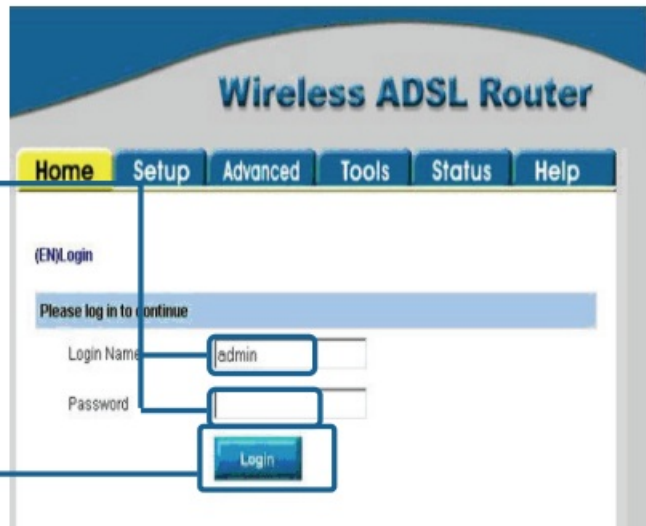


Click **Login**

 The Home screen appears. Click on the Setup tab to bring up the Setup menu.

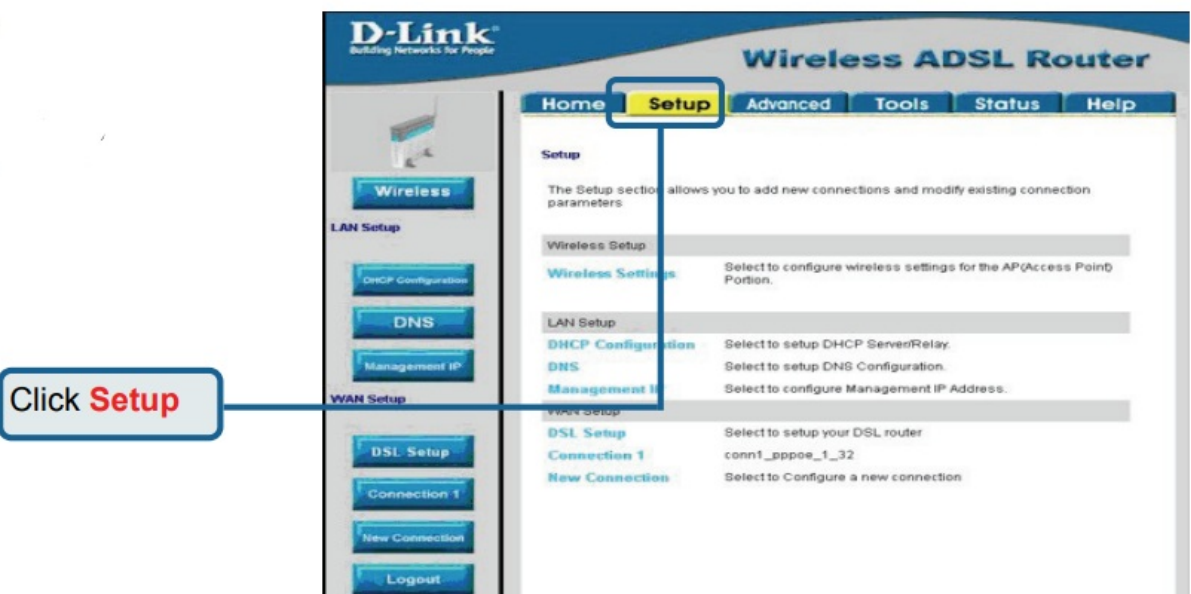

Click **Setup**

 Click the Connection 1 button to go to the configuration menu to make the Internet connection.

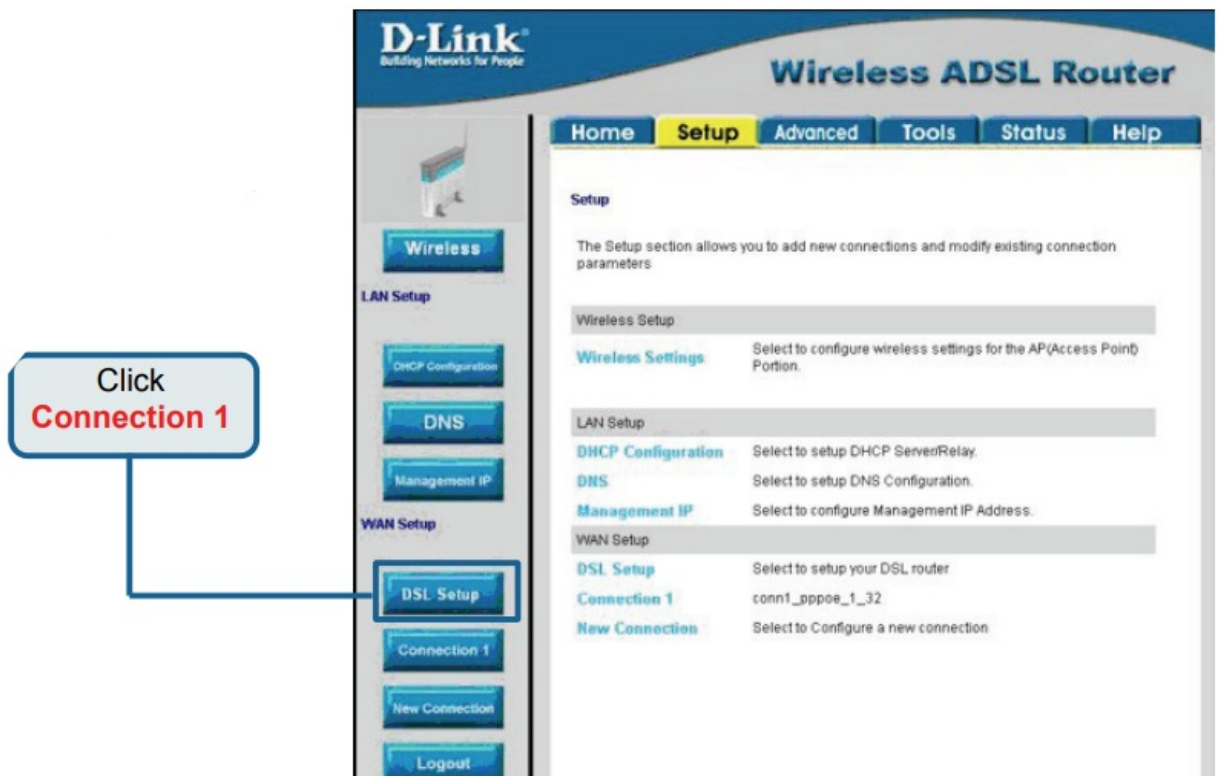


Configuring the WAN Connection

Check your ISP information,


- If you configure for PPPoA type, refer to Manual .
- If you configure for PPPoE type, refer to Manual .
- If you configure for Bridge type, refer to Manual .
- If you configure for DHCP type, refer to Manual .
- If you configure for CLIP type, refer to Manual

 In the Connection 1 window, type the Username and Password used to verify the identity of your ISP account. Click the Apply button when you have entered the information.

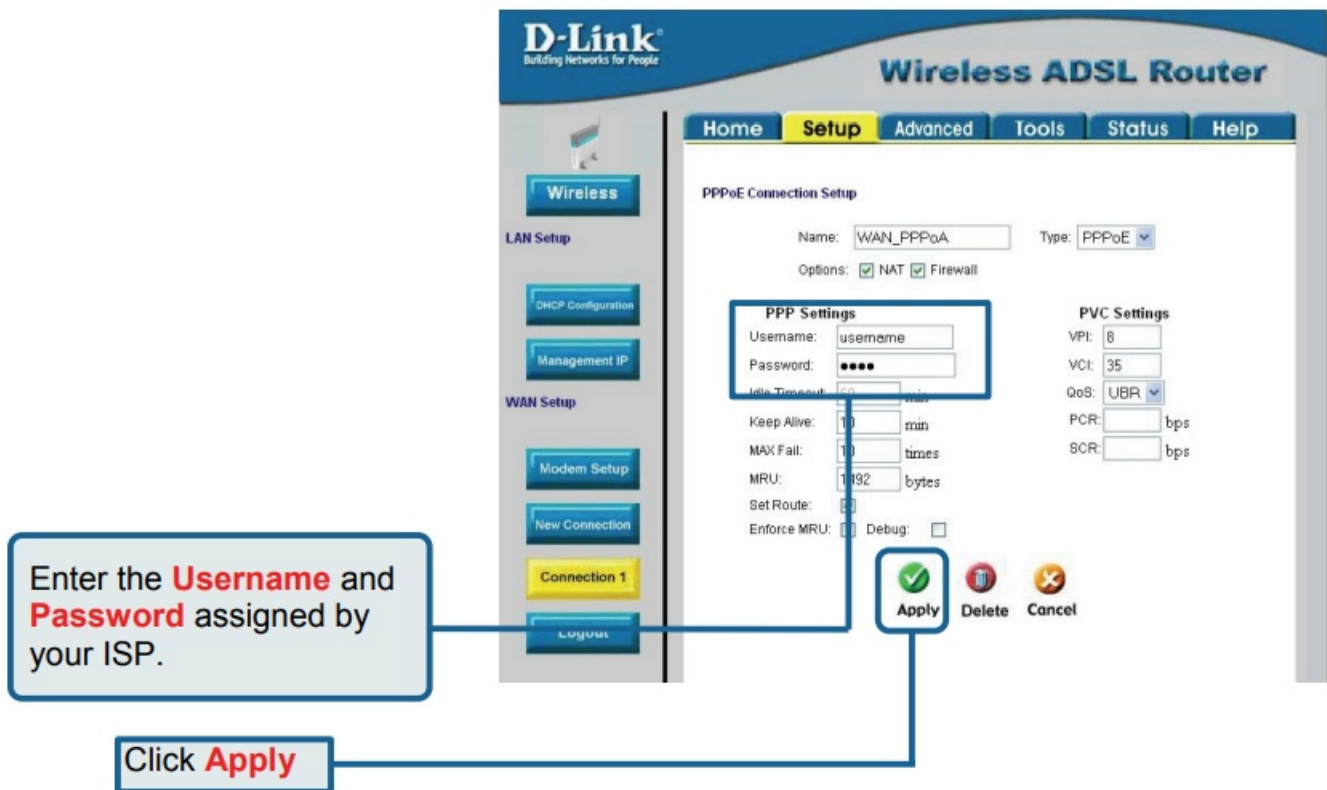

Configure Connection 1 for PPPoA

 To configure the default connection type (PPPoA) for Connection 1, follow the steps listed below. To change the connection type of Connection 1 to an alternative type follow the instructions according to the desired type as described below in change the connection type.

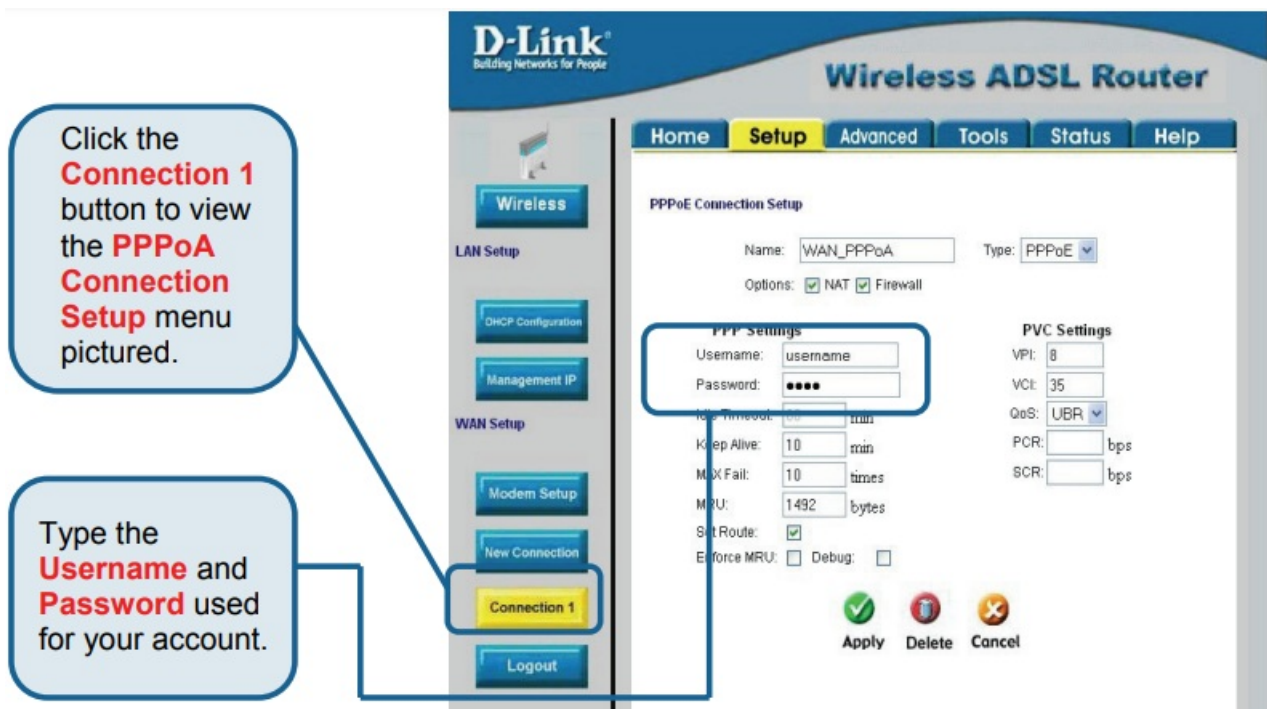

Select **PPPoA** from the **Type**, **VPI**: and **VCI**: - if these values are not correct, change these according to the instruction of your ISP.

Click the **Apply** button after you have entered the account information.

D-Link
Building Networks for People

Wireless ADSL Router

Home **Setup** Advanced Tools Status Help

Wireless

LAN Setup: DHCP Configuration, Management IP

WAN Setup: Modem Setup, New Connection, **Connection 1**, Logout

PPPoE Connection Setup

Name: WAN_PPPoA Type: **PPPoE**

Options: ☒ NAT ☒ Firewall

PPP Settings

Username: username
Password: ****
Idle Timeout: 60 min
Keep Alive: 10 min
MAX Fail: 10 times
MRU: 1492 bytes
Set Route: ☒
Enforce MRU: ☐ Debug: ☐

PVC Settings

VPI: 8
VCI: 35
QoS: UBR
PCR: bps
SCR: bps

Apply Delete Cancel

Click **Tools** when you have applied the new settings.

D-Link
Building Networks for People

Wireless ADSL Router

Home **Setup** Advanced **Tools** Status Help

Wireless

LAN Setup: DHCP Configuration, Management IP

WAN Setup: Modem Setup, New Connection, **Connection 1**, Logout

PPPoE Connection Setup

Name: WAN_PPPoA Type: **PPPoE**

Options: ☒ NAT ☒ Firewall

PPP Settings

 
Username: username
Password: ****
Idle Timeout: 60 min
Keep Alive: 10 min
MAX Fail: 10 times
MRU: 1492 bytes
Set Route: ☒
Enforce MRU: ☐ Debug: ☐

PVC Settings

VPI: 8
VCI: 35
QoS: UBR
PCR: bps
SCR: bps

Apply Delete Cancel


Click **System Commands** to view the menu used to save changes.

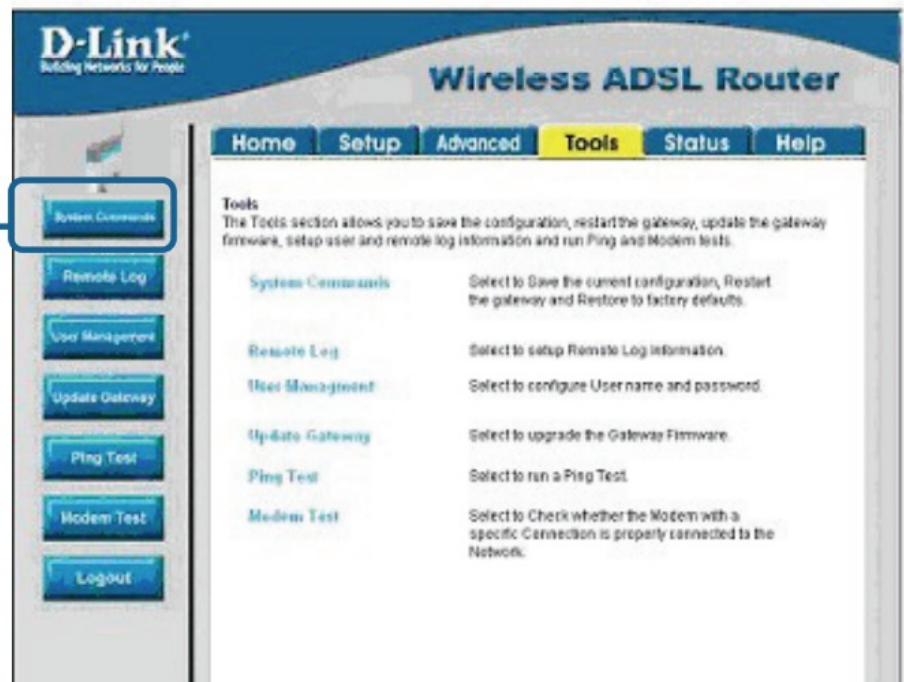

To configure Connection 1 for PPPoE, follow the steps listed below. Some of the settings do not need to be changed the first time the device is set up, but can be changed later if you choose.

Click the **Connection 1** button to view the **PPPoE Connection Setup** menu pictured.

 Type the **Username** and **Password** used for your account.

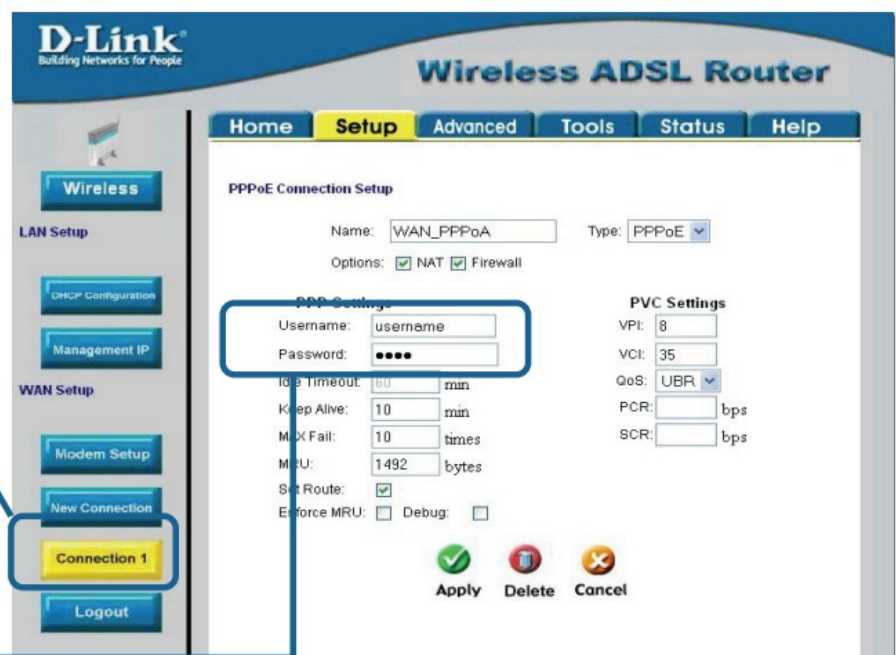

Select **PPPoE** from the **Type**, **VPI**: and **VCI**: - if these values are not correct, change these according to the instruction of your ISP.


Click the **Apply** button after you have entered the account information.

The screenshot shows the 'Wireless ADSL Router' configuration interface. The 'Setup' tab is selected. On the left sidebar, 'Wireless' is highlighted. The main content area is titled 'PPPoE Connection Setup'. It includes a 'Name' field with 'WAN_PPPoA', a 'Type' dropdown set to 'PPPoE', and 'Options' for NAT and Firewall. Below this are 'PPP Settings' (Username: 'username', Password: '.....', Idle Timeout: 60 min, Keep Alive: 10 min, MAX Fail: 10 times, MRU: 1492 bytes, Set Route: checked, Enforce MRU: unchecked, Debug: unchecked) and 'PVC Settings' (VPI: 8, VCI: 35, QoS: UBR, PCR: empty, SCR: empty). At the bottom right are 'Apply', 'Delete', and 'Cancel' buttons. A blue box highlights the 'Type' dropdown, and another blue box highlights the 'Apply' button.

Click **Tools** when you have applied the new settings.


The screenshot shows the same 'Wireless ADSL Router' configuration interface, but the 'Tools' tab is now selected. The 'PPPoE Connection Setup' section remains visible, showing the same configuration as the previous screenshot. The 'Apply' button is now highlighted with a blue box, indicating it has been clicked. The 'Tools' tab is also highlighted with a blue box.

 Click **System Commands** to view the menu used to save changes.

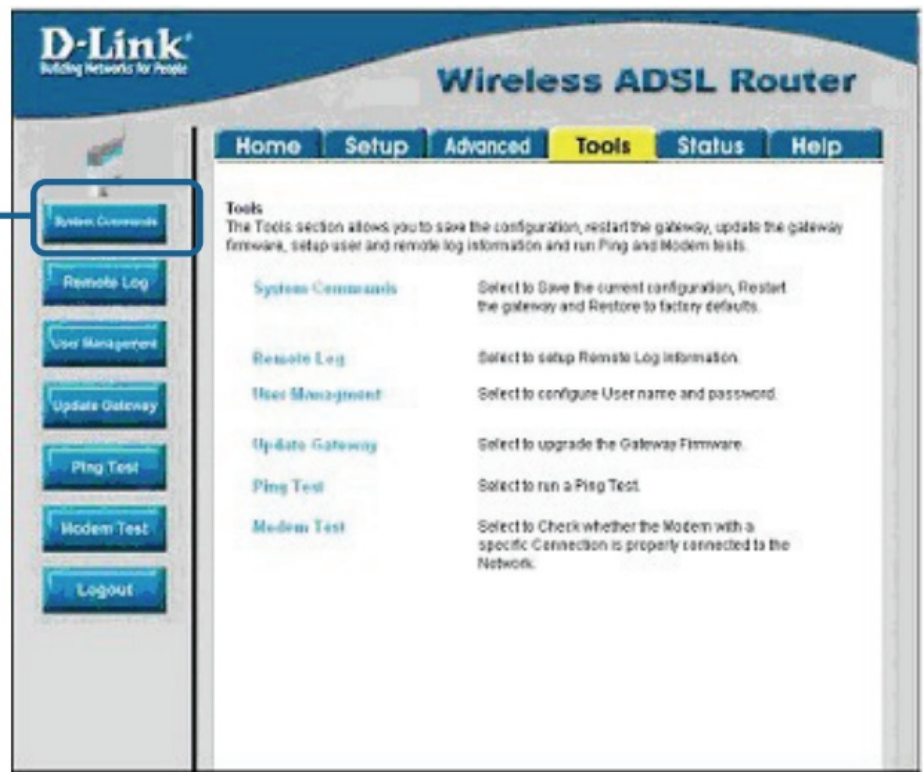

To configure the WAN connection for Bridge, perform the steps listed below. Some of the settings do not need to be changed the first time the device is set up, but can be changed later if you choose.

 Click the **Connection 1** button to view the **Bridge Connection Setup** menu pictured.

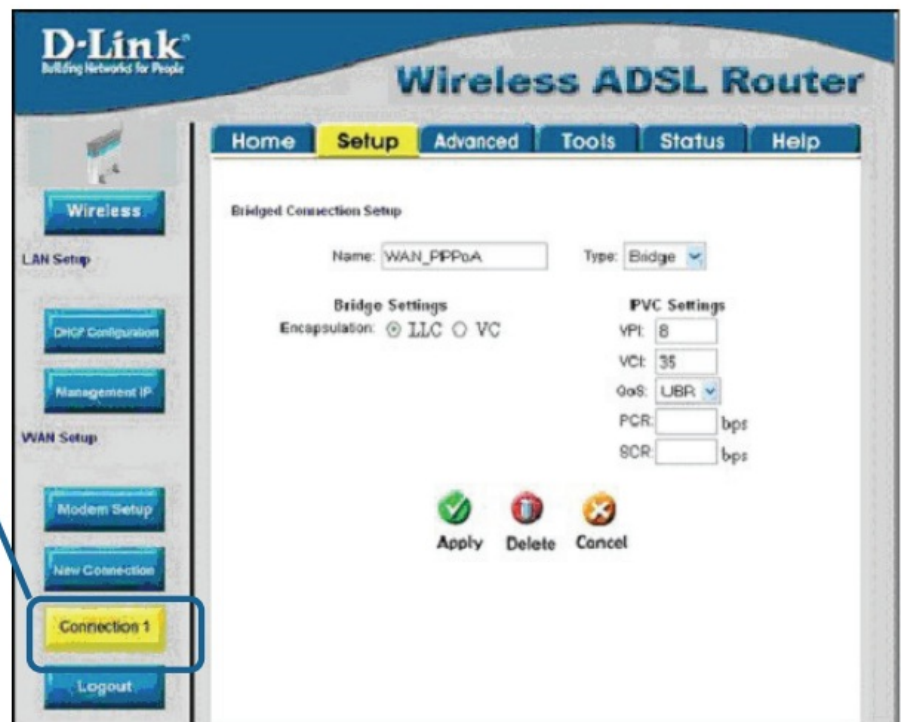

Select **Bridge** from the **Type**, **VPI**: and **VCI**: - if these values are not correct, change these according to the instruction of your ISP.


Click the **Apply** button after you have entered the account information.

Click **Tools** when you have applied the new settings.

The screenshot shows the 'Bridged Connection Setup' page of a D-Link Wireless ADSL Router. The 'Type' is set to 'Bridge'. The 'Name' is 'WAN_PPPoA'. The 'Bridge Settings' show 'Encapsulation' as 'LLC'. The 'PVC Settings' show 'VPI' as '8' and 'VCI' as '35'. The 'QoS' is set to 'UBR'. The 'PCR' and 'SCR' are both set to '1000 kbps'. The 'Apply' button is highlighted with a green checkmark icon.

The screenshot shows the 'Tools' section of the D-Link Wireless ADSL Router Setup page. The 'Type' is still 'Bridge'. The 'Name' is 'WAN_PPPoA'. The 'Bridge Settings' show 'Encapsulation' as 'LLC'. The 'PVC Settings' show 'VPI' as '8' and 'VCI' as '35'. The 'QoS' is set to 'UBR'. The 'PCR' and 'SCR' are both set to '1000 kbps'. The 'Apply' button is highlighted with a green checkmark icon.

 
Click **System Commands** to view the menu used to save changes.

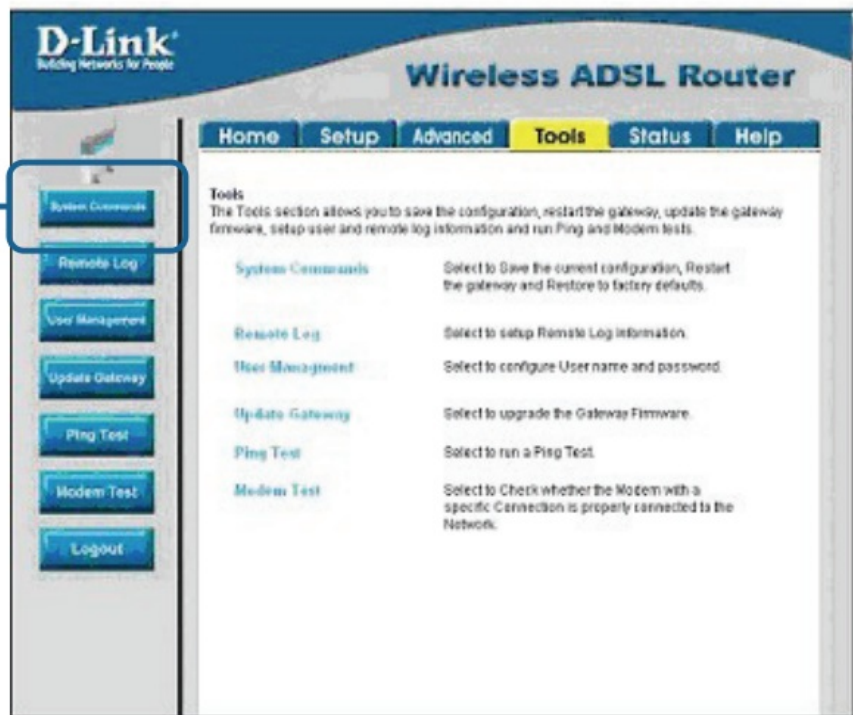

Configure Connection 1 for DHCP for WAN

To configure the WAN connection for DHCP, perform the steps listed below. Some of the settings do not need to be changed the first time the device is set up, but can be changed later if you choose.

 Click the **Connection 1** button to view the **DHCP Connection Setup** menu pictured.

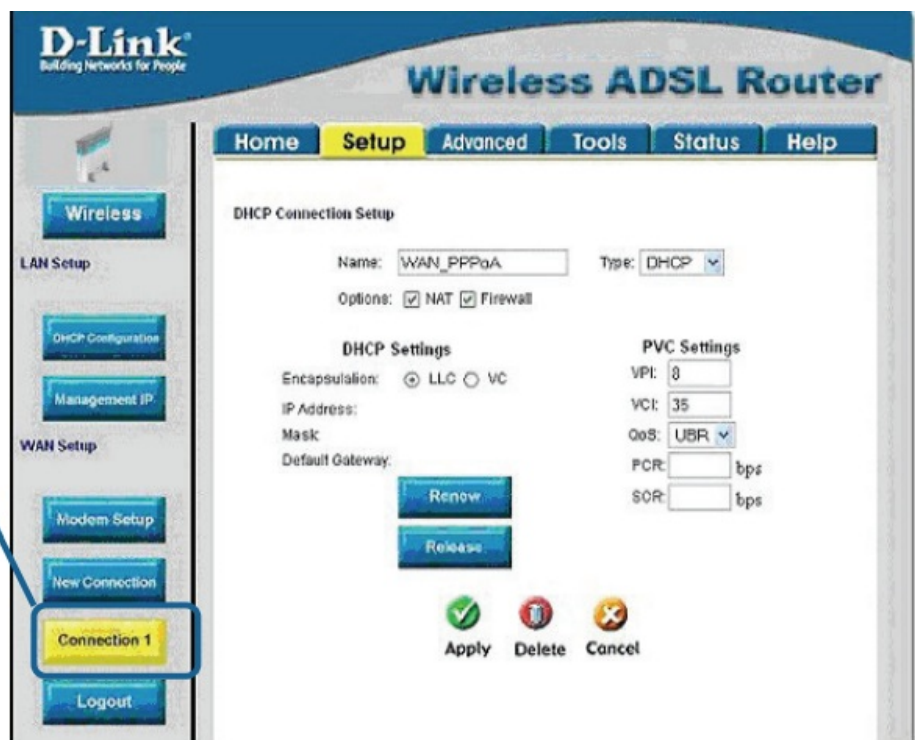

Select **DHCP** from the **Type**, **VPI**: and **VCI**: - if these values are not correct, change these according to the instruction of your ISP.

Click the **Apply** button after you have entered the account information.

D-Link
Building Networks for People

Wireless ADSL Router

Home **Setup** Advanced Tools Status Help

Wireless

LAN Setup

DHCP Configuration

Management IP

WAN Setup

Modem Setup

New Connection

Connection 1

Logout

DHCP Connection Setup

Name: WAN_PPPOA Type: **DHCP**

Options: ☒ NAT ☒ Firewall

DHCP Settings

Encapsulation: ☒ LLC ☐ VC

IP Address:

Mask:

Default Gateway:

Renew

Release

PVC Settings

VPI: 8

VCI: 35

QoS: UBR

PCR: bps

SCR: bps

Apply Delete Cancel

Click **Tools** when you have applied the new settings.

D-Link
Building Networks for People

Wireless ADSL Router

Home **Setup** Advanced **Tools** Status Help

Wireless

LAN Setup

DHCP Configuration

Management IP

WAN Setup

Modem Setup

New Connection

Connection 1

Logout

DHCP Connection Setup

Name: WAN_PPPOA Type: **DHCP**

Options: ☒ NAT ☒ Firewall

DHCP Settings

Encapsulation: ☒ LLC ☐ VC

IP Address:

Mask:

Default Gateway:

Renew

Release

PVC Settings

VPI: 8

VCI: 35

 
QoS: UBR

PCR: bps

SCR: bps


Apply Delete Cancel

Click **System Commands** to view the menu used to save changes.

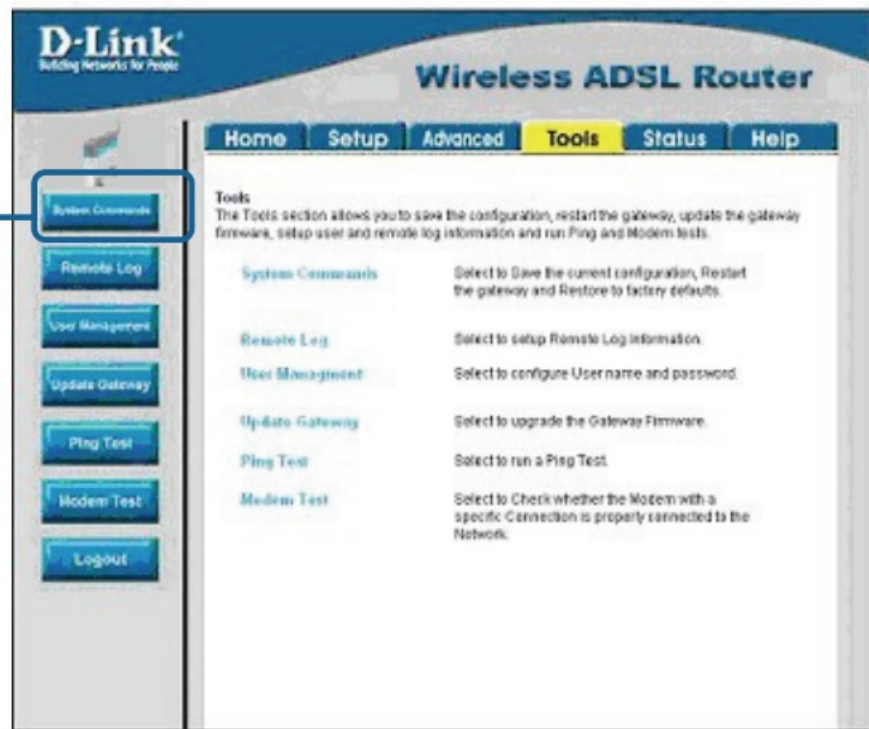

To configure the WAN connection for CLIP, perform the steps listed below. Some of the settings do not need to be changed when you first set up the device but can be changed later if you choose.

 Click the **Connection 1** button to view the **CLIP Connection Setup** menu pictured.

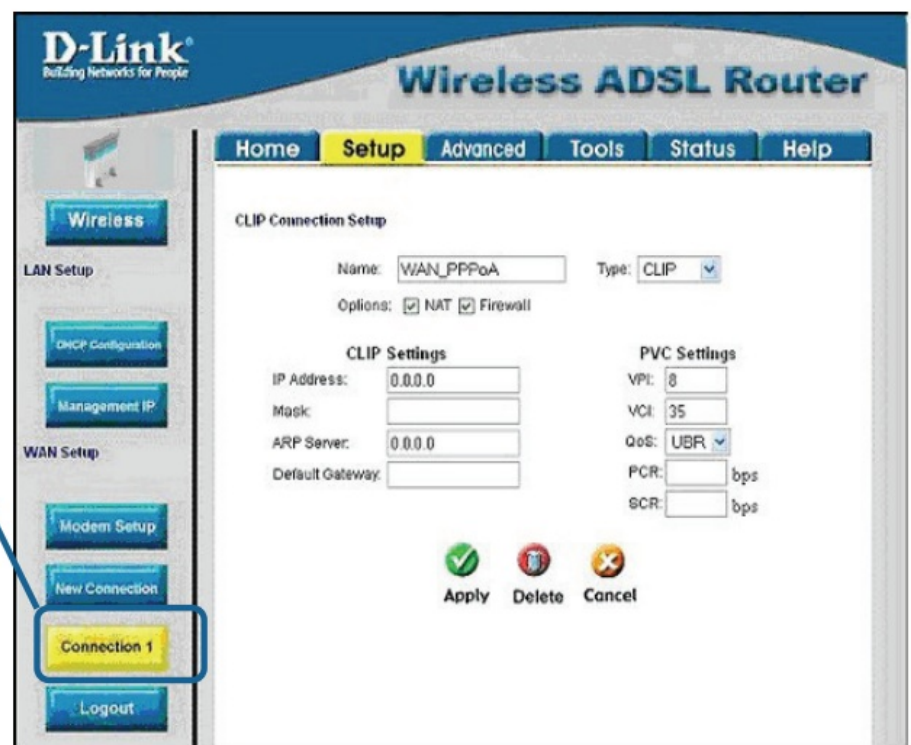

Select **CLIP** from the **Type**, **VPI**: and **VCI**:
- if these values are not correct, change these according to the instruction of your ISP.

Enter the **IP Address** and **ARP Server** and the **Default Gateway** change these according to the instruction of your ISP.

Click the **Apply** button after you have entered the account information.

Select **CLIP** from the **Type**, **VPI**: and **VCI**:
- if these values are not correct, change these according to the instruction of your ISP.

Enter the **IP Address** and **ARP Server** and the **Default Gateway** change these according to the instruction of your ISP.

Click the **Apply** button after you have entered the account information.

Click Tools

when you have applied the new settings.

The screenshot shows the 'Tools' tab of the D-Link Wireless ADSL Router configuration interface. The left sidebar contains a 'Wireless' section with buttons for 'LAN Setup', 'DHCP Configuration', 'Management IP', 'WAN Setup', 'Modem Setup', 'New Connection', 'Connection 1', and 'Logout'. The main content area is titled 'CLIP Connection Setup'. It includes a 'Name' field with 'WAN_PPPOA', a 'Type' dropdown set to 'CLIP', and 'Options' for 'NAT' and 'Firewall' (both checked). Below this are 'CLIP Settings' (IP Address: 0.0.0.0, Mask, ARP Server: 0.0.0.0, Default Gateway) and 'PVC Settings' (VPI: 8, VCI: 35, QoS: UBR, PCR, BCR). At the bottom are 'Apply', 'Delete', and 'Cancel' buttons.


Click System Commands

to view the menu used to save changes.

The screenshot shows the 'System Commands' section within the 'Tools' tab of the D-Link Wireless ADSL Router configuration interface. The left sidebar is identical to the previous screenshot. The main content area has a title 'Tools' and a description: 'The Tools section allows you to save the configuration, restart the gateway, update the gateway firmware, setup user and remote log information and run Ping and Modem tests.' Below this is a table with two columns: the command name and its description.

System Commands	
System Commands	Select to Save the current configuration, Restart the gateway and Restore to factory defaults.
Remote Log	Select to setup Remote Log information.
User Management	Select to configure User name and password.
Update Gateway	Select to upgrade the Gateway Firmware.
Ping Test	Select to run a Ping Test.
Modem Test	Select to Check whether the Modem with a specific Connection is properly connected to the Network.

 Wireless Configuration

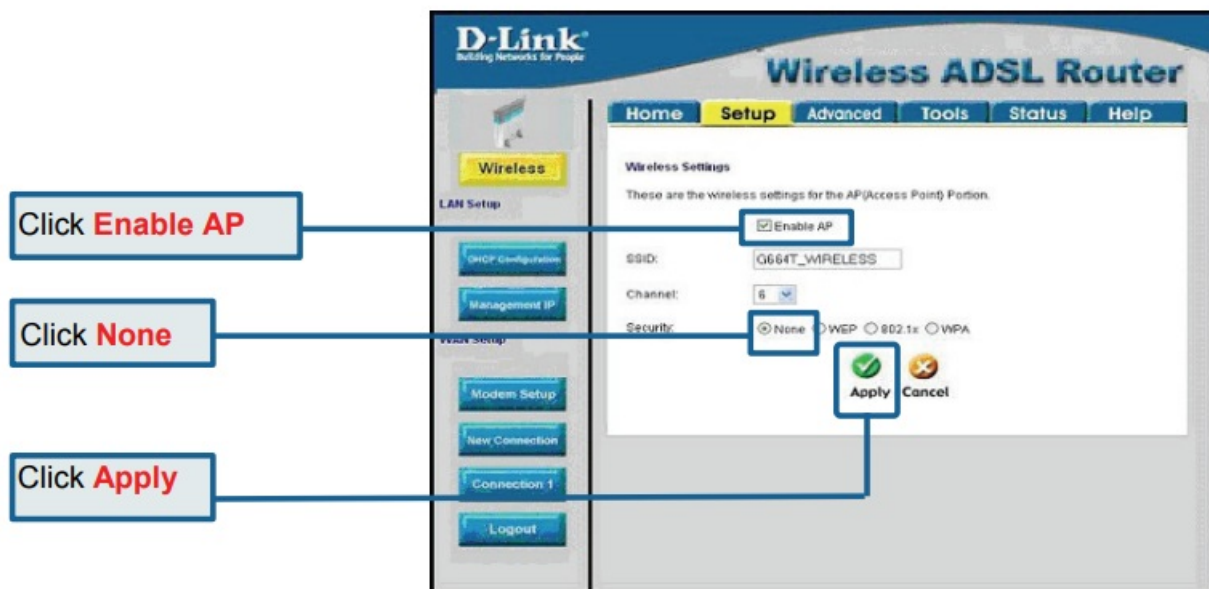

For first-time setup, accept the default settings for SSID and Channel, and bypass security by clicking None. These settings may be changed later by following instructions as given in the User's Guide.

Important Note: This Quick Installation Guide is designed to allow a first-time user to install and operate the Router easily, in order to ensure that everything is in working order. For more advanced configuration settings, particularly to do with security parameters, please consult the User's Guide that accompanies the Router.

Technical Support

You can find software updates and user documentation on the D-Link website.

- D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.
- U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States

D-Link Technical Support over the Telephone

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet

<http://support.dlink.com>

email : support@dlink.com

Tech Support for customers within Canada

D-Link Technical Support over the Telephone: (800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

D-Link Technical Support over the Internet: <http://support.dlink.ca>

email : support@dlink.ca


Tech Support for customers within the United Kingdom & Ireland

D-Link UK & Ireland Technical Support over the Telephone

- + 44 (0)20 7365 8440 (United kingdom)
- + 353 (0)12 421 061 (Ireland)

- Monday to Friday 8:00 am to 10:00 pm
- D-Link Technical Support over the Internet
- <http://www.dlink.co.uk>

Documents / Resources

	<p>D-Link DSL-G604T Wireless ADSL Router [pdf] Instruction Manual DSL-G604T Wireless ADSL Router, DSL-G604T, Wireless ADSL Router, ADSL Router, Router</p>
---	--