

D-Link M30 2-pack Smart Mesh Router



D-Link M30 2-pack Smart Mesh Router User Guide

[Home](#) » [D-Link](#) » D-Link M30 2-pack Smart Mesh Router User Guide 

Contents

- [1 D-Link M30 2-pack Smart Mesh Router](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 How to set up M30 Router](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

D-Link

D-Link M30 2-pack Smart Mesh Router



Product Information

Specifications

- **Product:** M30 Router (2-pack)
- **App:** AQUILA PRO AI
- **Platform:** App Store, Google Play

Product Usage Instructions

Download and Install the AQUILA PRO AI App

Search for and install the free AQUILA PRO AI app from the App Store or Google Play.

Account Activation

- Activate your newly registered account within 7 days. Check your Spam folder for the verification email. Move it to your Inbox and click on the activation button if needed.

Sign In or Create an Account

- Launch the app, and sign in with your email account. If you don't have an account, create one. If you have a D-

Link account, you can sign in to use cloud services.

Install New Device

- Scan the setup code on the device label at the bottom of the router. Follow on-screen instructions to complete the setup.

Set Up as a Router

- Select “Set Up as Router” if you plan to use it as a router.

Configure Wi-Fi Name and Password

- Modify your Wi-Fi name (SSID) and create a unique password for security or use the default credentials.

Set Device Name and Admin Password

- Change the default device password for accessing the router’s configuration page.

Save Device Settings

- To save settings, tap the camera icon and proceed.

Restart and Save Settings

- The device will restart and save its settings.

Connect to Wi-Fi

- Ensure your mobile device is connected to the Wi-Fi network.

Power On Second M30

- Power on the second M30, wait for it to boot up, and follow the on-screen instructions.

Setup Completion

- After adding both M30 2 Packs, verify your connection by connecting to your D-Link router or using devices to connect to your Wi-Fi network.

FAQ

- **Q:** What should I do if I encounter issues during setup?
- **A:** If you face any problems during setup, ensure you follow each step carefully and refer to the troubleshooting section in the user manual. You can also reach out to technical support for assistance.

How to set up M30 Router

How to set up an M30 Router (2-pack) using the AQUILA PRO AI app?

1. Search and install the free AQUILA PRO AI app available on the App Store or Google Play




NOTE: Please activate your newly registered account within 7 days. If the verification email landed in your Spam folder, remember to move the email to your Inbox so that you can click on the activation button for account activation.




2. Launch the AQUILA PRO AI app from the home screen of your device.
3. Sign in on the app using an email account. If you already have a D-Link account, you can tap Sign in. It allows you to use cloud services to control and manage your device including the third-party voice control apps or tap Create Account, if you don't have an account yet then Sign Up.



4. Tap Install New Device or the + icon in the middle. Scan the Setup code on the device label located at the bottom of the router. Follow the on-screen instructions to complete the setup.

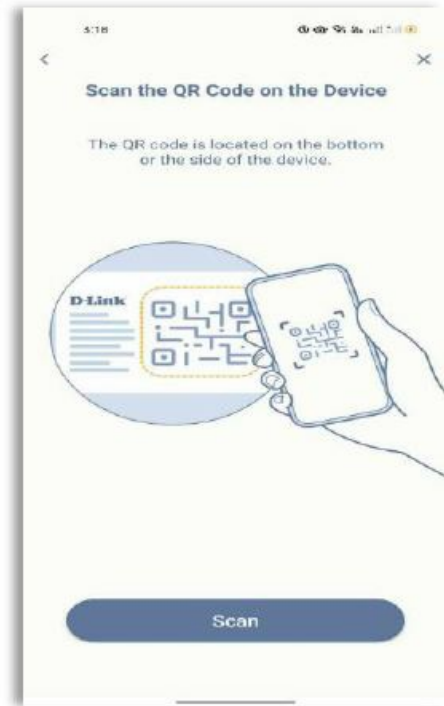

5. Select “Set Up as Router” if you plan to use it as a router.

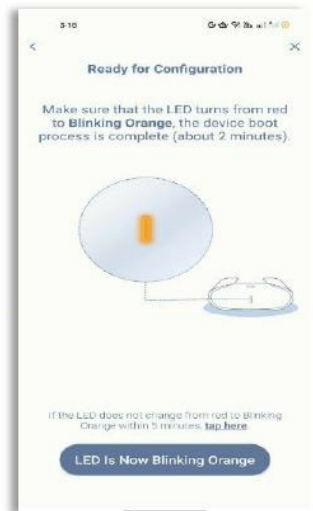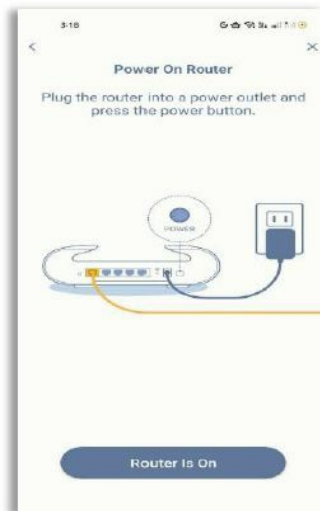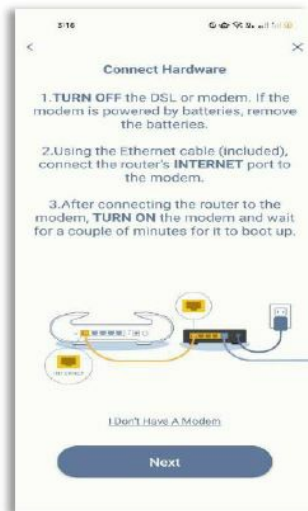

6. Modify your Wi-Fi name (SSID) and secure a unique password for security or you can use the default Wi-Fi name and Password by clicking “Use the default Wi-Fi name and password” at the bottom.

3:19

Wireless Network Setup

Set your Wi-Fi name and password.

Wi-Fi Name

Wi-Fi Password

☐ Use the default Wi-Fi name and password

Next

3:20

Wireless Network Setup

Set your Wi-Fi name and password.

Wi-Fi Name
my_home_wifi

Wi-Fi Password
password098765

☐ Use the default Wi-Fi name and password

Next

7. Set Device Name and Device/Admin Password, then tap NEXT.

NOTE: It is strongly recommended that you change the default device password for accessing the router's configuration page.

3:20

Device Configuration

Set the device name and password for device management.

Device Name

If using Alexa or Google Assistant, the device name should be convenient for use with voice control. For example: Living Room.

Device Password

Next

3:21

Device Configuration

Set the device name and password for device management.

Device Name
Living Room

If using Alexa or Google Assistant, the device name should be convenient for use with voice control. For example: Living Room.



Device Password
password12345

Next

8. To save a screenshot of your device settings, tap the camera icon below, then hit Next.





9. The device is now restarting and saving its settings.

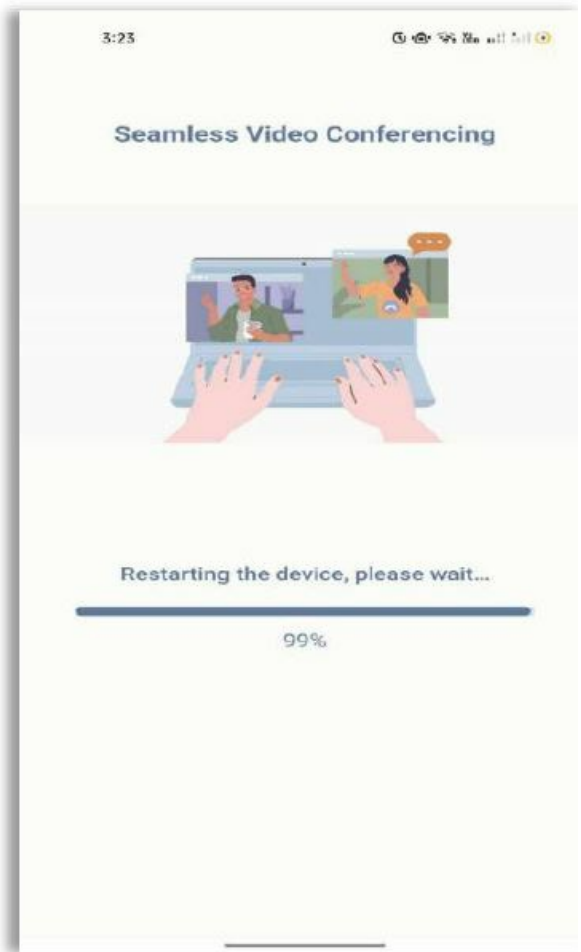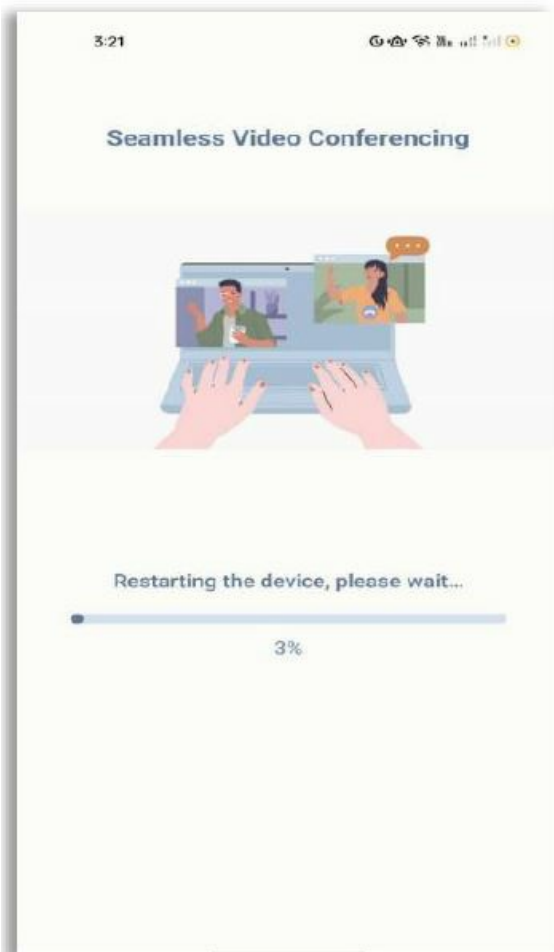


10. Go to the network settings of your mobile device and make sure you are connected to the Wi-Fi.




11. Power on the second M30 and wait for it to boot up (the LED will turn blinking orange to solid white) once it becomes solid white. Click Continue and press Next.

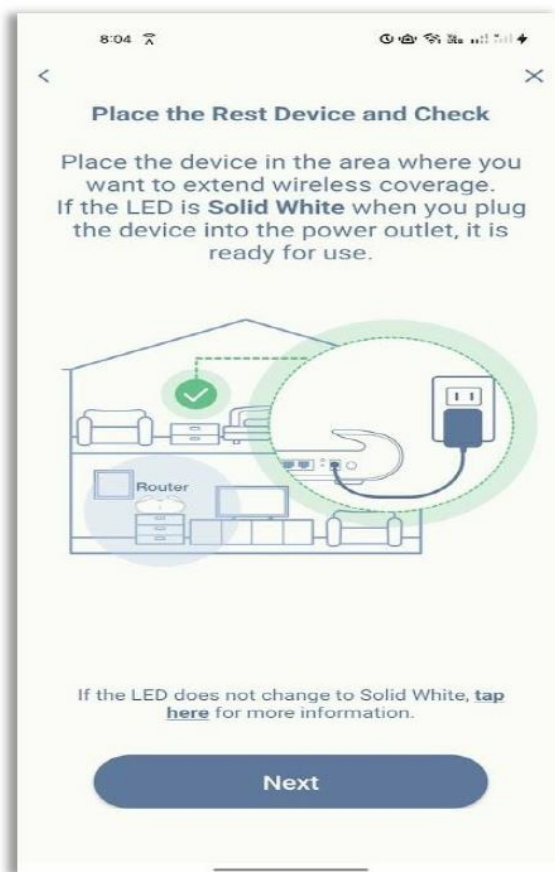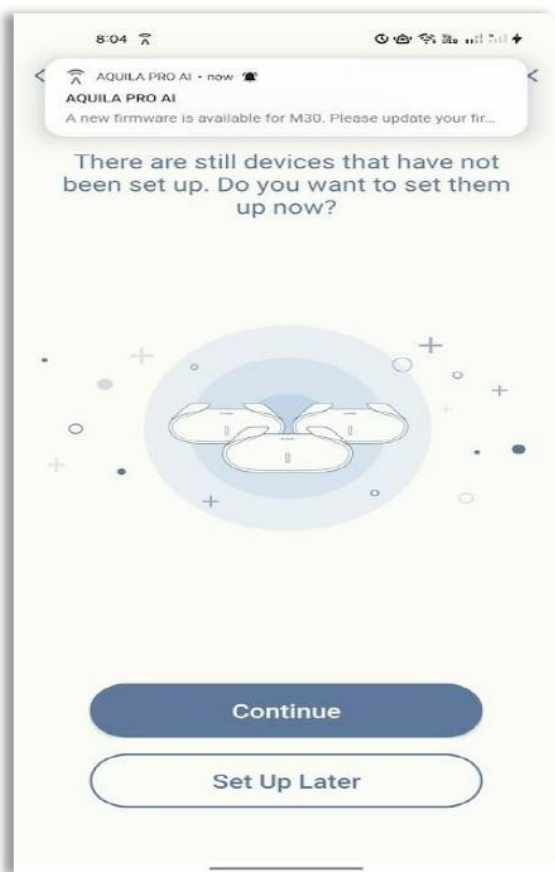

12. The setup is complete. After adding both M30 2 Packs, verify your connection by connecting to your D-Link router to confirm if Wi-Fi is working, or use devices to connect to your Wi-Fi network.

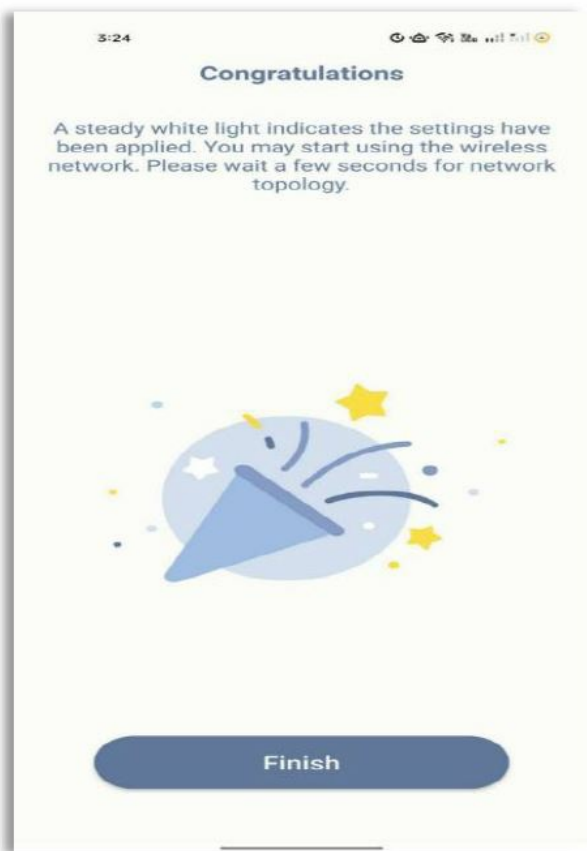

Documents / Resources

	<p>D-Link M30 2-pack Smart Mesh Router [pdf] User Guide</p> <p>M30 2-pack Smart Mesh Router, M30 2-pack, Smart Mesh Router, Mesh Router, Router</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.