



## D-Link Wireless N 300 Router Installation Guide

[Home](#) » [D-Link](#) » D-Link Wireless N 300 Router Installation Guide 

# D-Link®

WIRELESS N 300 ROUTER  
DIR-612

QUICK INSTALLATION GUIDE  
PETUNJUK PEMASANGAN CEPAT



## Contents

- 1 CONTENTS OF PACKAGING
- 2 PRODUCT SETUP
- 3 TROUBLESHOOTING
  - 3.1 SETUP AND CONFIGURATION PROBLEMS
  - 3.2 TECHNICAL SUPPORT
- 4 GPL Code Statement
  - 4.1 Written Offer for GPL and LGPL Source Code
- 5 Documents / Resources
  - 5.1 References
- 6 Related Posts

## CONTENTS OF PACKAGING



### WIRELESS N 300 ROUTER

DIR-612

### POWER ADAPTER

9V 0.6A



### ETHERNET CABLE (CAT5 UTP)

CONNECT THE ROUTER TO YOUR PC DURING SETUP

If any of these items are missing from your packaging, contact your reseller.

## PRODUCT SETUP

### WEB-BASED SETUP

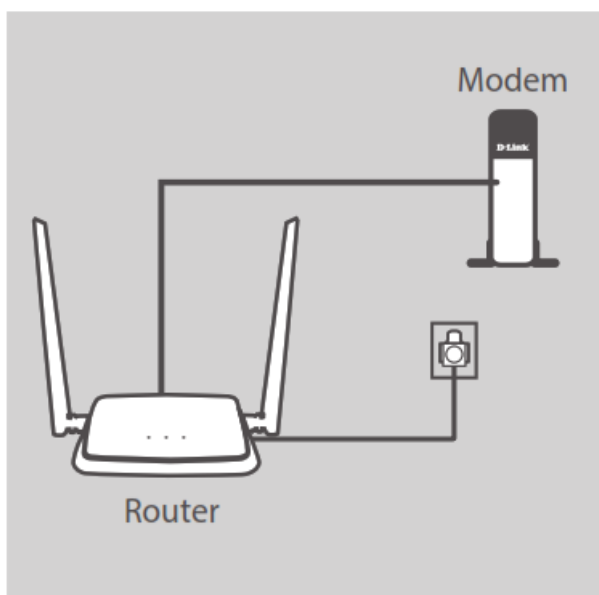
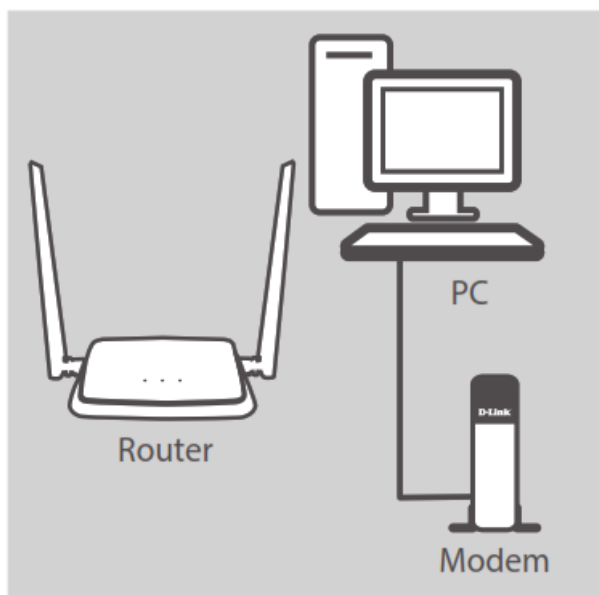


#### Step 1

Position your DIR-612 near your Internet-connected modem and PC. Keep the router in an open area for better wireless coverage.

#### Step 2

Unplug the modem Ethernet cable connected to your computer and plug it into the port labeled 'INTERNET' on the router. Connect the supplied power adapter to the router and a power outlet, then verify that the power LED is on.

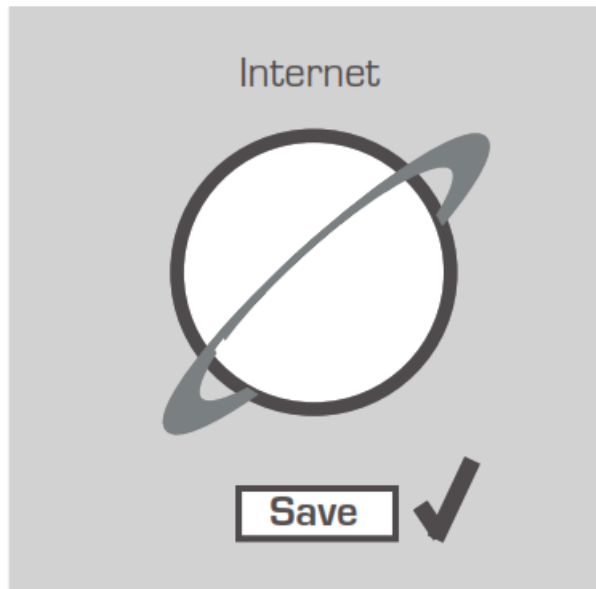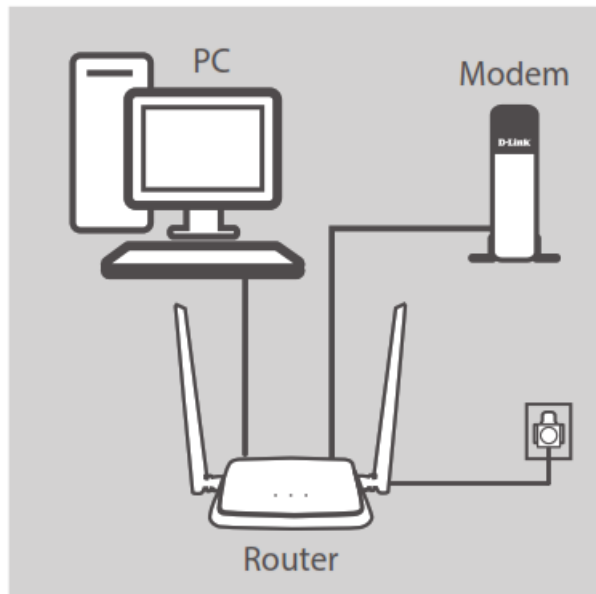

### Step 3

Plug one end of the supplied Ethernet cable into the port labeled '1' on the back of the router and the other end into the Ethernet port on your computer.

### Step 4

Open a browser on the connected computer. If you are not automatically directed to the D-Link Setup Wizard, go to '<http://192.168.0.1>' and follow the onscreen instructions to configure your DIR-612. Use 'admin' as your username and password.

## TROUBLESHOOTING

### SETUP AND CONFIGURATION PROBLEMS

#### 1. HOW DO I CONFIGURE MY DIR-612 ROUTER MANUALLY?

- Connect your PC to the router using an Ethernet cable.
- Open a web browser and enter the address '<http://192.168.0.1>'.
- The default username and password is 'admin'.
- If you have changed the password and can not remember it, you will need to reset the router to return to an empty password field.

## 2. HOW DO I RESET MY DIR-612 ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure the router is powered on.
- Press and hold the reset button at the bottom of the device for 10 seconds.

**Note:** Resetting the router to factory default will erase the current configuration settings. To re-configure, your settings, log into the router as outlined in question 1, then run the Setup Wizard.

## 3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WI-FI NAME (SSID) OR WI-FI PASSWORD?

- For every PC that needs to connect to the router wirelessly, you will need to ensure you use the correct Wi-Fi Name (SSID) and Wi-Fi password.
- Use the web-based user interface (as described in question 1 above) to check or choose your wireless settings.
- Make sure you write down these settings so that you can enter them for each wirelessly connected PC. The back of this document features an area to record this important information.

## 4. WHY CAN'T I GET AN INTERNET CONNECTION?

- For ADSL users, please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password is correct.

## TECHNICAL SUPPORT

You can find software updates and user documentation on the D-Link website.

### Tech Support for customers in

#### Australia:

Tel: 1300-700-100

24/7 Technical Support

Web: <http://www.dlink.com.au>

E-mail: [support@dlink.com.au](mailto:support@dlink.com.au)

#### India:

Tel: +91-832-2856000 or 1860-233-3999

Web: [www.dlink.co.in](http://www.dlink.co.in)

E-Mail: [helpdesk@in.dlink.com](mailto:helpdesk@in.dlink.com)

**Singapore, Thailand, Indonesia,**

**Malaysia, Philippines, Vietnam:**

Singapore – [www.dlink.com.sg](http://www.dlink.com.sg)

Thailand – [www.dlink.co.th](http://www.dlink.co.th)

Indonesia – [www.dlink.co.id](http://www.dlink.co.id)

Malaysia – [www.dlink.com.my](http://www.dlink.com.my)

Philippines – [www.dlink.com.vn](http://www.dlink.com.vn)

Vietnam – [www.dlink.com.vn](http://www.dlink.com.vn)

#### D-Link Middle East

##### Dubai, U.A.E.

Tel: +971-4-8809022

Fax: +971-4-8809066 / 8809069

Technical Support: +971-4-8809033

General Inquiries: [info.me@me.dlink.com](mailto:info.me@me.dlink.com)

Tech Support: [support.me@me.dlink.com](mailto:support.me@me.dlink.com)

##### Egypt:

Technical Support Call Center: +20 2258 66777

General Inquiries: [info.eg@me.dlink.com](mailto:info.eg@me.dlink.com)

Tech Support : [support.eg@me.dlink.com](mailto:support.eg@me.dlink.com)

##### Kingdom of Saudi Arabia:

Technical Support:

**Korea:**

Tel : 1899-3540  
Monday to Friday 9:30am to 6:30pm  
Web : <http://d-link.co.kr>  
E-mail : [support@kr.dlink.com](mailto:support@kr.dlink.com)

**New Zealand:**

Tel: 0800-900-900  
24/7 Technical Support  
Web: <http://www.dlink.co.nz>  
E-mail: [support@dlink.co.nz](mailto:support@dlink.co.nz)

South Africa and Sub Sahara

**Region:**

Tel: +27 12 661 2025  
08600 DLINK (for South Africa only)  
Monday to Friday 8:30am to 9:00pm South

**Africa Time**

Web: <http://www.d-link.co.za>  
E-mail: [support@za.dlink.com](mailto:support@za.dlink.com)

+966 1121 70009

General Inquiries: [info.sa@me.dlink.com](mailto:info.sa@me.dlink.com)

Tech Support: [support.sa@me.dlink.com](mailto:support.sa@me.dlink.com)

**Pakistan:**

Technical Support: +92-21-34548310, 34305069

General Inquiries: [info.pk@me.dlink.com](mailto:info.pk@me.dlink.com)

Tech Support: [support.pk@me.dlink.com](mailto:support.pk@me.dlink.com)

**Morocco:**

Phone office: +212 700 13 14 15

Email: [morocco@me.dlink.com](mailto:morocco@me.dlink.com)

**Bahrain:**

Technical Support: +973 1 3332904

Tech Support: [support.me@me.dlink.com](mailto:support.me@me.dlink.com)

**Kuwait:**

Tech Support: [kuwait@me.dlink.com](mailto:kuwait@me.dlink.com)

## GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License (“**GPL**”) or GNU Lesser General Public License (“**LGPL**”). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to view the full GPL Code Statement at:

<https://tsd.dlink.com.tw/GPL>

The GPL Code and LGPL Code used in this product are distributed WITHOUT ANY WARRANTY and are subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

## Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL. Please direct all inquiries to:

**Email:**

[GPLCODE@dlink.com](mailto:GPLCODE@dlink.com)

**Snail Mail:**

Attn: GPLSOURCE REQUEST  
D-Link Systems, Inc.

## Documents / Resources

	<a href="#">D-Link Wireless N 300 Router</a> [pdf] Installation Guide Wireless N 300 Router, DIR-612
---	---

## References

- [🌐\\_μð\\_μÅ©ÄÜ\\_®%Æ](#)
- [D For Home | D-Link](#)
- [D D-Link Southern Africa - Quality WiFi Products That Connect You to More](#)
- [D D-Link - Indonesia](#)
- [D Consumer | D-Link](#)
- [D Home Networking Solutions - D-Link Australia New Zealand](#)
- [D D-Link - Thailand](#)
- [D Home Networking Solutions - D-Link Australia New Zealand](#)
- [D D-Link - Malaysia](#)
- [D D-Link - Philippines](#)
- [D D-Link - Singapore](#)
- [D D-Link - Vietnam](#)
- [D D-Link | Technical Support | GPL Source Code Support](#)