

**Contents** [[hide](#)]

- [1 DAEWOO HEA1137 Convector Heater with Turbo and Timer User Manual](#)
- [2 Explanation of Symbols](#)
- [3 Before the first time you use your Convector Heater](#)
- [4 Assembling Your Convector Heater with Turbo & Timer](#)
- [5 Description of Parts](#)
- [6 Operating Instructions](#)
- [7 Selecting the Power Mode](#)
- [8 Using the Thermostat](#)
- [9 Using the Turbo Fan](#)
- [10 Using the Convector Timer](#)
- [11 The Timer Slide Switch settings are:](#)
- [12 Care and Use of your Convector Heater with Turbo & Timer](#)
- [13 Technical Specification](#)
- [14 Recycling Information](#)
- [15 Disposal of the Product](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)

DAEWOO HEA1137 Convector Heater with Turbo and Timer User Manual



READING AND STORING THE USER MANUAL

Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Convector**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit
- **WARNING:** In order to avoid overheating, **DO NOT COVER** the heater.
- **DO NOT** install the appliance directly below an electrical

- **DO NOT** use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- **DO NOT use this heater with an extension**
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION — some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**
- **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.

- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales service in order to avoid a hazard
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs,
- Allow the unit to cool before
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- Never place the appliance near to flammable material or high pressure containers. (e.g., Paper, wood, petrol, solvents, spray canisters etc.)
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
- The appliance should not be installed in areas which have a fire-risk, such as garages, stables or wooden sheds; this is applicable also for rooms in which highly inflammable gasses or dust can develop. Danger of fire!!
- Unplug after each Use Grasp the plug, not the cord.

CAUTION

Keep Hearth Rugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of air from the heater and damage both soft furnishings and heater.

The heater must stand on a solid, level non- flammable surface such as stone,

slate, ceramic or concrete.

DO NOT Stand the heater on a carpet, rug or other soft floor covering.

DO NOT COVER THE HEATER

THIS HEATER MUST ONLY BE OPERATED IN THE UPRIGHT POSITION WITH THE FEET FITTED.

THIS APPLIANCE MUST BE EARTHED

This appliance has been ERP classified as a portable space heater and should only be used for supplementary, secondary or temporary heating. It should not be considered for primary permanent heating in a room or dwelling.

During the first few minutes of initial use, you may notice a slight odour and a little smoke. This is normal and will quickly disappear, It is the coating applied to the heating elements to prevent any corrosion during transit.

Explanation of Symbols

The following warning symbols or words are used in this instruction manual:

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site

This symbol provides useful additional information on the use of this product.

This symbol indicates that the supply uses an alternating current mains supply.

Before the first time you use your Convactor Heater

Remove all packing materials and discard responsibly.


Ensure that all parts are present before assembling your heater – see

Description of Parts below:

Assembling Your Convector Heater with Turbo & Timer

Before using this heater, the feet must be fitted to the unit.

Attach the feet to the base of the heater using the six self-tapping screws provided, taking care to ensure that they are located correctly in the holes at either end of the base of the appliance:

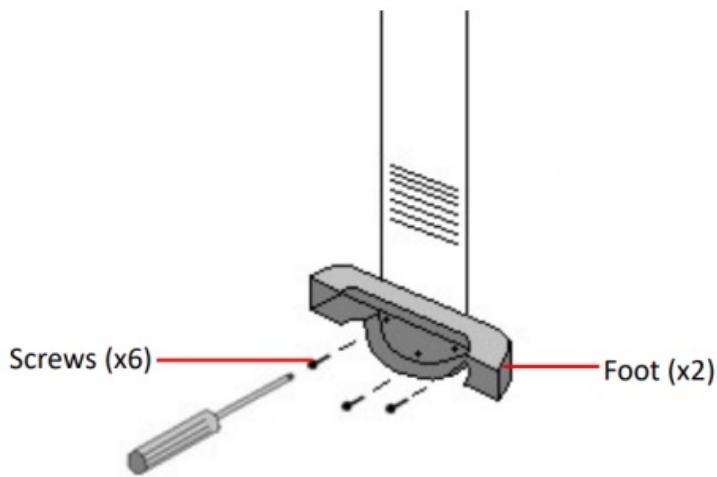

Description of Parts

Operating Instructions

Using in Normal Convector Mode

- Place the heater on a solid, level non-flammable
- Ensure that the Slide Switch on the timer is in the 'I'
- Ensure that the Mode Switch is in the off '0'
- Insert the mains plug into the mains

Selecting the Power Mode

- Rotate the Mode Switch to the 'I' position to select the low heat setting (750w).
- For the medium heat setting (1250w) rotate the Mode Switch to the 'II'
- For the high heat setting (2000w) rotate the Mode Switch to the 'III'

Using the Thermostat

- Rotate the Thermostat fully clockwise to the maximum position; the Indicator Light will illuminate to show the unit is producing heat.
- Once the room has reached the desired temperature, turn the thermostat anticlockwise until it just clicks off and the Indicator Light goes out. Turn the thermostat back up very slightly. The room temperature will now be maintained. Further adjustment of the Thermostat may be necessary to 'fine tune' the temperature setting.
The Indicator Light will go on and off during use to indicate that the set temperature is being maintained, this is quite normal.
- Return the Mode Switch to the (O) position to switch off after

Using the Turbo Fan

The Turbo Fan can be used independently of the heating function.


Press the Turbo Switch on the front panel of the heater to operate the Turbo mode, the switch will illuminate to show the Turbo is on.

The Turbo Fan will only operate when the thermostat is turned clockwise and the indicator light is on.

The Turbo Fan can be used when in heating mode (see above) to blow warm air into the room or without heating mode to blow cool air.

Using the Convector Timer

The timer is a 24 hour type and has 96 segments around the outside; each segment is equivalent to 15 minutes in time.

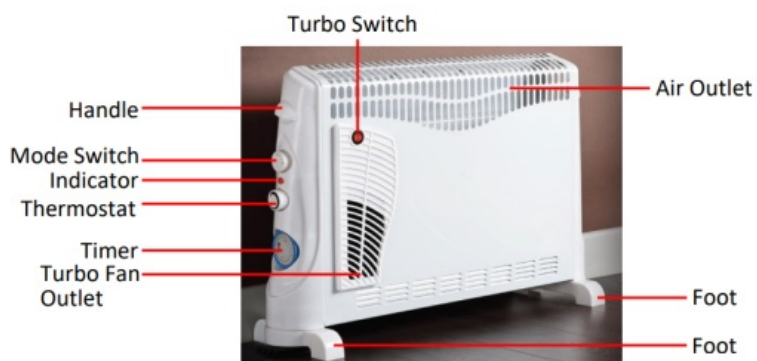

The Timer Slide Switch settings are:

I	(ON) The heater will work normally and is not timed
	(TIMED) The heater is in timer mode
O	(OFF) The heater is switched off and will not operate.

- Insert the mains plug into the nearest mains

The heater must be left connected to the mains in order for the timer to operate. Set the correct time on the dial by rotating the dial clockwise until the correct time lines up with the time pointer. i.e. to set the time for 8.00pm in the evening rotate the dial until the time pointer aligns with 20 on the dial.

- Move the slide switch to the timed mid
- Pull the segments **out** for the desired time when the heater needs to be
- Push the segments **in** for the time when the heater needs to be
- Set the convector heater heat setting as
- The convector heater will now come on only at the time set on the

Whilst using the heater in timer mode, due consideration must be given to the fact that the heater may come on whilst unattended.

Care and Use of your Convector Heater with Turbo & Timer

- Always disconnect the convector heater from the mains power supply and allow to cool before cleaning.
- Clean outside of the convector heater with a clean damp Never clean with harsh or abrasive cleaners.
- Do not submerge any part of convector heater in water or any other

Technical Specification

Rated Voltage	220-240V~ 50Hz
Rated Power	1800-2000W
Model Number	HEA1137

Protection Class	I (This Appliance Must Be Earthed)
------------------	------------------------------------

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician. If you need to remove the plug – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities. Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.




■ Disposal of the Product




You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

Read More About This Manual & Download PDF:

Documents / Resources

	<p>DAEWOO HEA1137 Convector Heater with Turbo and Timer [pdf] User Manual</p> <p>HEA1137, HEA1137 Convector Heater with Turbo and Timer, HEA1137, Convector Heater with Turbo and Timer, Heater with Turbo and Timer, with Turbo and Timer, Turbo and Timer, and Timer, Timer</p>
---	---

References

-  [Daewoo Electricals | Official UK Daewoo Online Shop](#)
-  [Eurosonic Group | ESG Ltd](#)
-  [Everything you need to know to Recycle More](#)
- [User Manual](#)

Daewoo and Timer, Convector Heater with Turbo and Timer, Daewoo, HEA1137, HEA1137 Convector Heater with Turbo and Timer, Heater with Turbo and Timer, Timer, Turbo and Timer, with Turbo and Timer

—Previous Post

DAEWOO HEA1895 11 Fin 2500W Oil Filled Radiator with Timer User Manual

Next Post—

DAEWOO HEA1893 2 Bar Ceramic Heater User Manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.