



## DAEWOO SDA1805 Electric Single Induction Hob with Built In Timer Instruction Manual

[Home](#) » [Daewoo](#) » DAEWOO SDA1805 Electric Single Induction Hob with Built In Timer Instruction Manual 

DAEWOO SDA1805 Electric Single Induction Hob with Built In Timer



## Contents

- 1 READING AND STORING THE USER MANUAL
- 2 IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE
- 3 Explanation of Symbols
- 4 Description of Parts
- 5 Before the First Use of Your Induction Hob
- 6 Suitable Kitchenware
- 7 Setting up Your Induction Hob
- 8 Pre-Set Functions
  - 8.1 Timer
- 9 Cleaning your Induction Hob
- 10 Non-Rewireable Mains Plug
- 11 Recycling Information
- 12 WARRANTY
- 13 Customer Support
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts

## READING AND STORING THE USER MANUAL

**IMPORTANT** – RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

## IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Induction Hob.**
- Before plugging your unit into the mains, visually check that it is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- **DO NOT** use this product with a programmer, timer, separate remote-control system or any other such device.
- **DO NOT** immerse this appliance in water or any other liquids.
- Cooking appliances should be positioned in a stable situation with the handles (if applicable) positioned to avoid spillage of liquids.



- **DO NOT** touch hot surfaces. Accessible surfaces are liable to get during use.
- Oven gloves should be used whilst using the Induction Hob.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use if the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.

- If the power cable is damaged, it should only be replaced by suitable qualified personnel in order to avoid a hazard.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Never place the appliance near to flammable material or high pressure containers.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** immerse the appliance, base or its cord in water or any other liquids.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with or place beneath cupboards, curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** cover this appliance.
- Never place this appliance on an electric, gas, or any other type of hob.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface.
- **DO NOT** place or leave any magnetic objects (e.g. credit cards, memory cards) or electronic devices (e.g. computers, mobile phones, MP3 players) near the appliance, as they may be affected by its electromagnetic field.



- This appliance complies with electromagnetic safety standards.
- Persons with cardiac pacemakers or other electrical implants must consult their doctor before using this appliance to ensure the implants will not be affected by the electromagnetic field.
- Failure to follow this advice could be fatal or seriously injure the user.

## **THIS APPLIANCE MUST BE EARTHED**

### **Explanation of Symbols**

The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.




Area.

Products labelled with this symbol conform to applicable provisions of the European Economic



This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.



 You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.



This symbol indicates that the surface is gets hot and care must be taken.

 
## Description of Parts

1. Crystal Glass cooking surface
2. Cooling Fan Outlet
3. Cooling Fan Inlet
4. Control Panel



### Control Panel

- 5. Pre-set Functions
- 6. Power ON/OFF Button
- 7. Function Button
- 8. Timer Button
- 9. Time/Temp Adjust Buttons
- 10. LED Display

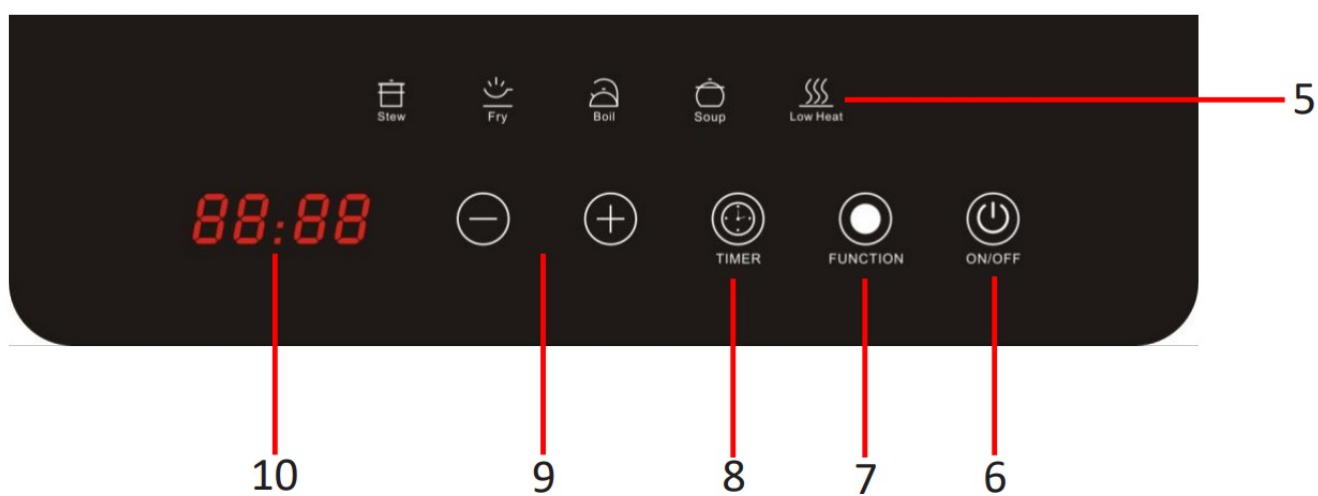

### Before the First Use of Your Induction Hob

- Remove all packing materials and discard responsibly.
- Ensure all parts are present see Description of Parts above.

- Check that there is no damage to the mains cable or product.
- Ensure that you clean your Induction Hob before first and every use.

## Suitable Kitchenware

A pan of between 12 and 26cm in diameter is recommended for best results when using this Induction Hob. Smaller pans are not recommended as sufficient contact with the element may not be made. Ensure larger pans do not protrude beyond the edge of the Induction Hob or obscure the Control Panel (4). As induction cooking uses magnetic fields to heat the pan/vessel, only certain pans can be used, below are some examples of suitable and non-suitable kitchenware for this Induction Hob.

### Types of Pots & Pans suitable for use with an Induction Hob (Inductive Base)

- Steel.
- Cast Iron.
- Enamelled Iron.
- Induction Compatible Stainless-Steel Pans.
- Pots & Pans should be flat bottomed, with a diameter of between 12 and 26cm.

- **Enameled Iron Pot**



- **Iron or Enameled Iron Pot**



- **Cast Iron Pan**



- **Iron Pot**



- **Deep-Fry Pan**



- **Stainless Steel Pot**



- **Iron Plate**



### **Types of Pots & Pans NOT suitable for use with an Induction Hob (Non-Inductive Base)**

- Heat resistant glass.
- Ceramic.
- Copper.
- Aluminium.
- Do not use rounded bottomed pots and pans.
- Do not use pots and pans with stands or legs.
- Do not use pots and pans with a diameter of less than 12cm.
- **Rounded Bottom Pot**





- Aluminum Copper Pot



- Bottom Measuring Less than 12 cm



- Pot with stands



- **Ceramic Pot**



- **Heat-Resistant Glass Pot**



 
Always check the suitability of the pan in the manufacturers care and use instructions supplied with the pan.

### **Setting up Your Induction Hob**

1. Place the Induction Hob on a solid, level, heat resistant surface clear of all obstructions as described above.
2. Plug the Induction Hob into a suitable socket outlet.
3. Press the **Power ON/OFF Button** (6), On will be displayed on the LED Display (10).

4. Press the **Function Button** (7) until the required function is indicated by the desired **Pre-Set Function** (5) being illuminated.

## Pre-Set Functions

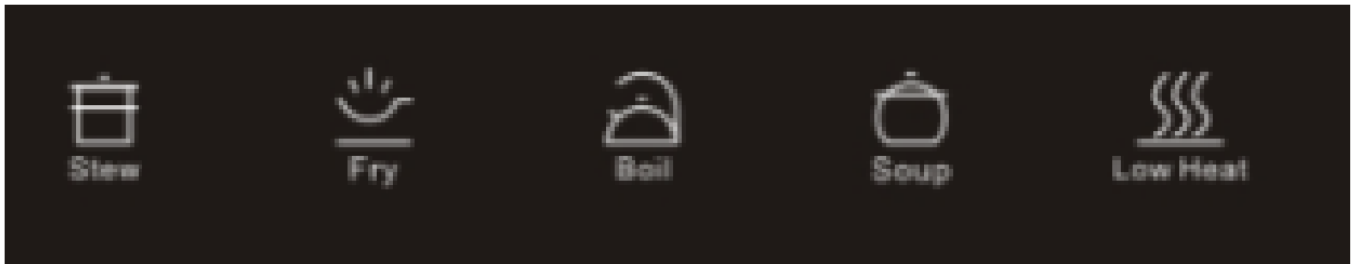

1. **Stew:** This is a manual cooking function with a default setting of 1300W. This wattage can be adjusted from 200-2000W using the Time/Temp Adjust Buttons (9). This function will auto shut off after 2 hours.
2. **Fry:** This is a manual cooking function with a default setting of 2000W. This wattage can be adjusted from 200-2000W using the Time/Temp Adjust Buttons (9). This function will auto shut off after 2 hours.
3. **Boil:** This is a manual cooking function with a default setting of 2000W. This wattage cannot be adjusted and will auto shut off after 18 minutes.
4. **Soup:** This is a manual cooking function with a default setting of 1600W. This wattage cannot be adjusted. After a period of 12 minutes the wattage will automatically adjust reducing down to 800W, intermittently on and off allowing the food to simmer. This function will auto shut off after 2 hours.
5. **Low heat:** This is an automatic cooking function with a default setting of 500W, which will intermittently switch on and off to keep cooked food warm. The wattage cannot be adjusted and the function will auto shut off after one 1 hour.

## Timer

This hob is fitted with a cooking timer, to use the timer (on any function) press the Timer Button (8) and then use the **Time/Temp Adjust Buttons** (9) to set the cooking time from 1-4 hours. Pressing the **Time/Temp Adjust Buttons** (9) will adjust the cooking time in 1 minute increments up/down accordingly, pressing and holding the **Time/Temp Adjust Buttons** (9) will adjust the cooking time in 10 minute increments up/down accordingly.



Do not leave the appliance unattended whilst in use.  
Do not allow pans to boil over as damage may occur to the hob.

## Cleaning your Induction Hob

- Always unplug the Induction Hob from the mains supply and allow to cool before cleaning.
- **DO NOT** submerge any part of the main body or mains cable in water or any other liquids.
- Wipe clean with a soft damp cloth.
- Never clean any part of the Induction Hob with harsh or abrasive cleaners.

## Error Codes

<b>Error Code</b>	<b>Possible Cause</b>
E0	There is no pan or an unsuitable pan on the appliance
E1	Supply voltage is too low (less than 88V)
E2	Supply Voltage is too high (more than 280V)
E3	The temperature of the ceramic plate surface is too high
E4	Ceramic plate temperature sensor has a bad connection
E5	The heat sensor of the radiator is overheated or the fan is disconnected
E6	The heat sensor of the radiator is disconnected

## Technical Specification

Rated Voltage	220-240V~ 50-60Hz
Rated Power	2000W
Model Number	SDA1805
Protection Class	II

## Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug –**DISCONNECT FROM THE MAINS**– and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.


## Recycling Information

### Disposal of the Packaging

- Dispose of paper and cardboard in appropriate paper recycling facilities.
- Dispose of recyclable plastics in appropriate plastic recycling facilities.
- Dispose of non-recyclable plastics in the appropriate plastics collection service.

 
### Disposal of the Product



 You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find

out your nearest recycling site.

## WARRANTY

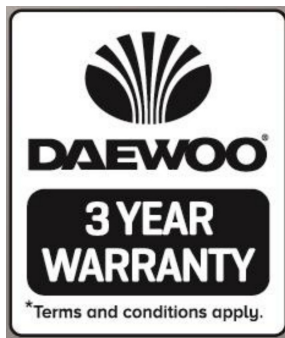

Please refer to the warranty section for terms of your extended guarantee.

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. **(Note:** products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty\*please register your purchase online within 28 days of the original purchase date by registering at: <https://help.daewooelectricals.com/hc/en-gb> or [Contact Us](#) ([daewooelectricals.com](https://daewooelectricals.com))

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

**Daewoo is a registered trademark.**

Produced and imported under license by

Eurosonic [Group Limited](#)

Brightgate House

1 Brightgate Way

Manchester M32 0TB UK

EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006

[www.esgltd.com](http://www.esgltd.com)

## Customer Support


Should you require any product information, replacement parts or accessories, please contact our customer care team at [help@daewooelectricals.com](mailto:help@daewooelectricals.com) or call 0161 831 7879.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance








---

## Documents / Resources

	<p><a href="#">DAEWOO SDA1805 Electric Single Induction Hob with Built In Timer</a> [pdf] Instruction Manual</p> <p>SDA1805 Electric Single Induction Hob with Built In Timer, SDA1805, Electric Single Induction Hob with Built In Timer, Single Induction Hob with Built In Timer, Induction Hob with Built In Timer, Hob with Built In Timer, Built In Timer, Timer</p>
---	--

## References

-  [Daewoo Electricals | Official UK Daewoo Online Shop](#)
-  [Eurosonic Group | ESG Ltd](#)
-  [Eurosonic Group | ESG Ltd](#)
-  [Everything you need to know to Recycle More](#)
-  [Contact Us | Daewoo Electricals](#)
- [User Manual](#)