 




dahua ARM320-W2 Wireless Input Expander User Guide

[Home](#) » [Dahua](#) » dahua ARM320-W2 Wireless Input Expander User Guide 

 
dahua ARM320-W2 Wireless Input Expander User Guide

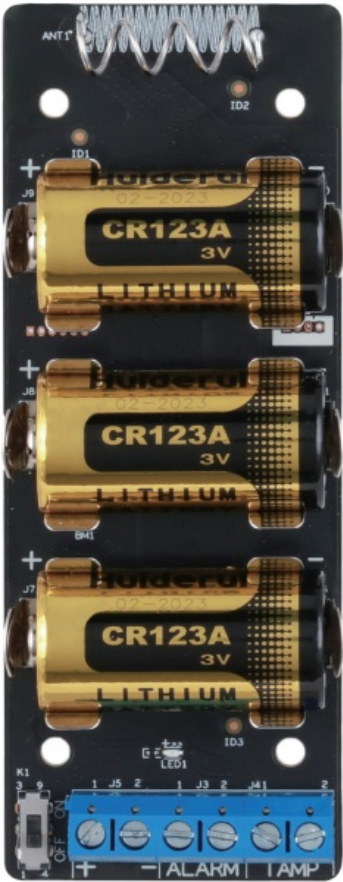

Contents

- [1 Checklist](#)
- [2 Structure](#)
- [3 Installation](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Checklist

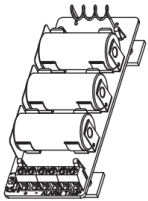

Quick Start
Guide

 


× 4


Legal and regulatory
information



× 4


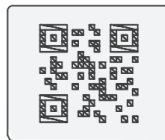



Structure

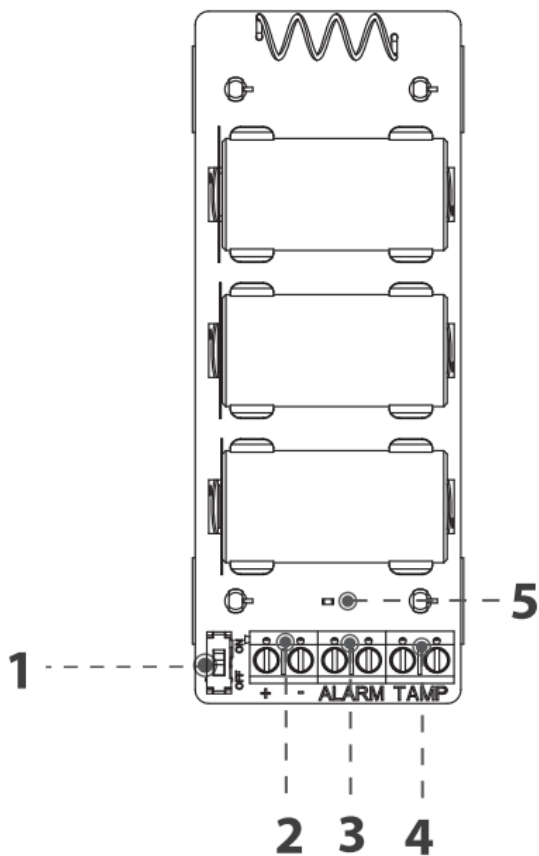 

- 1. On/Off switch
- 2. Power Output
- 3. Alarm Input
- 4. Tamper Input
- 5. Indicator

   Installation

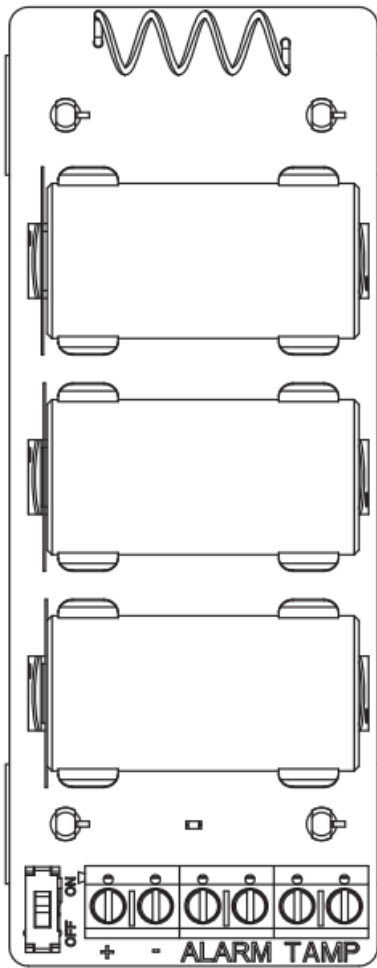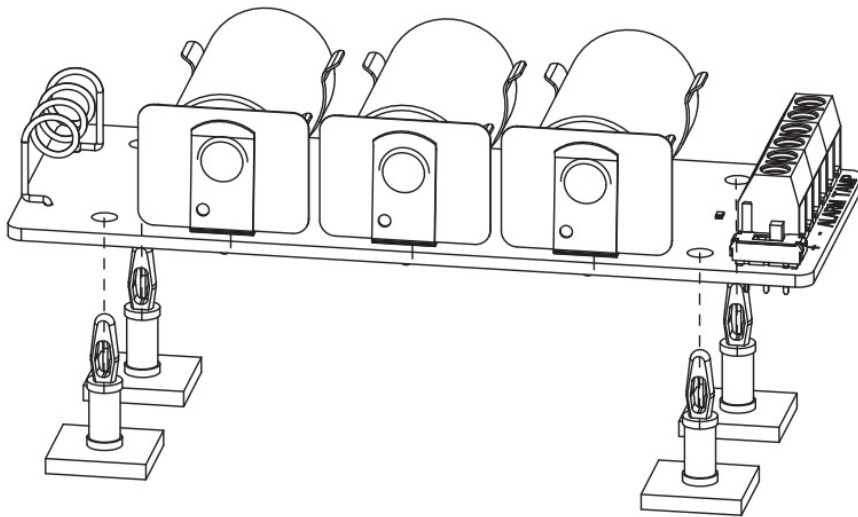


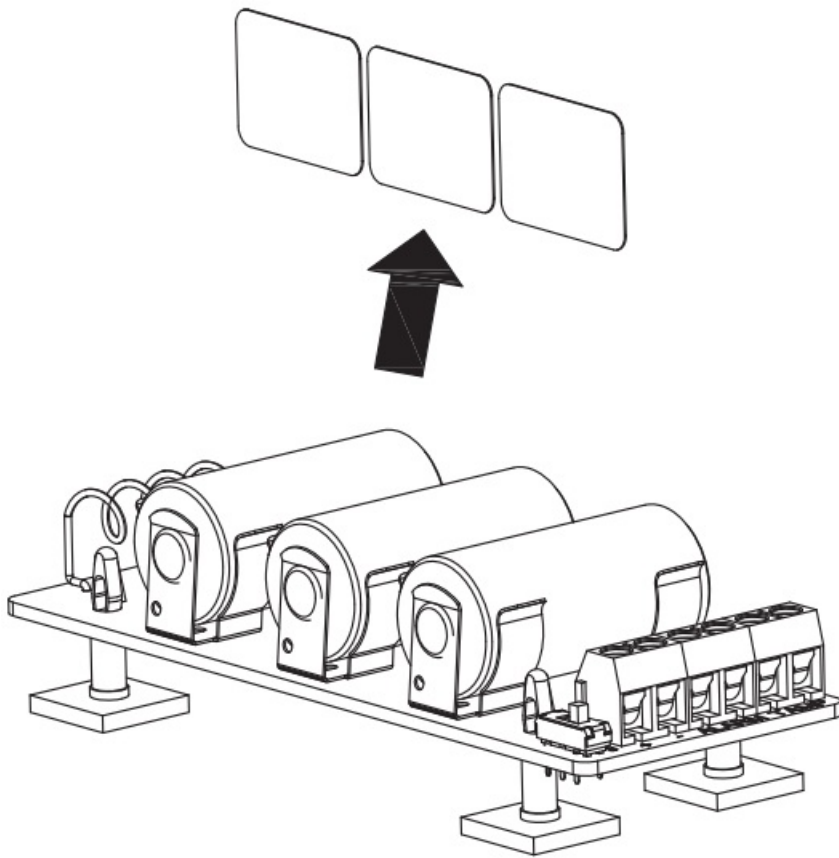

Fixing the Wireless Input Expander


Fix the Expander onto a flat surface, and unplug the mylar film.

Adding the Wireless Input Expander to the Hub

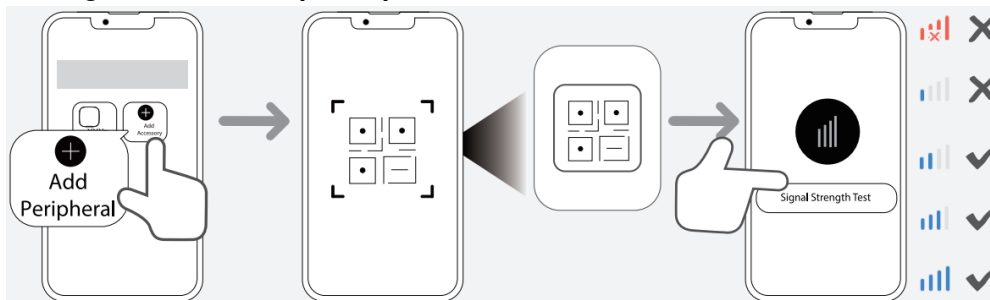

- Make sure that you have added the hub to DMSS app.
- Make sure that the version of the app is 1.99.420 or later, and the hub is V1.001.0000006.0.R.230404 or later.

Installing the Wireless Input Expander

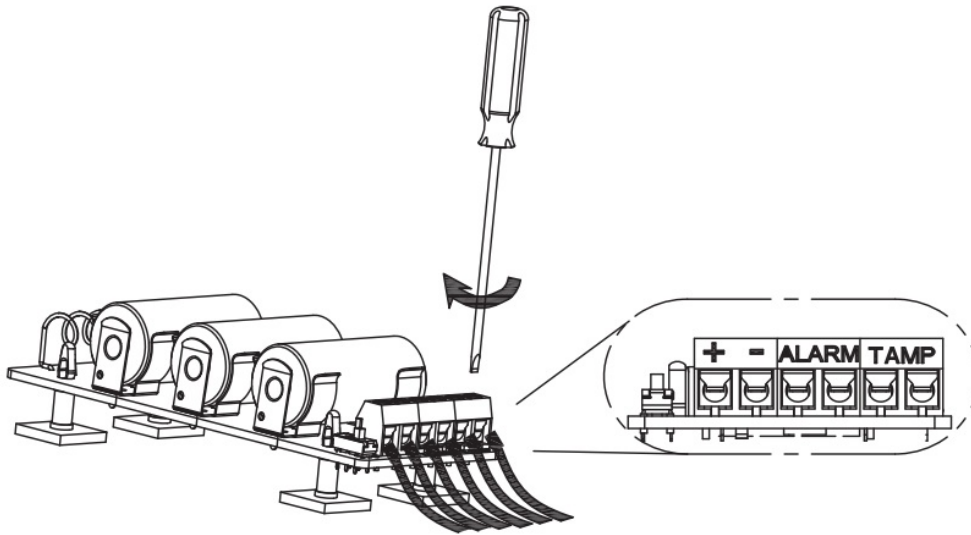

Scan the QR code on the package to receive the user's manual for more information on the device and its installation procedures.

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1399, Binxing Road, Binjiang District, Hangzhou, P. R. China

Website: www.dahuasecurity.com

Email: dhoverseas@dhvisiontech.com

Tel: +86-571-87688888 28933188

Postcode: 310053



Documents / Resources



[dahua ARM320-W2 Wireless Input Expander](#) [pdf] User Guide

ARM320-W2 Wireless Input Expander, ARM320-W2, Wireless Input Expander, Input Expander, Expander