

dahua HFW2541S-S Bullet Network Camera User Guide

Home » Dahua » dahua HFW2541S-S Bullet Network Camera User Guide 🖫

Contents

- 1 dahua HFW2541S-S Bullet Network Camera
- **2 Product Information**
- 3 Foreword
- **4 Safety Instructions**
- **5 Transportation Requirements**
- **6 Operation Requirements**
- 7 Maintenance Requirements
- 8 Cable
- 9 Network Configuration
- 10 Initializing the Camera
 - 10.1 Changing the Device's IP Address
- 11 Installation
- 12 Dimensions
- 13 Installing the Camera
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



dahua HFW2541S-S Bullet Network Camera



Product Information

Specifications

• Product Name: Bullet Network Camera

• Manufacturer: ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

• **Version:** V1.0.2

Foreword

This manual introduces the installation and operations of the network camera. It is important to read this manual carefully before using the device and keep it safe for future reference.

Safety Instructions

The following signal words might appear in the manual:

| Signal Words | Meaning |
|--------------|--|
| Caution | Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury. |
| Warning | Indicates a potential risk which, if not avoided, may result in property damage, data loss, reductions in performance, or unpredictable results. |
| Note | Provides additional information as a supplement to the text. |

Revision History

| Version | Revision Content Release | |
|---------|---|--|
| V1.0.2 | Updated the information on installing the camera. September 2022 | |
| V1.0.1 | Updated Important Safeguards and Warnings. April 2021 | |
| V1.0.0 | First release. May 2019 | |

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. It is important to comply with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people. This includes implementing measures such as providing clear and visible identification to inform people of the existence of the surveillance area and providing required contact information.

About the Manual

The manual is for reference only. Slight differences might be found between the manual and the product. We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual. The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper User Manual, use our CD-ROM, scan the QR code, or visit our website.

Quick Start Guide

The Quick Start Guide provides instructions on how to quickly set up and use the network camera.

Important Safeguards and Warnings

This section covers the proper handling of the device, hazard prevention, and prevention of property damage. It is important to read this section carefully before using the device and comply with the guidelines when using it.

Transportation Requirements

- Transport the device under allowed humidity and temperature conditions.
- Pack the device with packaging provided by its manufacturer or packaging of the same quality before transporting it.
- Avoid placing heavy stress on the device, violently vibrating it, or immersing it in liquid during transportation.

Storage Requirements

- Store the device under allowed humidity and temperature conditions.
- Avoid placing the device in a humid, dusty, extremely hot, or cold site that has strong electromagnetic radiation or unstable illumination.
- Avoid placing heavy stress on the device, violently vibrating it, or immersing it in liquid during storage.

Installation Requirements

• Strictly comply with the local electrical safety code and standards.

- Check whether the power supply is correct before operating the device.
- Follow the electrical requirements to power the device.
- Select a power adapter that conforms to the requirements of ES1 in IEC 62368-1 standard and is no higher than PS2.
- The power supply requirements are subject to the device label. It is recommended to use the power adapter provided with the device.

FAQ

Q: Where can I find the detailed user manual?

A: For detailed information, please refer to the paper User Manual, use our CD-ROM, scan the QR code, or visit our website.

Foreword

- General This manual introduces the installation and operations of network cameras.
- Read carefully before using the device, and keep the manual safe for future reference.

Safety Instructions

The following signal words might appear in the manual.

| Signal Words | Meaning |
|--------------|---|
| WARNING | Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury. |
| CAUTION | Indicates a potential risk that, if not avoided, may result in property damage, data loss, reductions in performance, or unpredictable results. |
| NOTE | Provides additional information as a supplement to the text. |

Revision History

| Version | Revision Content | Release Date |
|---------|---|----------------|
| V1.0.2 | Updated the information on installing the camera. | September 2022 |
| V1.0.1 | Updated "Important Safeguards and Warnings." | April 2021 |
| V1.0.0 | First release. | May 2019 |

Privacy Protection Notice

 As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to comply with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures that include but are not limited to providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.
- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper User Manual, use our CD-ROM, scan the QR code, or visit our official website.
- The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All the designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual.
- Please contact customer service for the latest program and supplementary documentation.
- There might be deviations in the description of the technical data, functions, and operations, or errors in the print. If there is any doubt or dispute, we reserve the right to a final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks, and the company names in the manual are the properties of their respective owners.
- Please visit our website, and contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right to a final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, and comply with the guidelines when using it.

Transportation Requirements

- Transport the device under allowed humidity and temperature conditions.
- Pack the device with packaging provided by its manufacturer or packaging of the same quality before transporting it.
- Do not place heavy stress on the device, violently vibrate, or immerse it in liquid during transportation.

Storage Requirements

- Store the device under allowed humidity and temperature conditions.
- Do not place the device in a humid, dusty, extremely hot, or cold site that has strong electromagnetic radiation

or unstable illumination.

• Do not place heavy stress on the device, violently vibrate, or immerse it in liquid during storage.

Installation Requirements

- Strictly comply with the local electrical safety code and standards, and check whether the power supply is correct before operating the device.
- Please follow the electrical requirements to power the device.
 - When selecting the power adapter, the power supply must conform to the requirements of ES1 in IEC
 62368-1 standard and be no higher than PS2. Please note that the power supply requirements are subject to the device label.
 - We recommend using the power adapter provided with the device.
- Do not connect the device to two or more kinds of power supplies, unless otherwise specified, to avoid damage
 to the device.
- The device must be installed in a location that only professionals can access, to avoid the risk of nonprofessionals becoming injured from accessing the area while the device is working.
- Professionals must have full knowledge of the safeguards and warnings of using the device.
- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during installation.
- An emergency disconnect device must be installed during installation and wiring at a readily accessible location for emergency power cut-off.
- We recommend you use the device with a lightning protection device for stronger protection against lightning. For outdoor scenarios, strictly comply with the lightning protection regulations.
- Ground the function earthing portion of the device to improve its reliability (certain models are not equipped with earthing holes). The device is a class I electrical appliance.
- Make sure that the power supply of the device is connected to a power socket with protective earthing.
- The dome cover is an optical component. Do not directly touch or wipe the surface of the cover during installation.

Operation Requirements

- The cover must not be opened while the device is powered on.
- Do not touch the heat dissipation component of the device to avoid the risk of getting burnt.
- Use the device under allowed humidity and temperature conditions.
- Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it, to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and flickering.
- When using a laser beam device, avoid exposing the device surface to laser beam radiation.
- Prevent liquid from flowing into the device to avoid damage to its internal components.
- Protect indoor devices from rain and dampness to avoid electric shocks and fires breaking out.
- Do not block the ventilation opening near the device to avoid heat accumulation.
- Protect the line cord and wires from being walked on or squeezed particularly at plugs, power sockets, and the
 point where they exit from the device.
- Do not directly touch the photosensitive CMOS. Use an air blower to clean the dust or dirt on the lens.
- The dome cover is an optical component. Do not directly touch or wipe the surface of the cover when using it.
- There might be a risk of electrostatic discharge on the dome cover. Power off the device when installing the

cover after the camera finishes adjustment. Do not directly touch the cover and make sure the cover is not exposed to other equipment or human bodies

- Strengthen the protection of the network, device data, and personal information. All necessary safety measures to ensure the network security of the device must be taken, such as using strong passwords, regularly changing your password, updating firmware to the latest version, and isolating computer networks.
- For the IPC firmware of some previous versions, the ONVIF password will not be automatically synchronized after the main password of the system has been changed.
- You need to update the firmware or change the password manually.

Maintenance Requirements

- Strictly follow the instructions to disassemble the device. Non-professionals dismantling the device can result in
 it leaking water or producing poor-quality images. For a device that is required to be disassembled before use,
 make sure the seal ring is flat and in the seal groove when putting the cover back on. When you find
 condensed water forming on the lens or the desiccant becomes green after you disassemble the device,
 contact after-sales service to replace the desiccant. Desiccants might not be provided depending on the actual
 model.
- Use the accessories suggested by the manufacturer. Installation and maintenance must be performed by qualified professionals.
- Do not directly touch the photosensitive CMOS. Use an air blower to clean the dust or dirt on the lens. When it is necessary to clean the device, slightly wet a soft cloth with alcohol, and gently wipe away the dirt.
- Clean the device body with a soft dry cloth. If there are any stubborn stains, clean them away with a soft cloth dipped in a neutral detergent, and then wipe the surface dry. Do not use volatile solvents such as ethyl alcohol, benzene, diluent, or abrasive detergents on the device to avoid damaging the coating and degrading the performance of the device.
- The dome cover is an optical component. When it is contaminated with dust, grease, or fingerprints, use degreasing cotton moistened with a little ether or a clean soft cloth dipped in water to gently wipe it clean. An air gun is useful for blowing dust away.
- It is normal for a camera made of stainless steel to develop rust on its surface after being used in a strong corrosive environment (such as the seaside, and chemical plants). Use an abrasive soft cloth moistened with a little acid solution (vinegar is recommended) to gently wipe it away. Afterwards, wipe it dry.

Cable

• Waterproof all the cable joints with insulating tape and waterproof tape to avoid water damage and prevent short circuits from occurring. For details, see the FAQ manual.

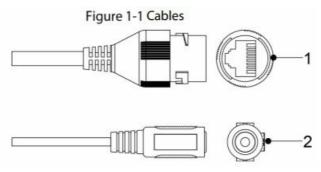


Table 1-1 Cable information

| No. | Port Name | Description |
|-----|---------------|--|
| 1 | Ethernet Port | Connects to network with network cable. Provides power to the device with PoE. PoE is available on select models. |
| 2 | Power input | Inputs 12 VDC power. Please be sure to supply power as instructed in the manual. Device abnormity or damage could occur if power is not supplied correctly. |

Network Configuration

- Device initialization and IP settings can be finished with the ConfigTool or on the webpage. For more information, see the WEB Operation Manual.
- Device initialization is available on select models, and it is required at first use and after the device is reset.
- Device initialization is available only when the IP addresses of the device (192.168.1.108 by default) and the PC stays on the same network segment.
- Planning useable network segments properly for the device.
- The following figures and pages are for reference only.

Initializing the Camera

Search for the device that needs to be initialized through ConfigTool.

- 1. Double-click ConfigTool.exe to open the tool.
- 2. Click Modify IP.
- 3. Select the searching way, and then click OK.
- 4. Select one or several cameras in uninitialized status, and then click Initialize.
- Select the devices to be initialized, and then click Initialize.
- If you do not provide the email address for a password reset, you can reset the password only through an XML file.

Figure 2-1 Password setting



- Select Auto-check for updates as needed, and then click OK to initialize the device.
- If initialization failed, click to see more information.
- · Click Finish.

Changing the Device's IP Address

- You can change the IP address of one or more devices at a time. This section is based on changing IP addresses in batches.
- Changing IP addresses in batches is available only when the corresponding devices have the same login password.
- Search for the device whose IP address needs to be changed through ConfigTool.
- 1. Double-click ConfigTool.exe to open the tool.
- 2. Click Modify IP.
- 3. Select the searching way, enter the username and password, and then click OK.
- The username is admin, and the password is the one you set while initializing the device.
- Select the devices whose IP addresses need to be changed, and then click Modify IP.
- · Configure IP address.
- Static mode: When you select Static, you need to enter Start IP, Subnet Mask, and Gateway. The IP
 addresses of the devices will be modified successively starting from the first IP entered.
- **DHCP mode:** If the DHCP server is available in the network, when you select DHCP, the IP address of devices will be automatically obtained through the DHCP server.
- The same IP address will be set for multiple devices if you select the Same IP checkbox.
- · Click OK.

Logging in to the Webpage

- Open the IE browser, enter the IP address of the device in the address bar, and then press the Enter key.
- If the setup wizard opens, follow the on-screen instructions to complete it.
- Enter the username and password in the login box, and then click Login.
- (Optional) For first-time login, click Click Here to Download Plugin, and then install the plugin as instructed.
- The home page opens when installation is complete.

Installation


Packing List

- Tools required for installation, such as the electric drill, are not included in the package.
- The operation manual and information on the tools are on the disk or the QR code.

Figure 3-1 Packing list



Dimensions

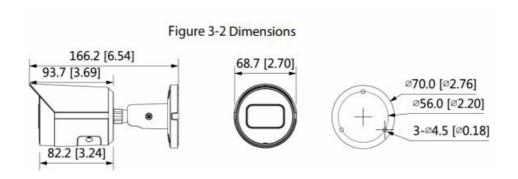


Installing the Camera

Installation Methods

Figure 3-3 Installation methods


(Optional) Installing SD Card

- The SD card slot is available on select models.
- Press the reset button for 10 seconds to reset the device.

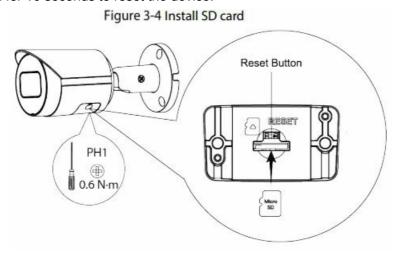

Attaching the Camera

• Make sure the mounting surface is strong enough to hold at least three times the device's weight.

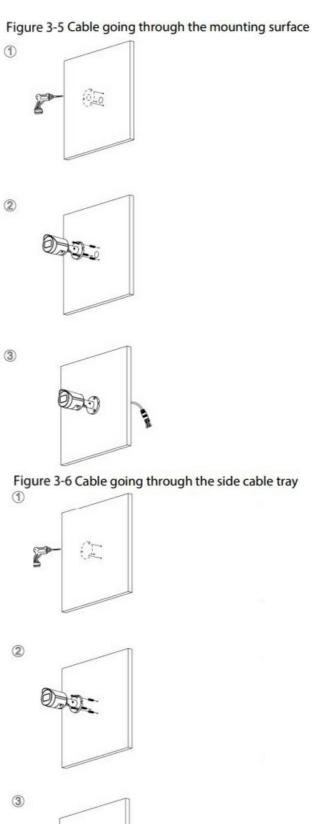


(Optional) Installing Waterproof Connector

• This part is only needed when a waterproof connector comes with the device and the device is used outdoors.

Adjusting Lens Angle

Figure 3-8 Adjust lens angle

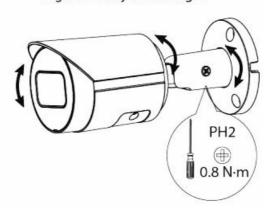

• ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

• Address: No. 1399, Binxing Road, Binjiang District, Hangzhou, P. R. China

• Website: www.dahuasecurity.com

• Postcode: 310053

• Email: dhoverseas@dhvisiontech.com

• Tel:+86-571-87688888 28933188

Documents / Resources



dahua HFW2541S-S Bullet Network Camera [pdf] User Guide

HFW2541S-S, HFW2541S-S Bullet Network Camera, Bullet Network Camera, Network Camera, Camera

References

• <u>User Manual</u>

Manuals+, Privacy Policy