



## dahua HFW3549T1-AS-PV Security Camera User Guide

[Home](#) » [Dahua](#) » dahua HFW3549T1-AS-PV Security Camera User Guide 

### Contents

- [1 dahua HFW3549T1-AS-PV Security Camera](#)
- [2 Setting up the Face Mask Function](#)
  - [2.1 Series](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



### dahua HFW3549T1-AS-PV Security Camera



### Setting up the Face Mask Function

## Series


- DH-IPC-HF/HFW/HDW/HDBW3X4X Series
- DH-IPC-HF/HFW/HDW/HDBW5X4X Series
- DH-IPC-HF/HFW/HDW/HDBW7X4X Series

## Examples

- HFW3549T1-AS-PV
- HDW5241TM-ASE
- HFW5242H-ZE
- HDBW7442H-Z
- **System Version:** V2.800.00AD000.0.R
- **Build Date:** 2020-07-29

**NB:** The firmware version is based on the latest version when this document was created and may slightly differ from future versions, however this will not affect any of the functions.


1. Log in to the camera, go to **Setting > Event > Smart Plan** , click **Face Detection** to activate the function and click **Save** .

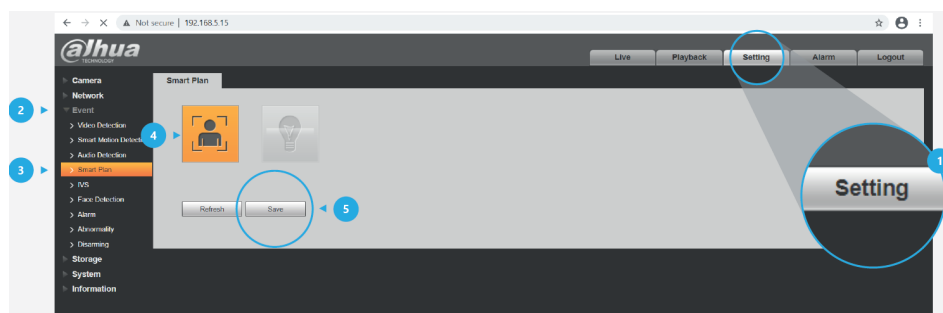

2. Go to **Setting > Event > Face Detection** , tick the **Enable** check box on the top right hand corner to enable the function.

By default the detection area will be set to full screen, if you wish to change the detection area, click **Clear** button first and then Click **Draw** button on the left hand side and draw inside live preview the shape of the target area for face detection and set the parameters.


Click **Save** at the bottom right hand corner to complete.

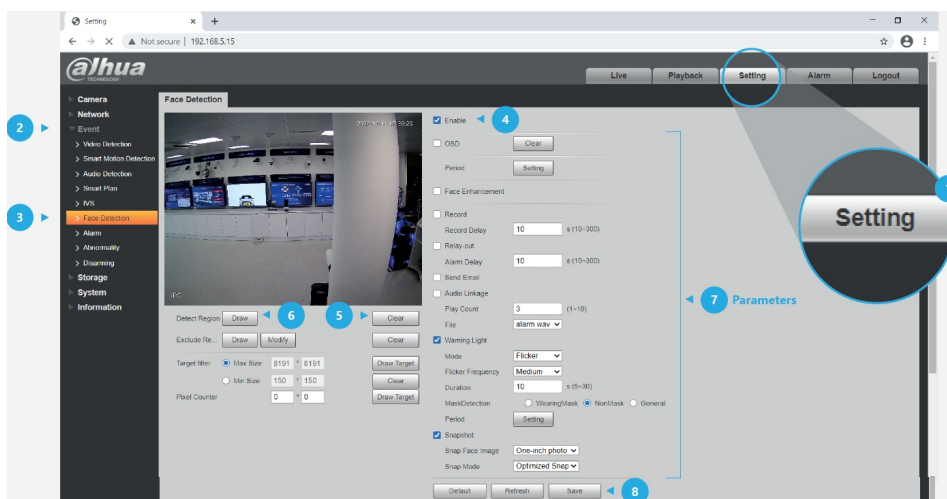


3. To check the face detection alarm record details click **Alarm** in the top right hand corner and tick **IVS** under the

Alarm Type .

**NB:** The alarm records will not be kept after logging out. To check if the alarm function is still operating normally once logged out, please trigger another alarm.

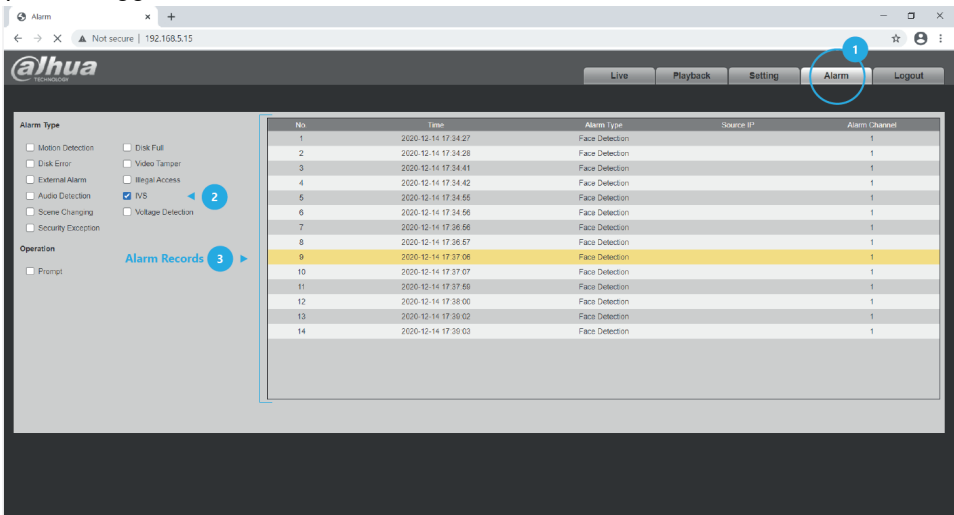

Documents / Resources



**dahua HFW3549T1-AS-PV Security Camera** [pdf] User Guide  
HFW3549T1-AS-PV Security Camera, HFW3549T1-AS-PV, Security Camera, Camera