



dahua IPC-HFW2241S-S-0280B 2 MP Wizensense WDR Fix IR IP Bullet Camera User Guide

[Home](#) » [Dahua](#) » dahua IPC-HFW2241S-S-0280B 2 MP Wizensense WDR Fix IR IP Bullet Camera User Guide 



**HF2241S-S-0280B 2 MP Wizens WDR Fix IR IP Bullet Camera
User Guide**



Contents




- [1 Bullet Network Camera](#)
- [2 Important Safeguards and Warnings](#)
- [3 Cable](#)
- [4 Network Configuration](#)
- [5 Installation](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Bullet Network Camera

General

This manual introduces the installation and operations of network camera. Read carefully before using the device, and keep the manual safe for future reference.

Safety Instructions

Signal Words	Meaning
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, may result in property damage , data loss, reductions in performance, or unpredictable result.
 NOTE	Provides additional information as a supplement to the text.

Revision History

Version	Revision Content	Release Date
V1.0.2	Updated the information of installinng the camera.	September 2022
V1.0.1	Updated “Important Safeguards and Warnings.”	April 2021
V1.0.0	First release.	May 2019

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating of the product in ways that are not in compliance with the

- The manual will be updated according to the latest laws and regulations of related For detailed information, see the paper User Manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All the designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the Please contact customer service for the latest program and supplementary documentation.
- There might be deviations in the description of the technical data, functions and operations, or errors in the If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective
- Please visit our website, contact the supplier or customer service if any problems occur while using the
- If there is any uncertainty or controversy, we reserve the right of final

Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, comply with the guidelines when using it.



Transportation Requirements

- Transport the device under allowed humidity and temperature
- Pack the device with packaging provided by its manufacturer or packaging of the same quality before transporting
- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during



Storage Requirements

- Store the device under allowed humidity and temperature
- Do not place the device in a humid, dusty, extremely hot or cold site that has strong electromagnetic radiation or unstable
- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during storage.



WARNING Installation Requirements

- Strictly comply with the local electrical safety code and standards, and check whether the power supply is correct before operating the devices.
- Please follow the electrical requirements to power the
When selecting the power adapter, the power supply must conform to the requirements of ES1 in IEC 62368-1 standard and be no higher than PS2. Please note that the power supply requirements are subject to the device label.
We recommend using the power adapter provided with the device.
- Do not connect the device to two or more kinds of power supplies, unless otherwise specified, to avoid damage


to the

- The device must be installed in a location that only professionals can access, to avoid the risk of non-professionals becoming injured from accessing the area while the device is working. Professionals must have full knowledge of the safeguards and warnings of using the device.
- Do not place heavy stress on the device, violently vibrate or immerse it in liquid during
- An emergency disconnect device must be installed during installation and wiring at a readily accessible location for emergency power cut-off.
- We recommend you use the device with a lightning protection device for stronger protection against For outdoor scenarios, strictly comply with the lightning protection regulations.
- Ground the function earthing portion of the device to improve its reliability (certain models are not equipped with earthing holes). The device is a class I electrical appliance. Make sure that the power supply of the device is connected to a power socket with protective.
- The dome cover is an optical Do not directly touch or wipe the surface of the cover during installation.

Operation Requirements



WARNING

- The cover must not be opened while the device is powered on.
- Do not touch the heat dissipation component of the device to avoid the risk of getting burnt.
-  Use the device under allowed humidity and temperature
- Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it, to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and
- When using a laser beam device, avoid exposing the device surface to laser beam
- Prevent liquid from flowing into the device to avoid damage to its internal
- Protect indoor devices from rain and dampness to avoid electric shocks and fires breaking
- Do not block the ventilation opening near the device to avoid heat
- Protect the line cord and wires from being walked on or squeezed particularly at plugs, power sockets, and the point where they exit from the
- Do not directly touch the photosensitive CMOS. Use an air blower to clean the dust or dirt on the
- The dome cover is an optical Do not directly touch or wipe the surface of the cover when using it.
- There might be a risk of electrostatic discharge on the dome Power off the device when installing the cover after the camera finishes adjustment. Do not directly touch the cover and make sure the cover is not exposed to other equipment or human bodies
- Strengthen the protection of the network, device data and personal All necessary safety measures to ensure the network security of the device must be taken, such as using strong passwords, regularly changing your password, updating firmware to the latest version, and isolating computer networks. For the IPC firmware of some previous versions, the ONVIF password will not be automatically synchronized after the main password of the system has been changed. You need to update the firmware or change the password manually.



Maintenance Requirements

- Strictly follow the instructions to disassemble the device. Non-professionals dismantling the device can result in

it leaking water or producing poor quality For a device that is required to be disassembled before use, make sure the seal ring is flat and in the seal groove when putting the cover back on. When you find condensed water forming on the lens or the desiccant becomes green after you disassembled the device, contact after-sales service to replace the desiccant. Desiccants might not be provided depending on the actual model.

- Use the accessories suggested by the manufacturer. Installation and maintenance must be performed by qualified
- Do not directly touch the photosensitive CMOS. Use an air blower to clean the dust or dirt on the When it is necessary to clean the device, slightly wet a soft cloth with alcohol, and gently wipe away the dirt.
- Clean the device body with a soft dry If there are any stubborn stains, clean them away with a soft cloth dipped in a neutral detergent, and then wipe the surface dry. Do not use volatile solvents such as ethyl alcohol, benzene, diluent, or abrasive detergents on the device to avoid damaging the coating and degrading the performance of the device.
- The dome cover is an optical component. When it is contaminated with dust, grease, or fingerprints, use degreasing cotton moistened with a little ether or a clean soft cloth dipped in water to gently wipe it An air gun is useful for blowing dust away.
- It is normal for a camera made of stainless steel to develop rust on its surface after being used in a strong corrosive environment (such as the seaside, and chemical plants). Use an abrasive soft cloth moistened with a little acid solution (vinegar is recommended) to gently wipe it away. Afterwards, wipe it

Cable



Waterproof all the cable joints with insulating tape and waterproof tape to avoid water damage and prevent short circuits from occurring. For details, see FAQ manual.

Figure 1-1 Cables

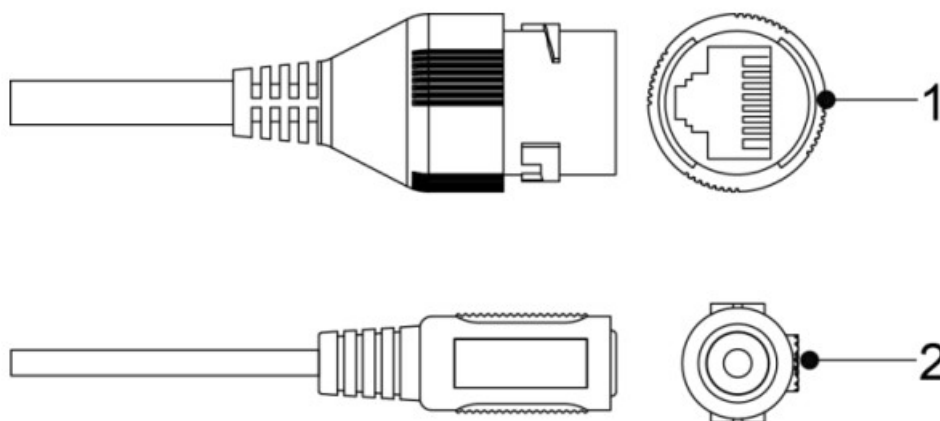 


Table 1-1 Cable information

No.	Port Name	Description
1	Ethernet Port	Connects to network with network cable. Provides power to the device with PoE. PoE is available on select model.
2	Power input	Inputs 12 VDC power. Please be sure to supply power as instructed in the manual. Device abnormality or damage could occur if power is not supplied correctly.

Network Configuration



Device initialization and IP setting can be finished with the ConfigTool or on the webpage. For more information, see the WEB Operation Manual.

- Device initialization is available on select models, and it is required at first use and after device is
- Device initialization is available only when the IP addresses of the device (192.168.1.108 by default) and the PC stays on the same network segment.
- Planning useable network segment properly for the device.
- The following figures and pages are for reference only.

2.1 Initializing the Camera

Step 1 Search for the device that needs to be initialized through ConfigTool.

1. Double-click **exe** to open the tool.
2. Click **Modify IP**.
3. Select the searching way, and then click **OK**.
4. Select one or several cameras in uninitialized status, and then click **Initialize**.

Step 2 Select the devices to be initialized, and then click **Initialize**.



If you do not provide the email address for password reset, you can reset the password only through XML file.

Figure 2-1 Password setting


The screenshot shows a 'Device initialization' window with a dark header bar containing the title and a close button. The main content area has a red '1' and the text 'device(s) have not been initialized'. Below this are three input fields: 'Username' with 'admin', 'New Password' with masked characters, and 'Confirm Password' with masked characters. Between the password fields is a strength indicator with 'Weak', 'Medium' (highlighted in green), and 'Strong' options. A text block explains password requirements: 8 to 32 characters, combination of letters, numbers, and symbols, with at least two kinds of them, excluding single quote, double quote, colon, semicolon, and connection symbol. Below the password fields is a checked 'Email Address' field with '1****6@gmail.com' and a note '(for password reset)'. There is also a 'Select P/N' dropdown menu with 'PAL' selected. At the bottom, an orange note states: '*After you have set new password, please set password again in "Search Setting".' A blue 'Next' button is in the bottom right corner.

Step 3 Select Auto-check for updates as needed, and then click OK to initialize the device.

If initialization failed, click to see more information.

Step 4 Click Finish.

2.2 Changing the Device IP Address

-  You can change the IP address of one or more devices at a time. This section is based on changing IP addresses in batches.
- Changing IP addresses in batches is available only when the corresponding devices have the same login password.

Step 1 Search for the device whose IP address needs to be changed through ConfigTool.

1. Double-click ConfigTool.exe to open the tool.
2. Click Modify IP.
3. Select the searching way, enter the username and password, and then click OK.



The username is admin, and the password is the one you set while initializing the device.

Step 2 Select the devices whose IP addresses need to be changed, and then click Modify IP.

Step 3 Configure IP address.

- Static mode: When you select Static, you need to enter Start IP, Subnet Mask, and Gateway. The IP addresses of the devices will be modified successively starting from the first IP entered.
- DHCP mode: If the DHCP server is available in the network, when you select DHCP, the IP address of devices will be automatically obtained through the DHCP server.



The same IP address will be set for multiple devices if you select the Same IP checkbox.

Step4 Click OK.

2.3 Logging in to the Webpage

Step1 Open the IE browser, enter the IP address of the device in the address bar, and then press the Enter key. If the setup wizard opens, follow the on-screen instructions to complete it.

Step2 Enter the username and password in the login box, and then click Login.


Step3 (Optional) For first-time login, click Click Here to Download Plugin, and then install the plugin as instructed. The home page opens when installation is complete.

Installation

3.1 Packing List


- Tools required for installation, such as the electric drill, are not included in the package.
- The operation manual and information on the tools are on the disk or the QR code.

 Figure 3-1 Packing list

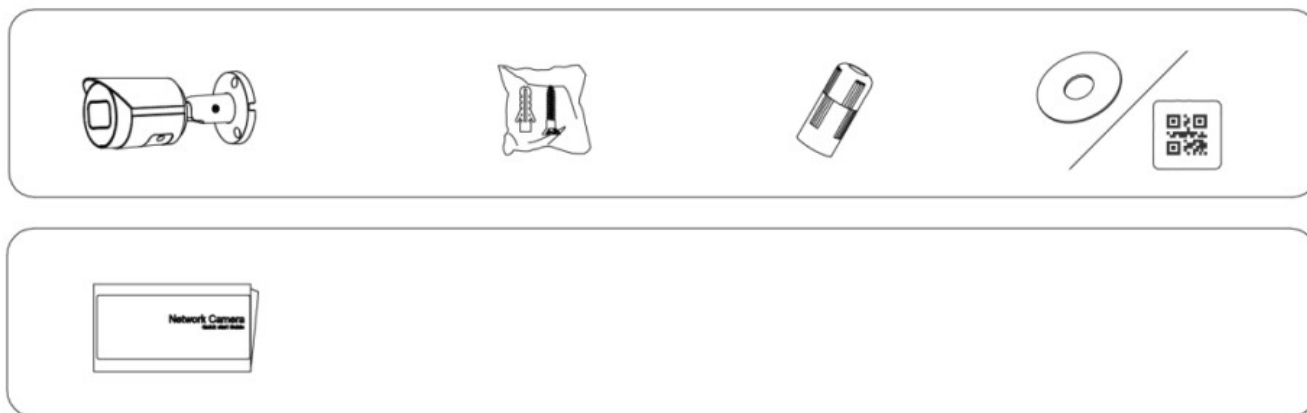

3.2 Dimensions

 
Figure 3-2 Dimensions

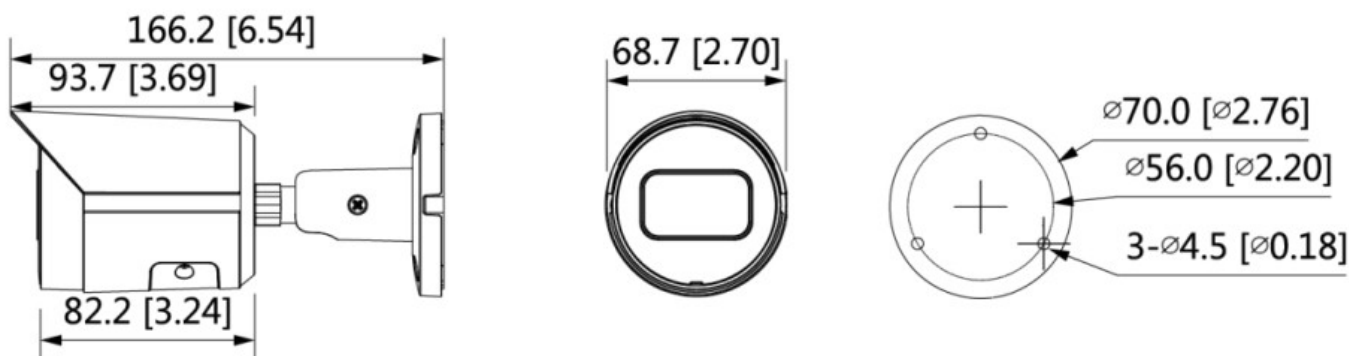

3.3 Installing the Camera

3.3.1 Installation Methods

 Figure 3-3 Installation methods

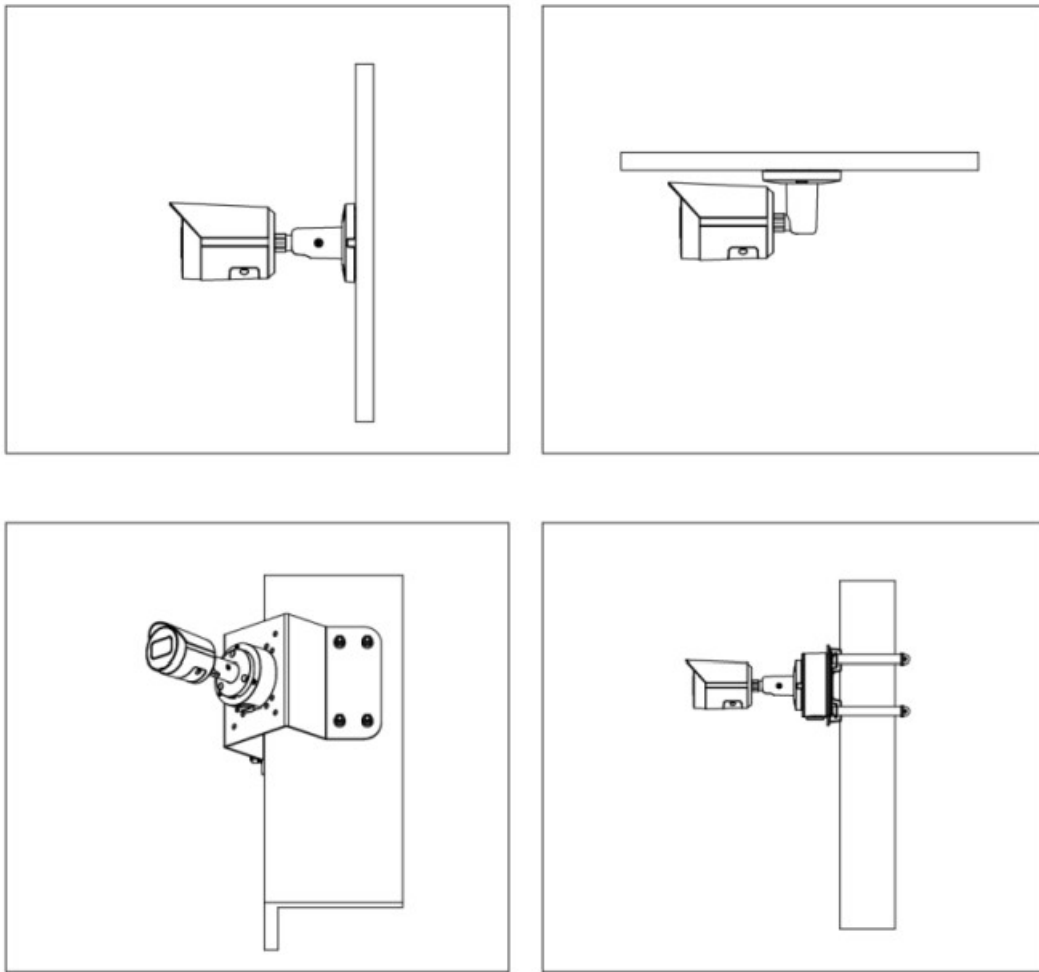

3.3.2 (Optional) Installing SD Card


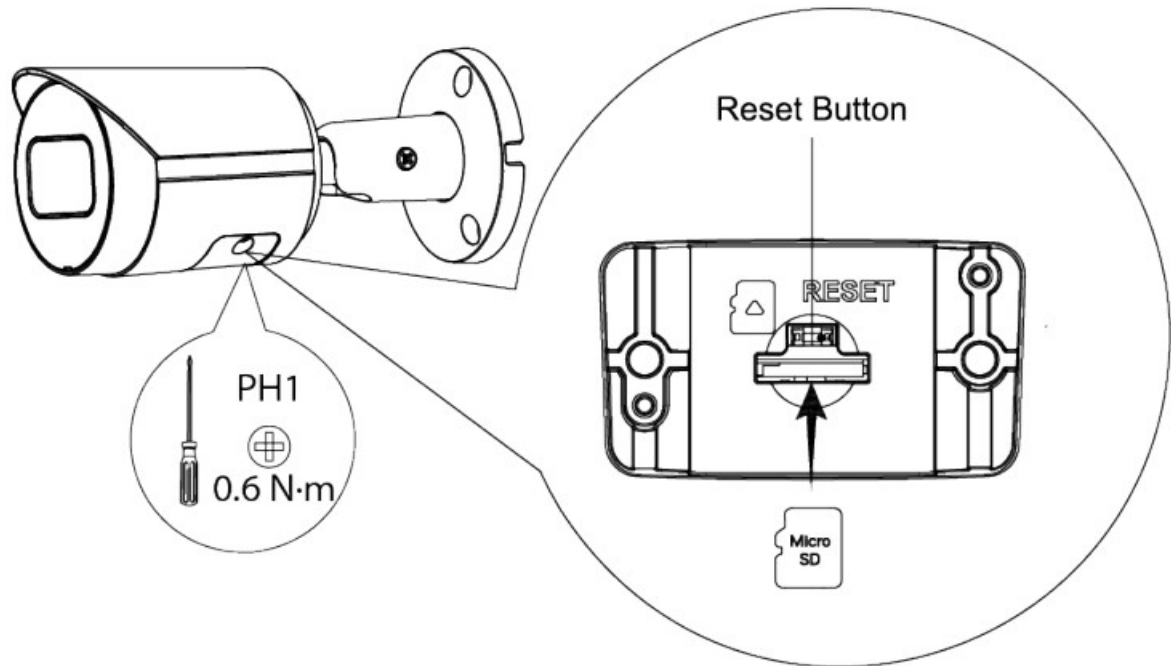 
-  SD card slot is available on select models.
- Press the reset button for 10 seconds to reset the device.

Figure 3-4 Install SD card




3.3.3 Attaching the Camera




Make sure the mounting surface is strong enough to hold at least three times of the device weight.

Figure 3.5 Cable going through the mounting surface

 ①

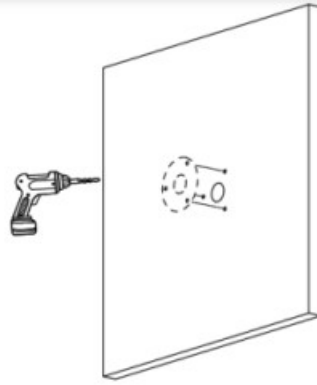

②

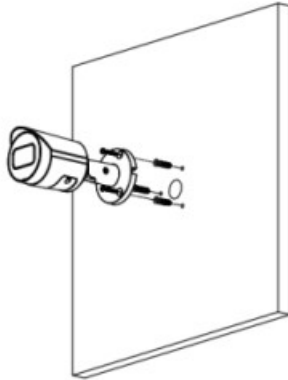 

③


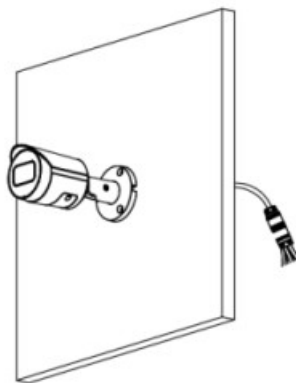 


Figure 3-6 Cable going through the side cable tray

 


3.3.4 (Optional) Installing Waterproof Connector

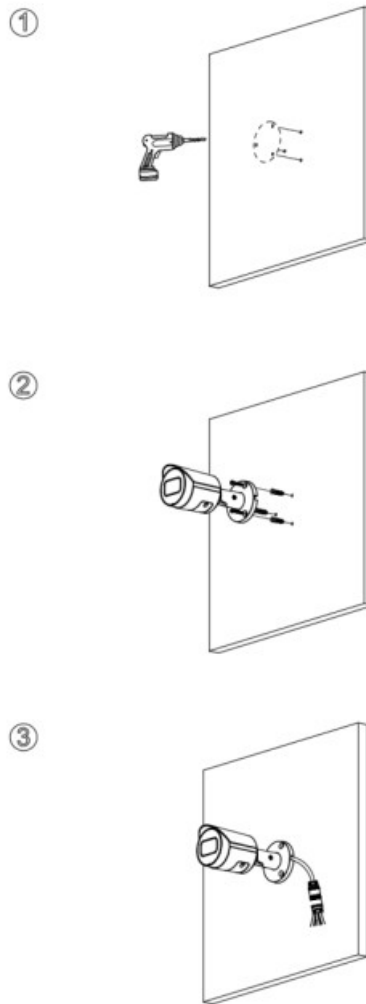


This part is only needed when a waterproof connector comes with the device and the device is used outdoors.

 Figure 3-7 Install waterproof connector

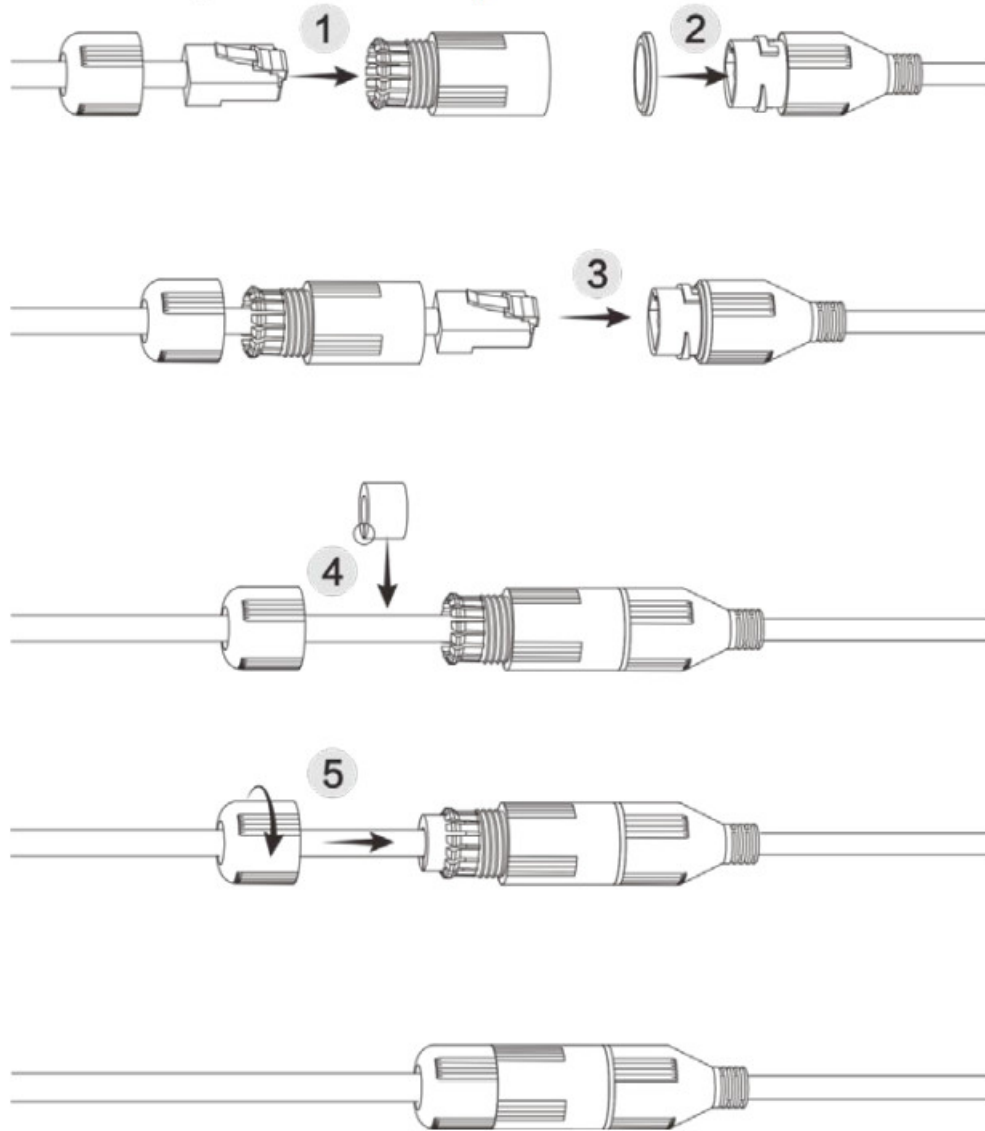

3.3.5 Adjusting Lens Angle

 Figure 3-8 Adjust lens angle

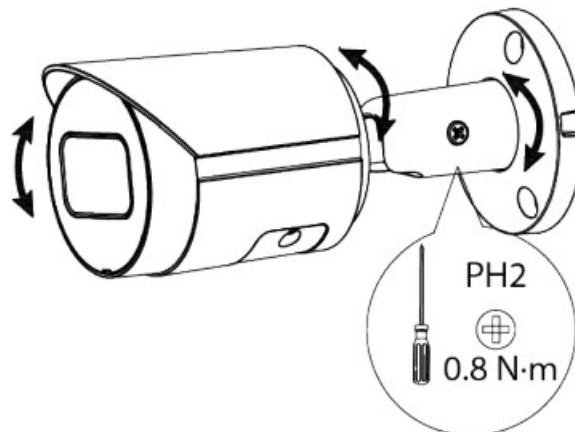

ENABLING A SAFER SOCIETY AND SMARTER LIVING

 
ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1199 Eting'an Road, Binjiang District, Hangzhou, P. R. China

Website: www.dahuasecurity.com

Postcode: 310053
Email: overseas@dahuatecb.com
Fax: +86-571-87688815
Tel: +86-571-87688883

Documents / Resources

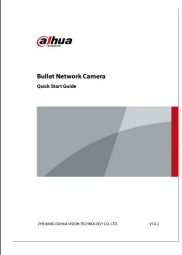	<p>dahua IPC-HFW2241S-S-0280B 2 MP Wizsense WDR Fix IR IP Bullet Camera [pdf] User Guide</p> <p>IPC-HFW2241S-S-0280B 2 MP Wizsense WDR Fix IR IP Bullet Camera, IPC-HFW2241S-S-0280B, 2 MP Wizsense WDR Fix IR IP Bullet Camera, IP Bullet Camera, Bullet Camera, Camera</p>
---	--

[Manuals+](#)