

DaiMi MZ-1350 PS4 Controller Paddles User Manual

Home » DaiMi » DaiMi MZ-1350 PS4 Controller Paddles User Manual




Contents

- 1 DaiMi MZ-1350 PS4 Controller **Paddles**
- 2 Package included
- 3 Electrical parameters
- 4 Product electrical specifications
- **5 Product introduction**
- **6 Function Setting**
- 7 Documents / Resources
- **8 Related Posts**



DaiMi MZ-1350 PS4 Controller Paddles

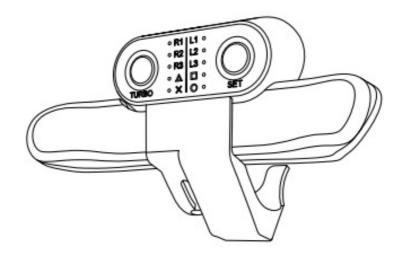

- 1 X PS4 back button attachment
- 1 X User Manua

Electrical parameters

- Sleep current:Less than 30uA
- Working current:Less than 15mA

Product electrical specifications

- Power supply mode:EXT wired connection
- Working voltage:DC3.0-3.3V


Product introduction

This product is a PS4 Controller Paddles handle extended button, you can customize the mapping of the button function on the back, support the TURBO burst function, plug and play, and bring users a different gaming experience.

Key composition

It is composed of 14 digital keys (△,○,×,□, R3, L3, R2, L2, R1, L1, TURBO, SET).

Product size

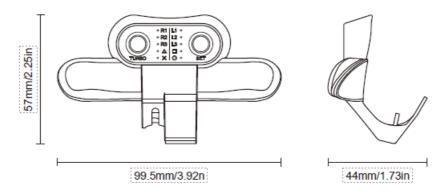

Function Setting

- 1. Long press the SET button for 2 seconds, and × light flashes quickly.
- 2. Press the M1 or M2 (Press once to switch once) , lights flashing slowly in sequence (Flashing Sequence: x→○→△→□→ R3→L3→R2→L2→R1→L1)
- 3. When the target button is flashing, press the SET button, finish setting.

Note: the handle should also have programming and memory programming functions when it is not connected to Bluetooth state and charging state.

Documents / Resources



DaiMi MZ-1350 PS4 Controller Paddles [pdf] User Manual MZ-1350, PS4 Controller Paddles, MZ-1350 PS4 Controller Paddles