



## Daintree WTS10 Wireless Controls Owner's Manual

[Home](#) » [Daintree](#) » Daintree WTS10 Wireless Controls Owner's Manual 

### Contents


- [1 Daintree WTS10 Wireless Controls](#)
- [2 OVERVIEW](#)
- [3 To override the Auto program](#)
- [4 To change the individual Mode settings](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Daintree WTS10 Wireless Controls**



## OVERVIEW

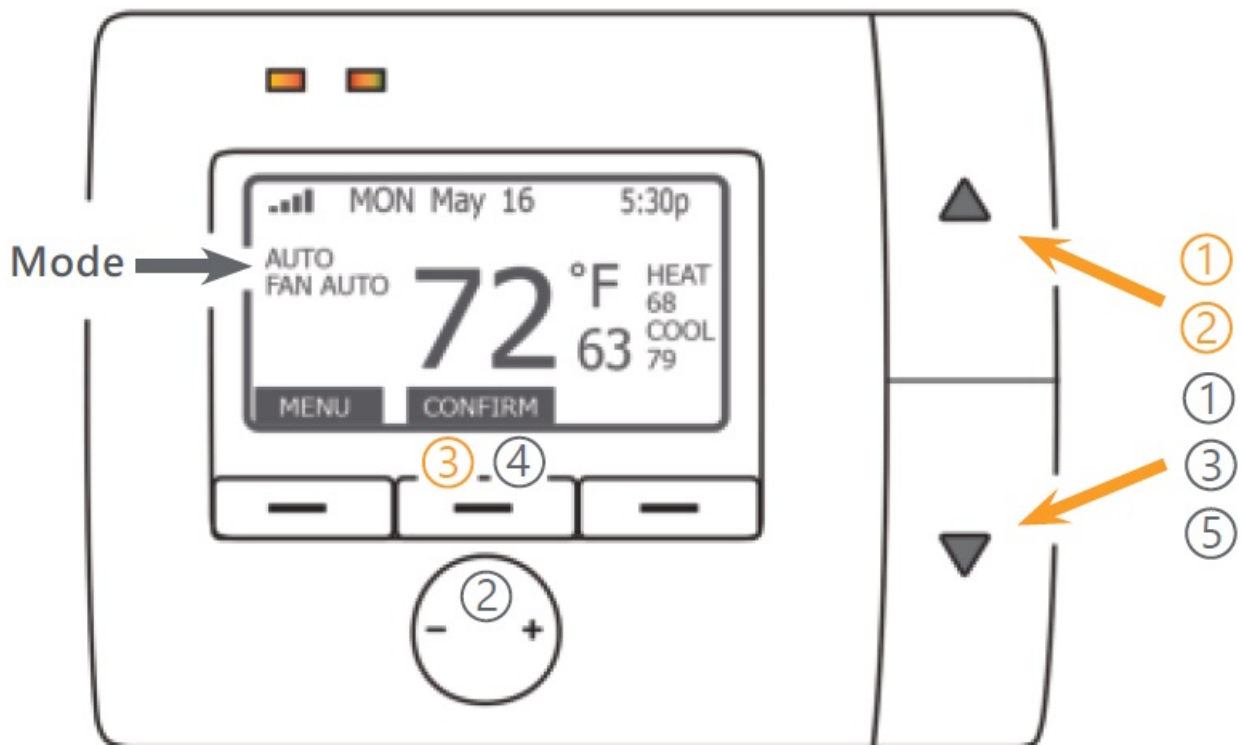

## To override the Auto program

1. Press the ▲ or ▼ button to activate the display.
2. Press the ▲ to raise or ▼ button to lower both the
3. Heat and Cool set points.
4. Confirm the settings by pressing the middle button

## To change the individual Mode settings

1. Press the ▲ or ▼ button to activate the display.
2. Press the — button to select Heat/Cool mode; press the + button to select the Fan mode.
3. Press the ▲ or ▼ button to select the mode.
4. When the desired mode appears, press the middle button to CONFIRM.
5. Press the ▲ button to raise or ▼ button to lower the set point for the currently selected mode.


© 2021 Current Lighting Solutions, LLC. All rights reserved. GE and the GE monogram are trademarks of the General Electric Company and are used under license. iBeacon is a trademark of Apple Inc. Information provided is subject to change without notice. All values are design or typical values when measured under laboratory conditions.

DT100 (Rev 05/24/21)

T 1-888-694-3533

[www.gecurrent.com](http://www.gecurrent.com)

## Documents / Resources

	<p><a href="#">Daintree WTS10 Wireless Controls</a> [pdf] Owner's Manual WTS10 Wireless Thermostat, WTS10, Wireless Thermostat, Wireless Controls, Thermostat, WTS10 Thermostat</p>
--	---

## References

- [C Commercial Lighting and Lighting Controls | Current - GLI Brands](#)