



010205 Danfoss Ally Radiator Thermostat User Guide

[Home](#) » [Danfoss](#) » 010205 Danfoss Ally Radiator Thermostat User Guide 

Contents


- [1 010205 Danfoss Ally Radiator Thermostat](#)
- [2 How to reset the thermostat](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



010205 Danfoss Ally Radiator Thermostat



Please use the manual provided with your gateway, and follow the instruction to download the App.

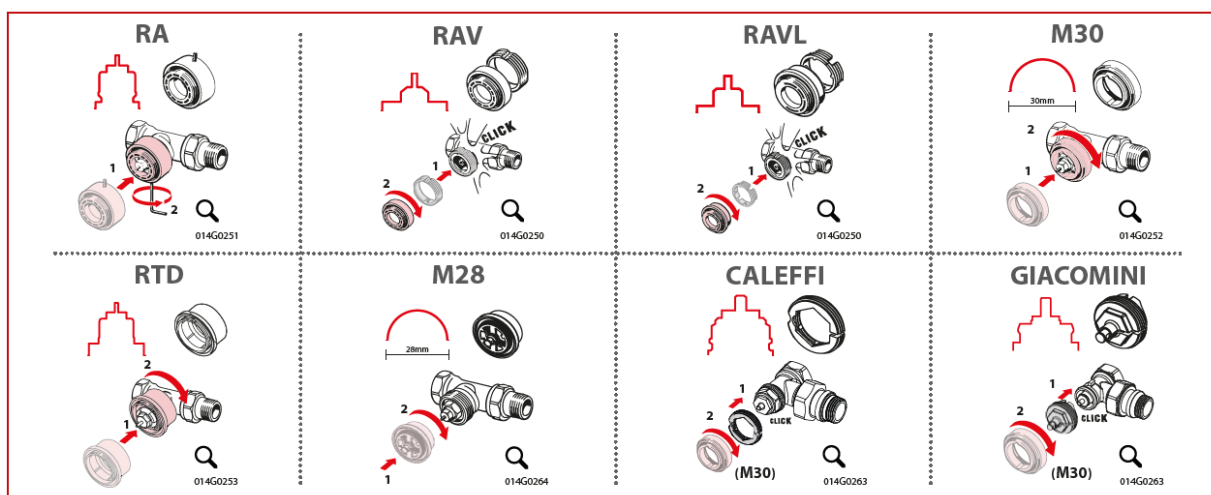

The adapters from the right box side are included. Remaining adapters in the overview above must be purchased separately. Adapter code numbers can be found below each adapter illustration.



RA



M30



RA



M30



RAV



RAVL




How to mount the thermostat. Remove the battery cover as shown in the diagram and insert two AA batteries. Make sure the batteries are correctly oriented. Screw the Danfoss Ally™ onto the mounted adapter until a click sound appears. Press and hold the button for 3 seconds. The temperature set point will show on the screen once the Danfoss Ally™ is mounted




How to reset the thermostat

1. Remove the cover and take out one battery.
2. Press and hold , Keep holding while reinserting the battery.
3. The screen will go blank after approximately 3 seconds.

Continue system setup in the App.

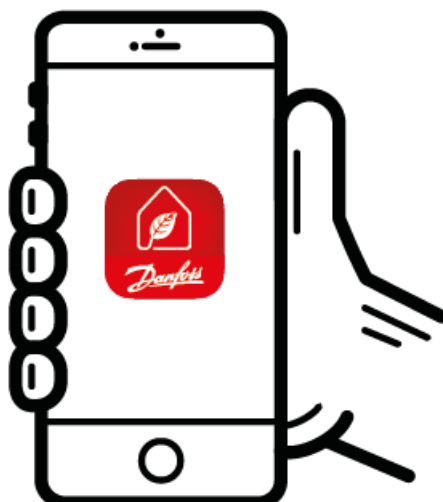

Documents / Resources

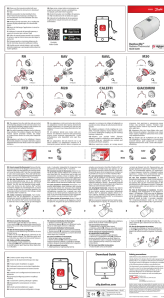	<p>Danfoss 010205 Danfoss Ally Radiator Thermostat [pdf] User Guide 204986, 010205, Danfoss Ally Radiator Thermostat, 010205 Danfoss Ally Radiator Thermostat, AN31775663747302</p>
--	---

References

- [Danfoss Ally™ | Danfoss](#)
- [Danfoss Ally™ support | Danfoss](#)
- [Danfoss - Engineering Tomorrow | Danfoss](#)