

Danfoss 013G1246 Aero RA Click Instruction Manual

Home » Danfoss » Danfoss 013G1246 Aero RA Click Instruction Manual



Danfoss 013G1246 Aero RA Click Instruction Manual




Contents


- 1 Installation
- 2 BIV Installation
- 3 Uninstall
- **4 Temperature Limitation**
- **5 Blind mark**
- 6 Documents /


Resources

7 Related Posts


Installation

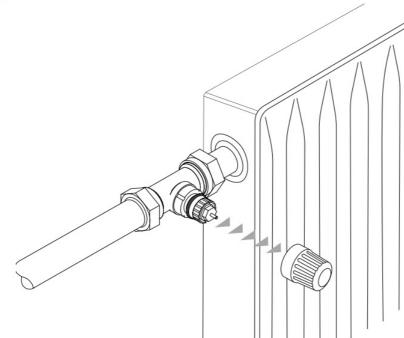

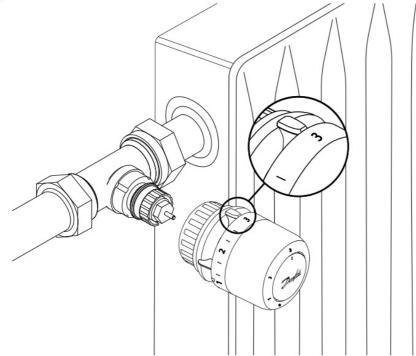


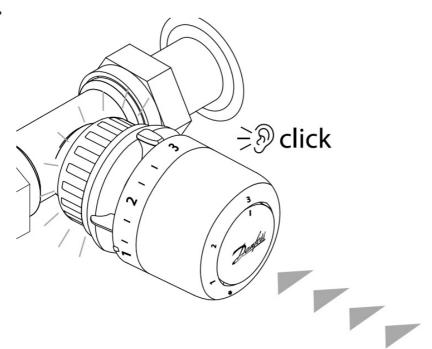


BIV Installation

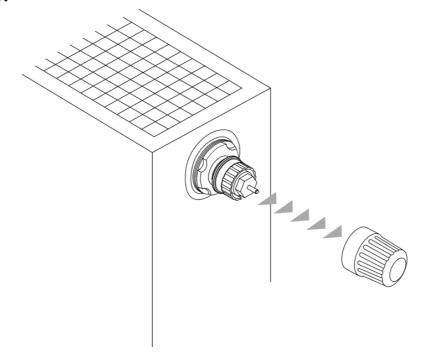




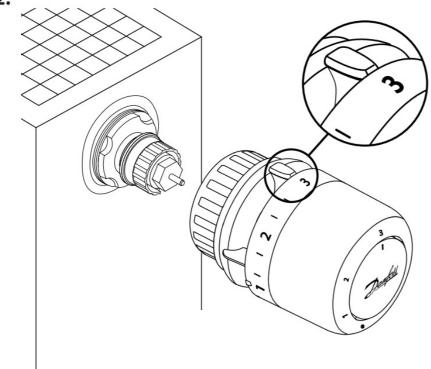


3.

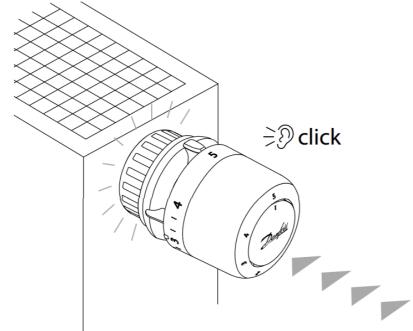


Uninstall

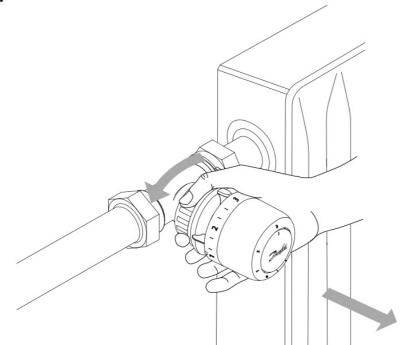



2.

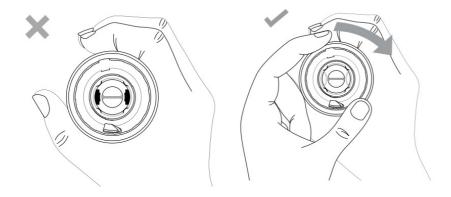



Temperature Limitation

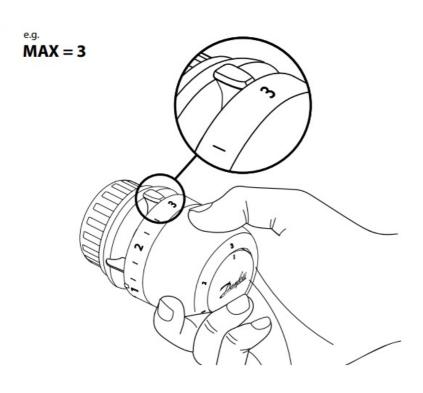


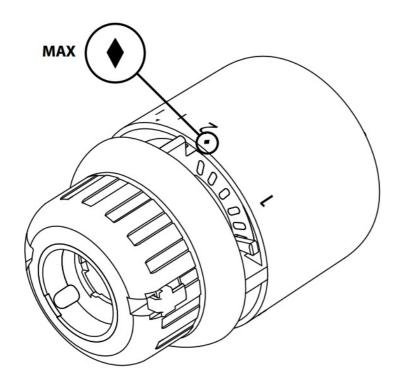

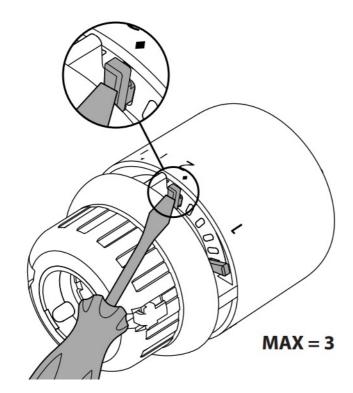

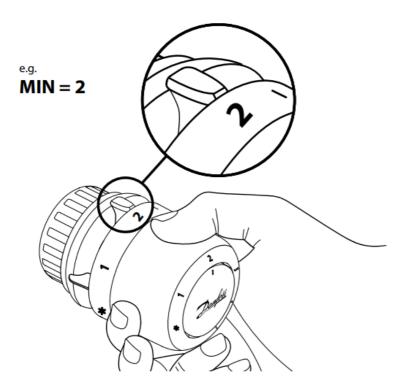


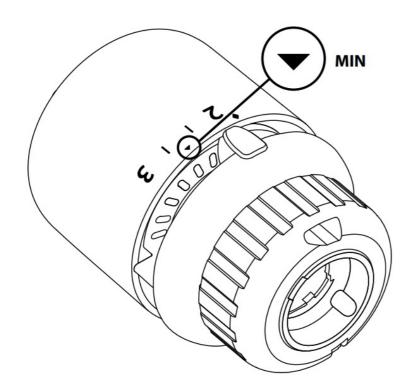

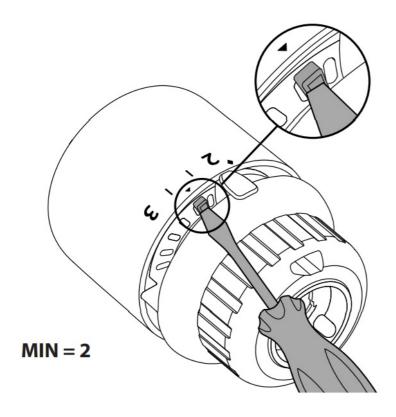

3. Code no.
013G1246
013G1236

Blind mark

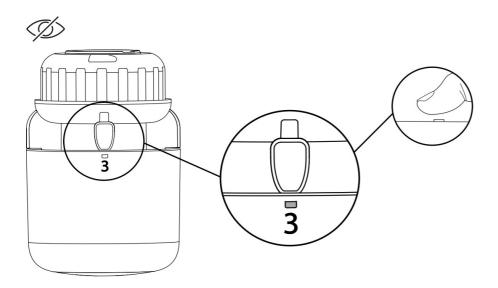

Ampinformation, including, but nothimed to information on selection of product its application or use product design, weight, dimensions, capacity or any other technical data in product manuals catalogues descriptions, advertisements, etc, and whether made available in writing orally, electronically, online or a download, shall be considered informative, and is only bring if and to the extent, explicitelesences made in a quotation or order confirmation Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material Danfoss reserves the right to alter its products without notice. The also applies to products ordered but not delivered provided that such alterations can be made without changes to form tor ction of the product. A trademarks in this material are property of Danfoss Danloss group companies: Danfoss and the Danfoss logo are trademarks of Danfoss A/S. Allights reserved.



Documents / Resources



<u>Danfoss 013G1246 Aero RA Click</u> [pdf] Instruction Manual 013G1246 Aero RA Click, 013G1246, Aero RA Click, RA Click, Click

Manuals+,