

## Danfoss 013G1246 Aero RA-V Remote Sensor Instruction **Manual**

Home » Danfoss » Danfoss 013G1246 Aero RA-V Remote Sensor Instruction Manual




#### Danfoss 013G1246 Aero RA-V Remote Sensor Instruction Manual




#### **Contents**


- 1 Installation
- 2 Remote sensor
- **3 Temperature Limitation**
- 4 Blind mark
- 5 Installation
- 6 Documents /
- Resources
- **7 Related Posts**


## Installation

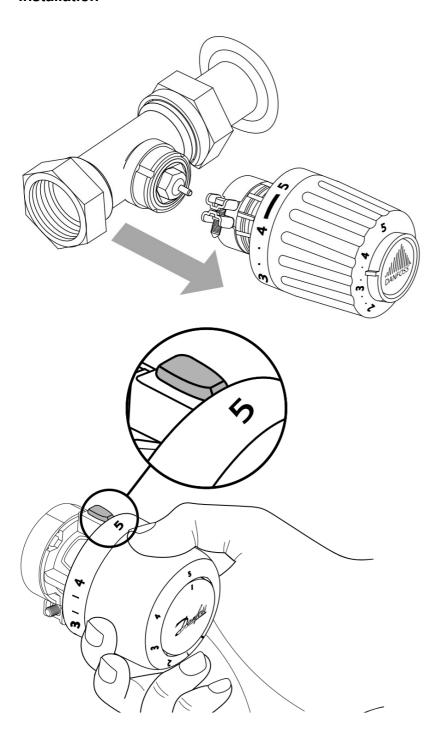

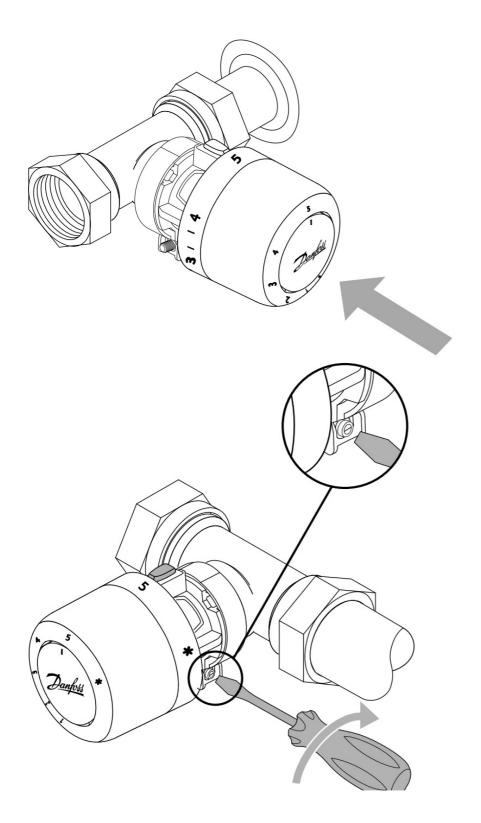


Remote sensor

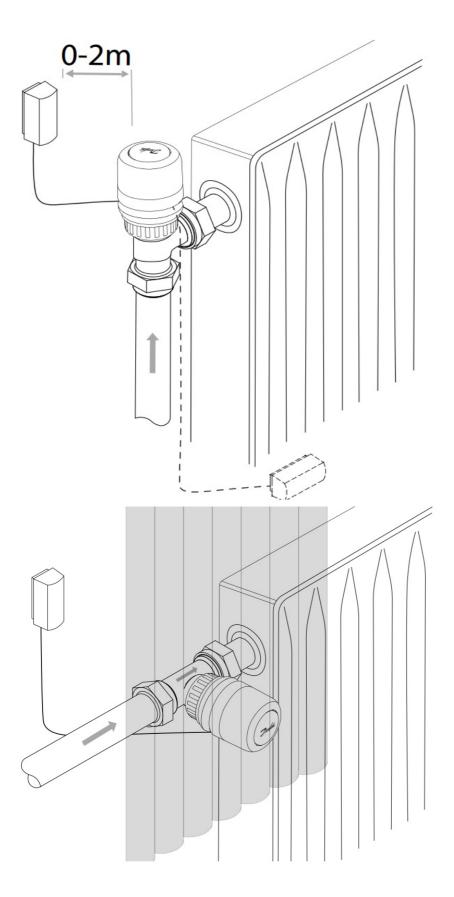


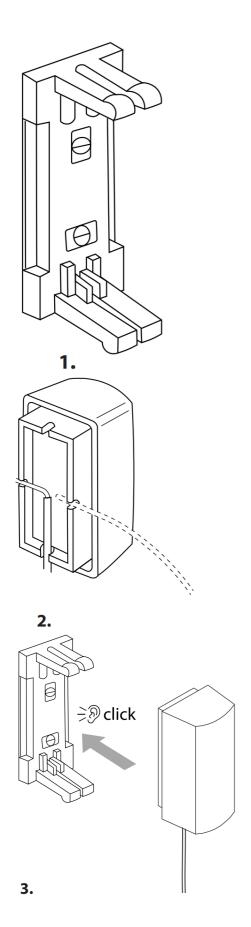


**Temperature Limitation** 

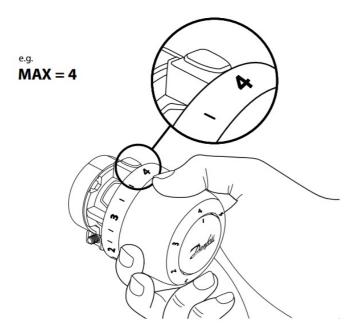


2.

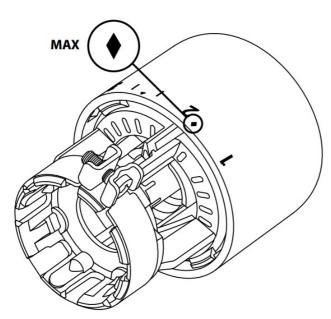


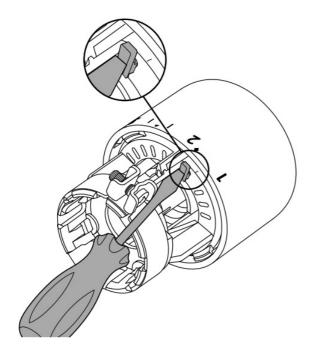


1.

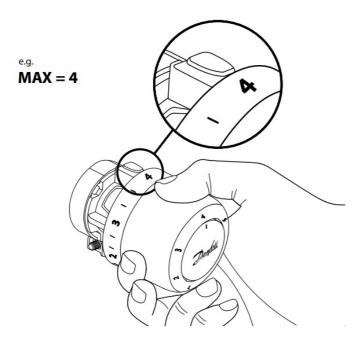

2.

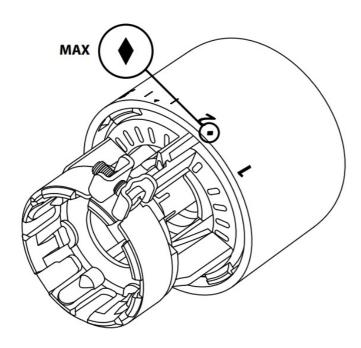


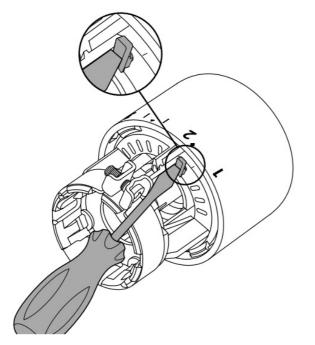

## 013G1246




## **Blind mark**

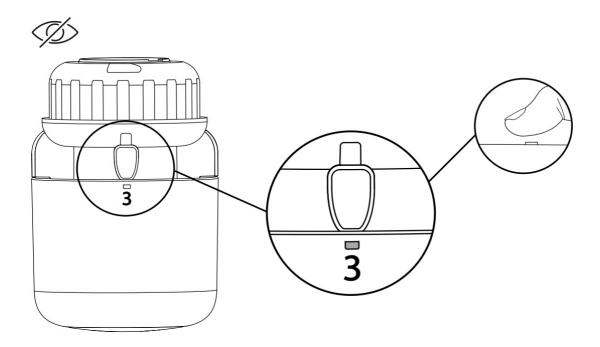


015G4951




## Installation

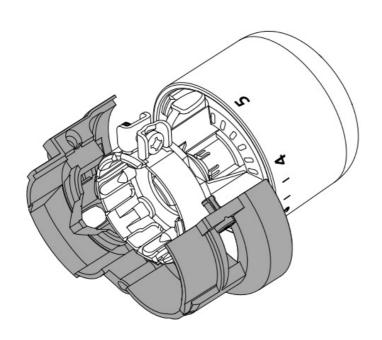


2.

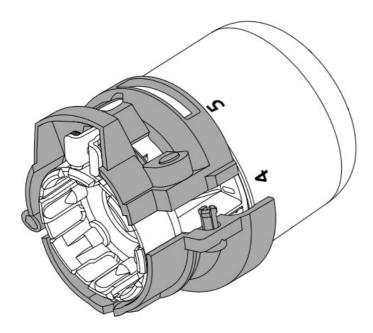

3.

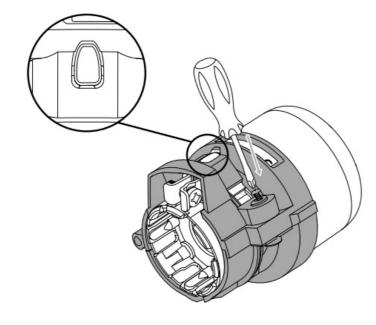

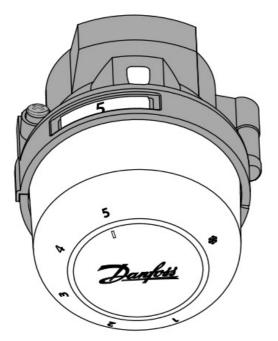

- · Climate Solutions
- danfoss.com
- +45 7488 2222

Any Information, including, but not limited to information on selection of product, its application or use product design, weight, dimensions, capacity or any other technical data in product manuals catalogues descriptions, advertisements etc and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, for functions of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



#### **Documents / Resources**



<u>Danfoss 013G1246 Aero RA-V Remote Sensor</u> [pdf] Instruction Manual 013G1246 Aero RA-V Remote Sensor, 013G1246, Aero RA-V Remote Sensor, RA-V Remote Sensor, Remote Sensor, Sensor

Manuals+,