



Danfoss 013G1246 Aero RA-VL Remote Sensor Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 013G1246 Aero RA-VL Remote Sensor Installation Guide 



013G1246 Aero RA-VL Remote Sensor Installation Guide


Contents

- [1 013G1246 Aero RA-VL Remote Sensor](#)
- [2 Installation](#)
- [3 Temperature Limitation](#)
- [4 Documents / Resources](#)


013G1246 Aero RA-VL Remote Sensor




Installation

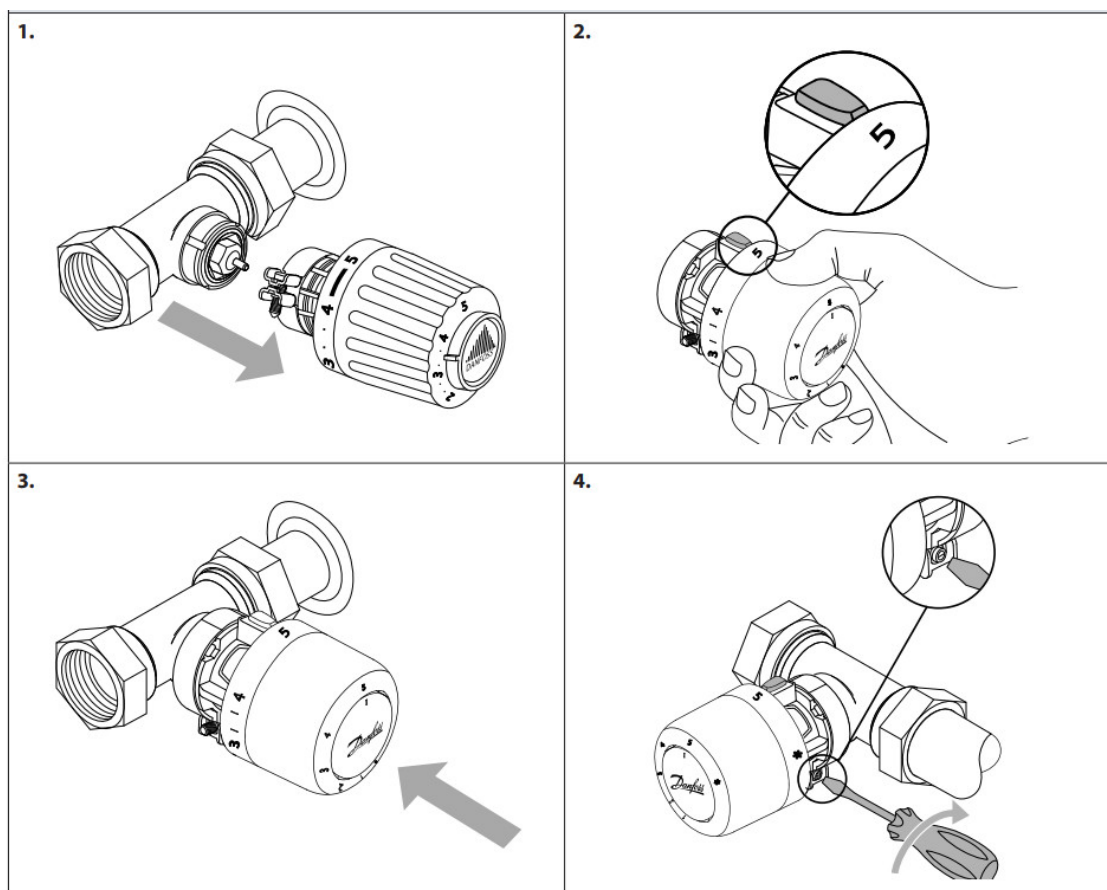


Remote sensor

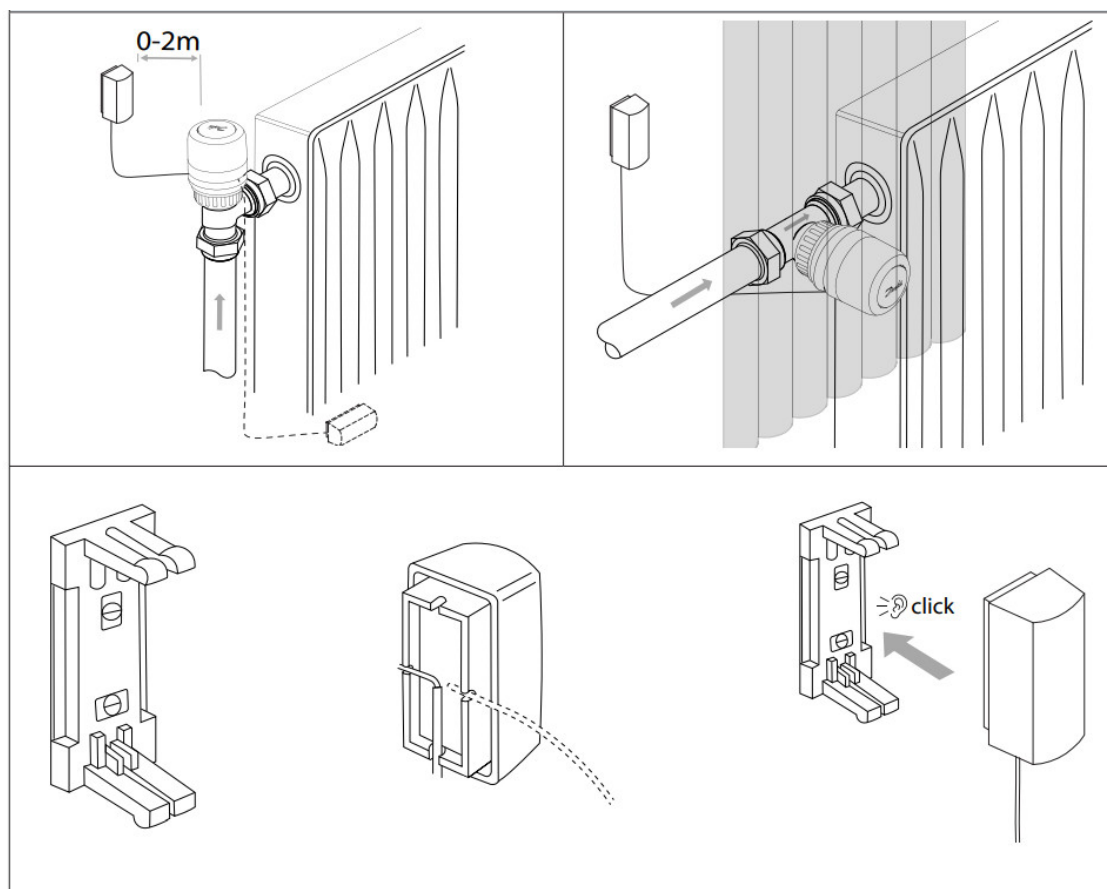


Temperature Limitation

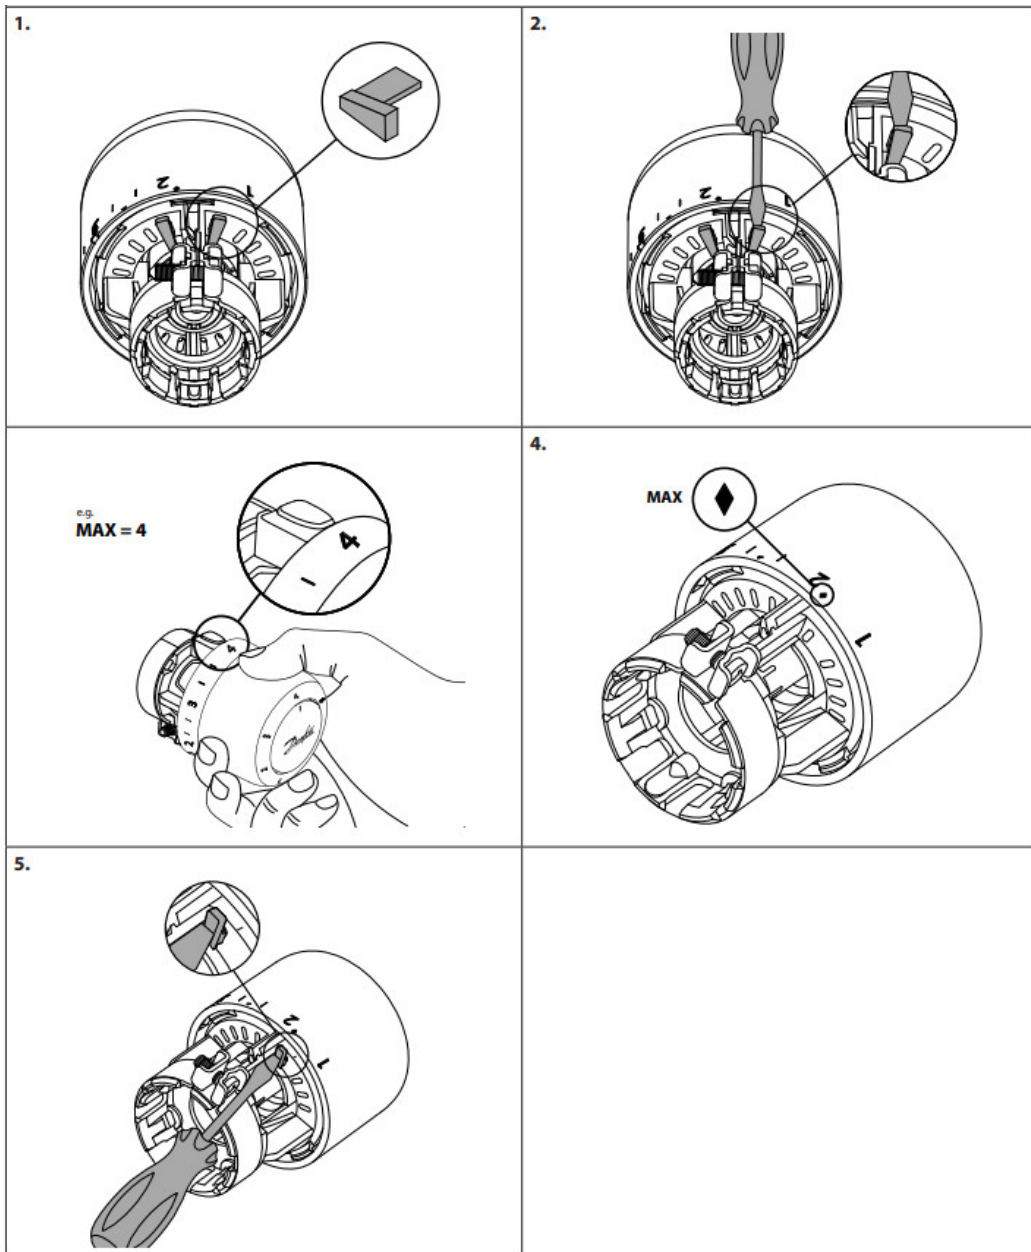


Temperature Limitation

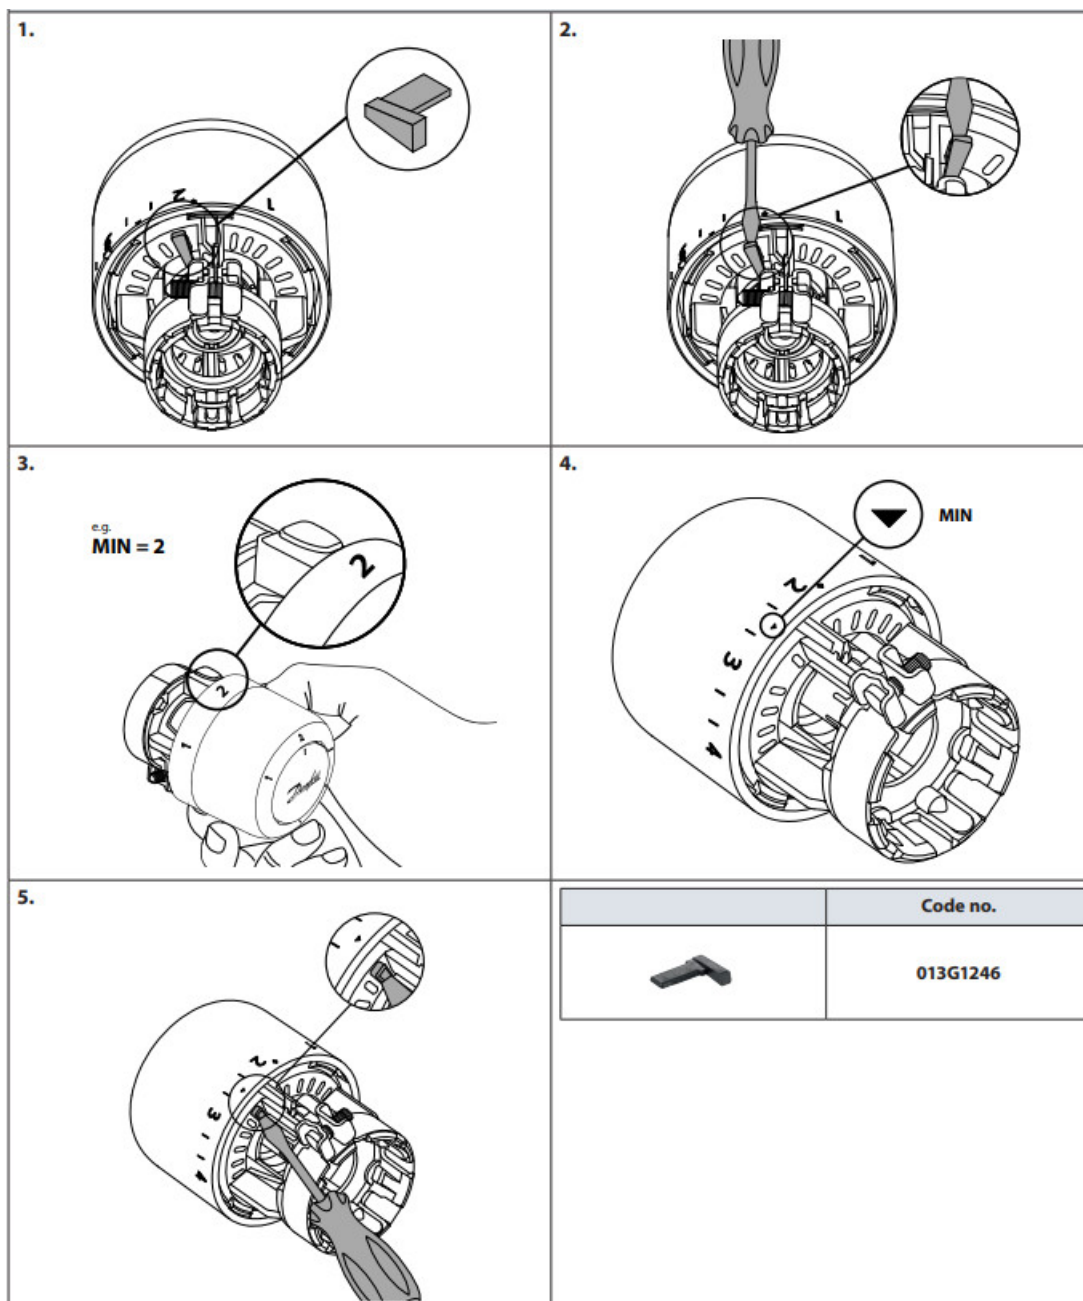


Blind mark|

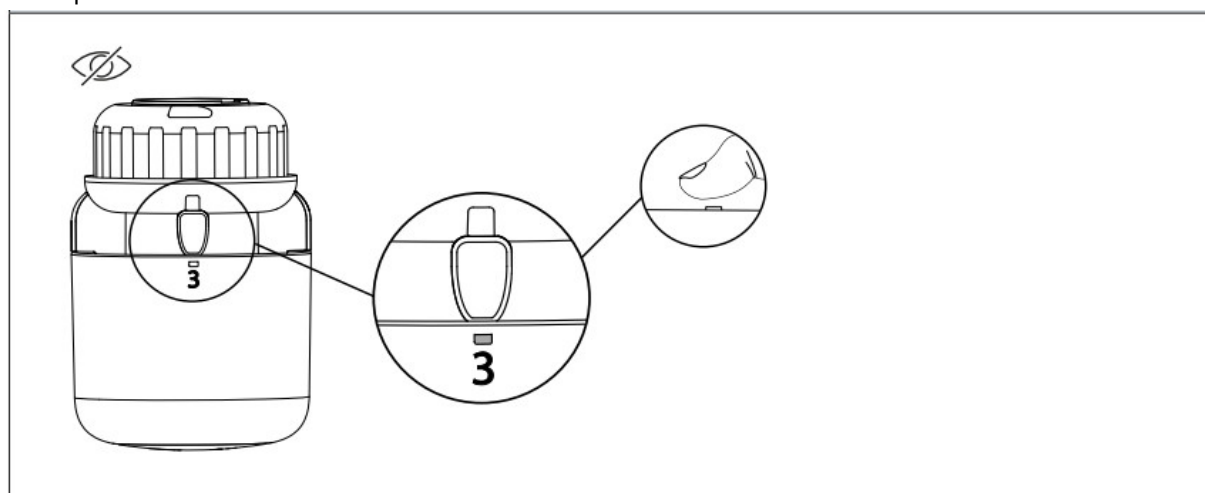

	Code no.
	015G4951

Installation

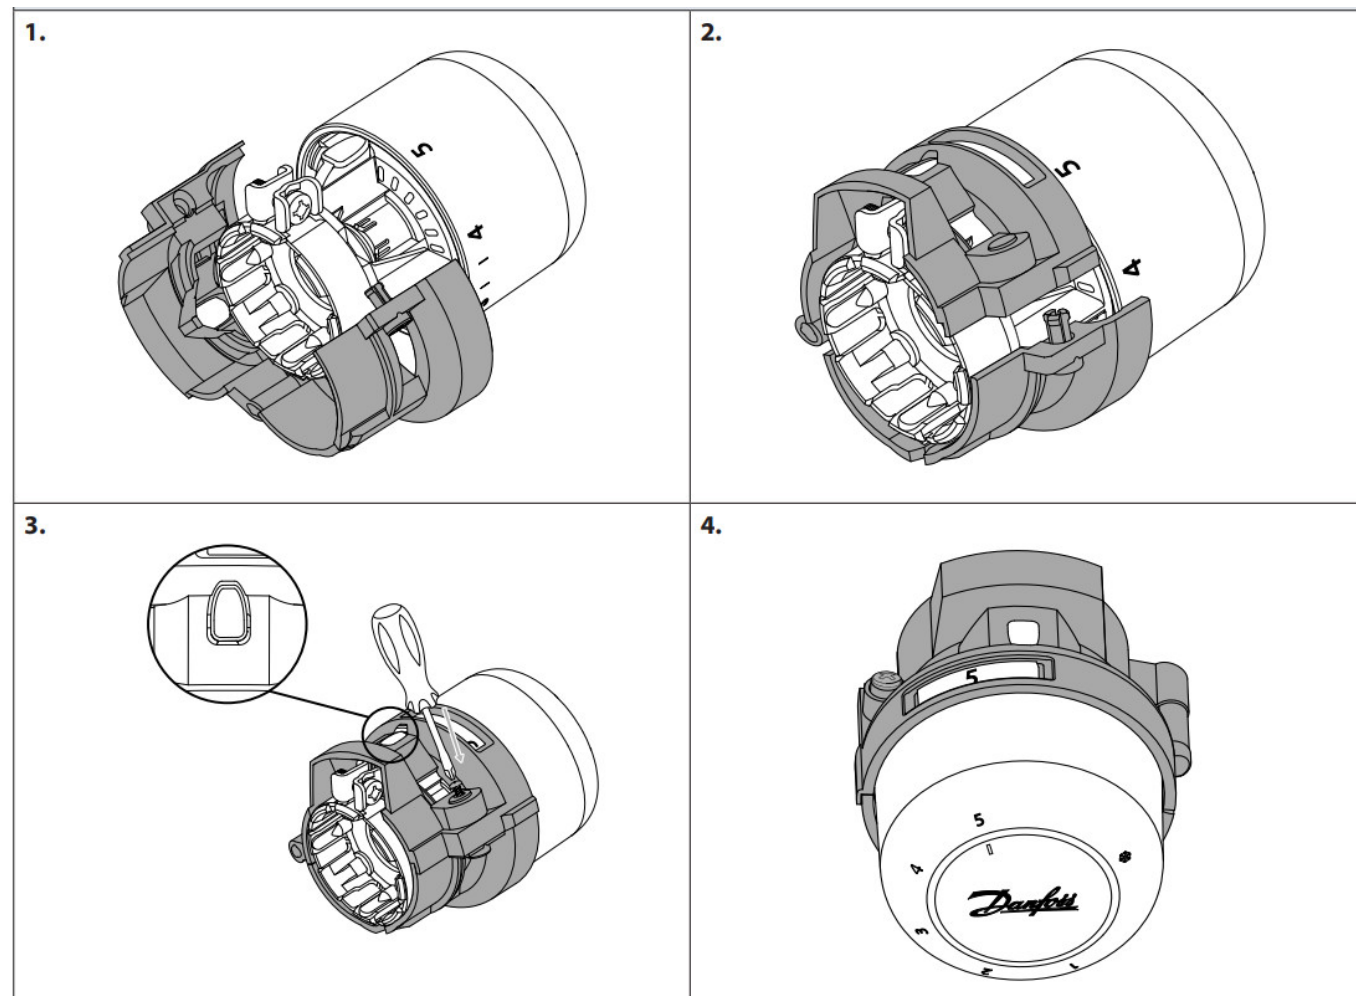

Danfoss A/S Climate Solutions danfoss.com +45 7488 2222


Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



© Danfoss Climate Solutions
2023.10

Documents / Resources

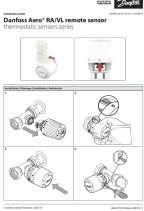	<p>Danfoss 013G1246 Aero RA-VL Remote Sensor [pdf] Installation Guide</p> <p>013G1246 Aero RA-VL Remote Sensor, 013G1246, Aero RA-VL Remote Sensor, RA-VL Remote Sensor, Remote Sensor, Sensor</p>
---	--

[Manuals+](#)