



Danfoss 013G1246 Click Thermostatic Sensors Instruction Manual

Home » Danfoss » Danfoss 013G1246 Click Thermostatic Sensors Instruction Manual




Contents

- 1 Danfoss 013G1246 Click Thermostatic Sensors
- 2 Installation
- 3 BIV Installation
- 4 Uninstall
- **5 Temperature Limitation**
- 6 Blind mark
- 7 Specifications:
- 8 FAQ:
 - 8.1 Q: What do I do if the product does not reach the set capacity?
 - 8.2 Q: Can I exceed the maximum capacity settings?
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**


Danfoss 013G1246 Click Thermostatic Sensors

Danfoss Aveo® RA click / 015G4090 015G4290




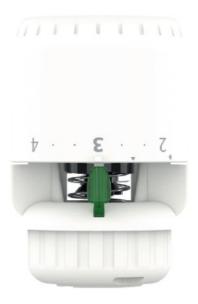


Installation

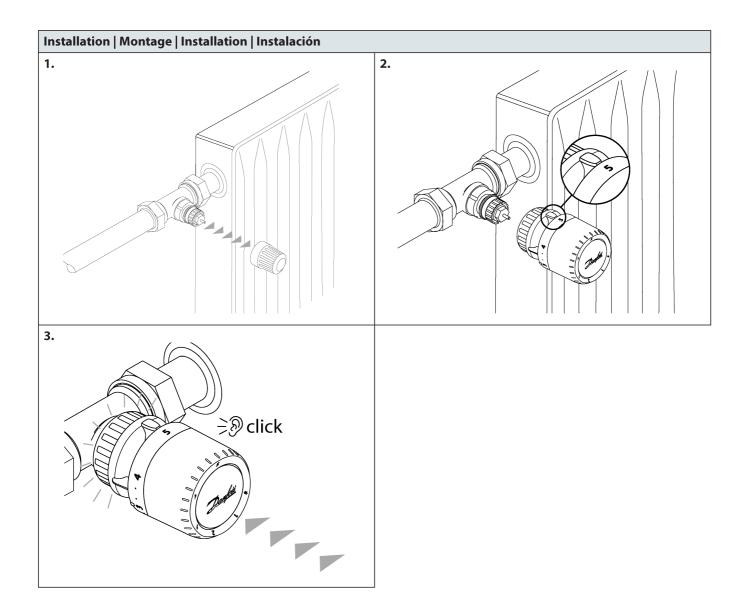


BIV Installation

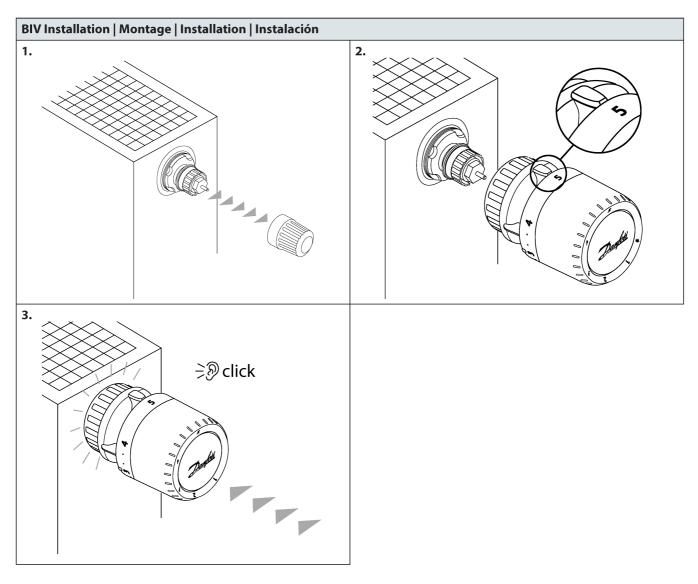


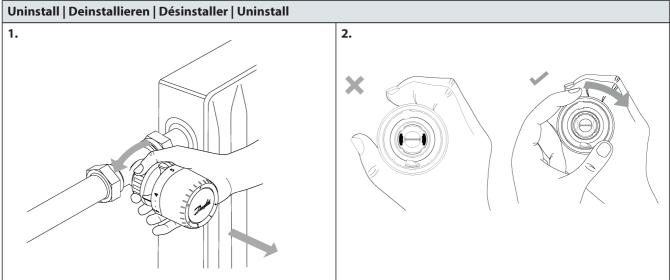


Uninstall

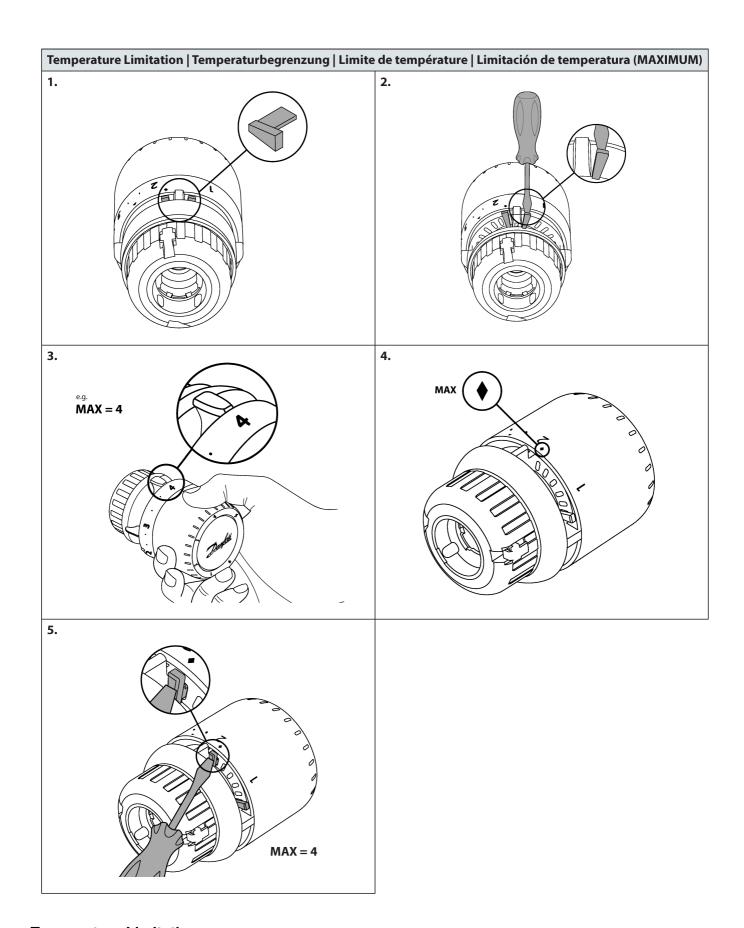

Temperature Limitation

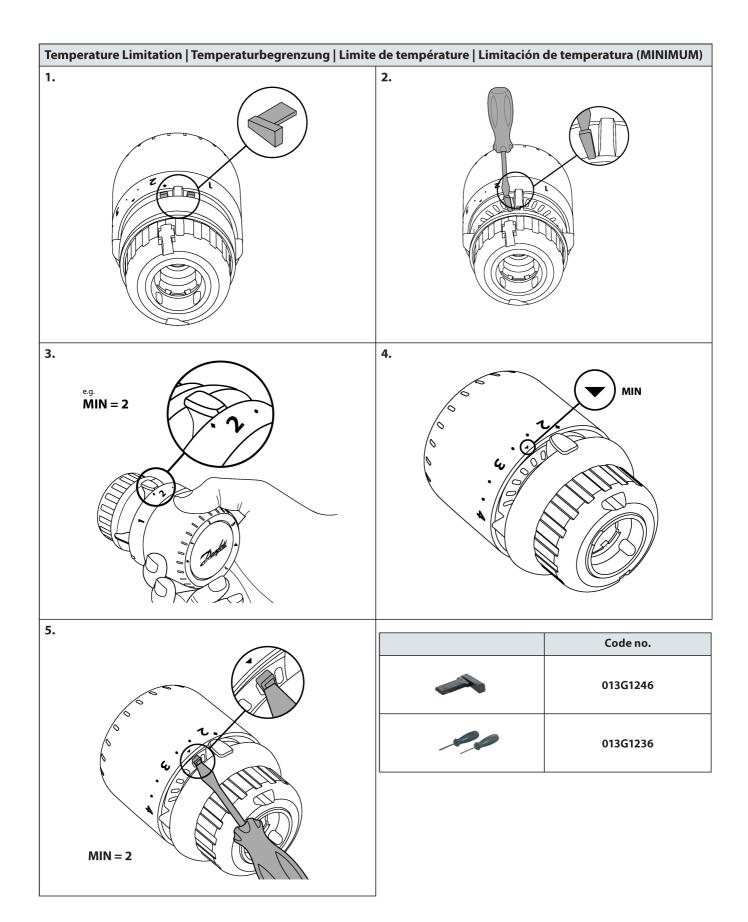

Blind mark

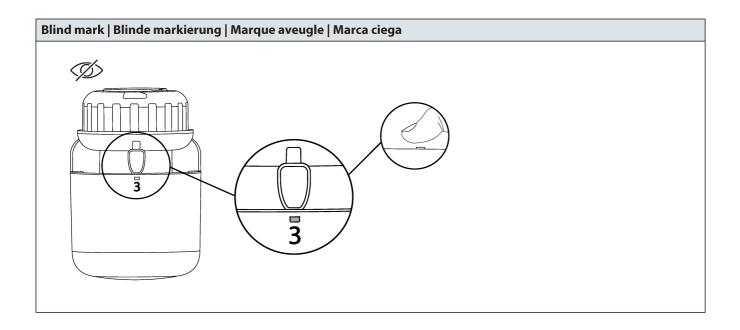

DanfossA/5

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, on line or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material.

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/Sor Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

Specifications:

Model: AN447469021490en-000102

Max Capacity: 4 unitsMin Capacity: 2 units

Product Codes: 013G1246, 013G1236

FAQ:

Q: What do I do if the product does not reach the set capacity?

A: Check the installation steps again to ensure proper setup. If issues persist, contact customer support for assistance.

Q: Can I exceed the maximum capacity settings?

A: It is not recommended to exceed the specified maximum capacity as it may affect product performance and

durability.

Documents / Resources



<u>Danfoss 013G1246 Click Thermostatic Sensors</u> [pdf] Instruction Manual 013G1246, 013G1236, 013G1246 Click Thermostatic Sensors, 013G1246, Click Thermostatic Sensors, Thermostatic Sensors, Sensors

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.