




Danfoss 013G3111 Dismantle Tool User Guide

[Home](#) » [Danfoss](#) » Danfoss 013G3111 Dismantle Tool User Guide 



**ENGINEERING
TOMORROW
Code / 013G3086
Operating Guide**


Contents

- [1 Dismantle tool \[Schleuse\]](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)







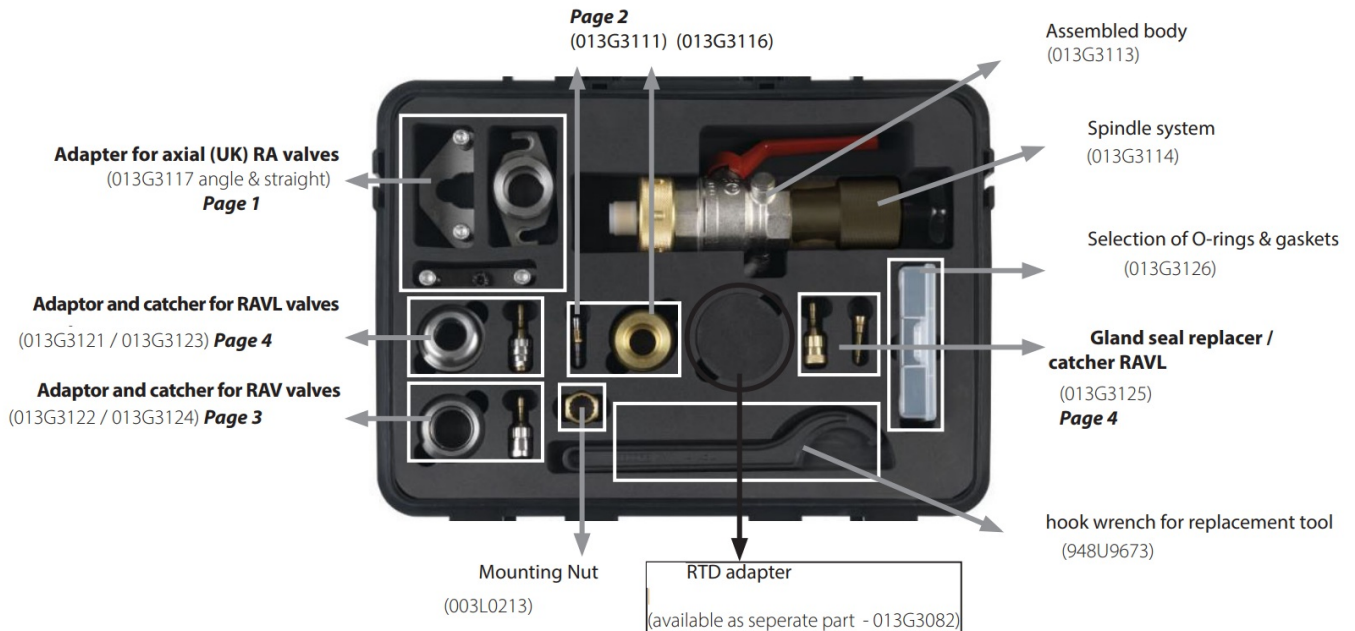

















Dismantle tool [Schleuse]

Replacement tool and instructions for exchanging Danfoss valve insert in valve RAVL, RAV and RA 2000 in a non-drained system

Adapter and catcher for RA valves



Valve types, valve inserts/replacement list

| RA | Size | Type | Service Insert | RA/V | | Size | Service Insert | RA Upgrade Insert |
|--|-------------------------------------|---|---|---|---|---|---|---|
|  RA-N | 10 (3/8") 15 (1/2") | Angle/ Double Angle/ Straight |  013G3063 |  | 10-8 15-8 | 10 (3/8") 15 (1/2") |  013U0252 |  013G4013 |
|  RA-N | 20 (3/4") | Angle/ Axial/ Straight |  013G3064 | | 20-8 | 20 (3/4") |  013U0253 | |
| | | | | | | | | |
|  RA-N / RA-U | 10 (3/8") 15 (1/2") | Axial (UK) |  013G3065 |  | 0.5 / 0.8 | 10 (3/8") |  013L0248 |  013G4011 |
|  RA-U | 10 (3/8") 15 (1/2") 20 (3/4") | | | | Angle/ Straight |  013G3066 |  | |
| | |  RA-U | 0.2 | 20 (3/4") | | | |  013L0249 |
|  RA-U | 0.2 | | | 10 (3/8") |  013L0248 | | | |
| | |  RA-U | 0.2 | 15 (1/2") |  013L0249 | | | |
|  RA-U | 0.2 | | | 20 (3/4") |  013L0249 | | | |

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc and whether made available in writing, orally, electronically, online, or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order conformation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos, and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to the form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

© Danfoss Climate Solutions | 2024.01 | AN44004365401201-000201 (013R9419)

Documents / Resources



[Danfoss 013G3111 Dismantle Tool](#) [pdf] User Guide
013G3111 Dismantle Tool, 013G3111, Dismantle Tool, Tool

References

- [User Manual](#)