

Danfoss 013G5245 Redia RA click Thermostatic Sensors **Series Instruction Manual**

Home » Danfoss » Danfoss 013G5245 Redia RA click Thermostatic Sensors Series Instruction Manual





TOMORROW Danfoss Redia® RA click / 015G3396 **Installation Guide** Danfoss Redia® RA click thermostatic sensors series






Contents

- 1 Installation
- 2 Uninstall
- **3 Temperature Limitation**
- 4 Theft protection
- 5 Blind mark
- 6 Documents /


Resources

7 Related Posts


Installation

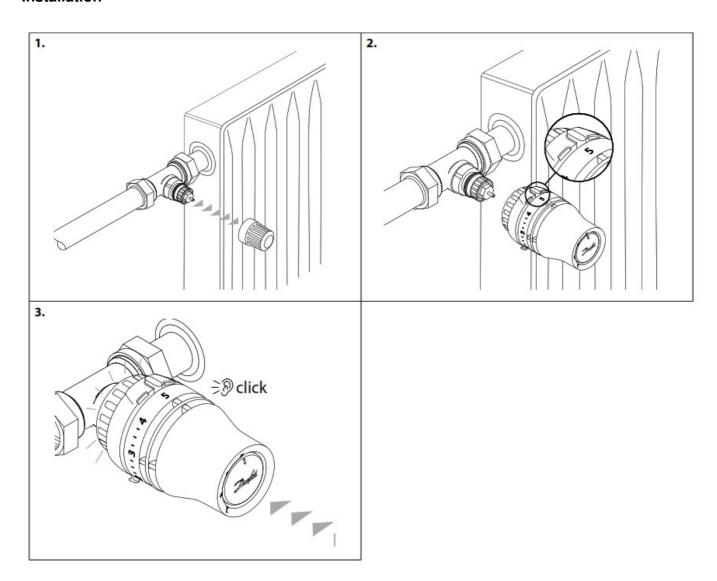


BIV Installation

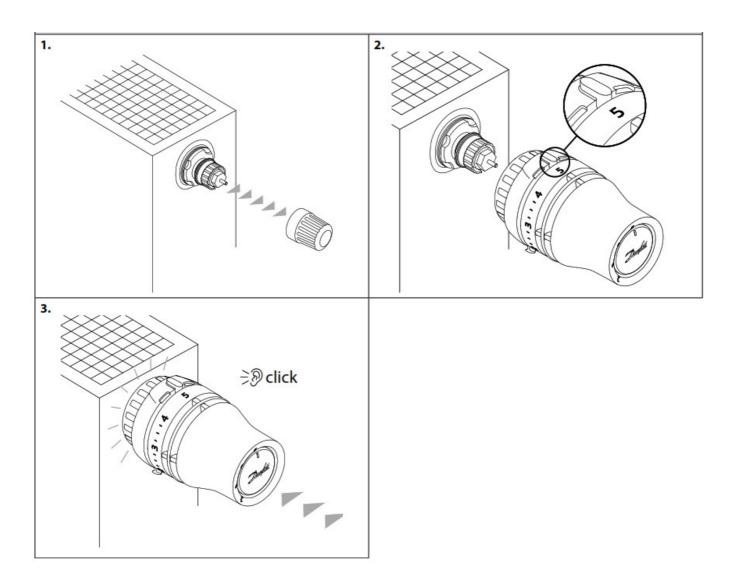


Uninstall

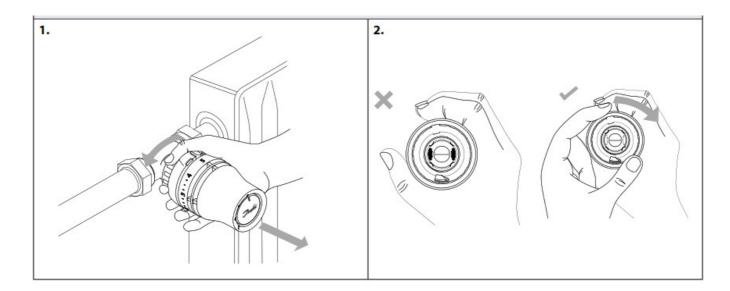


Temperature Limitation

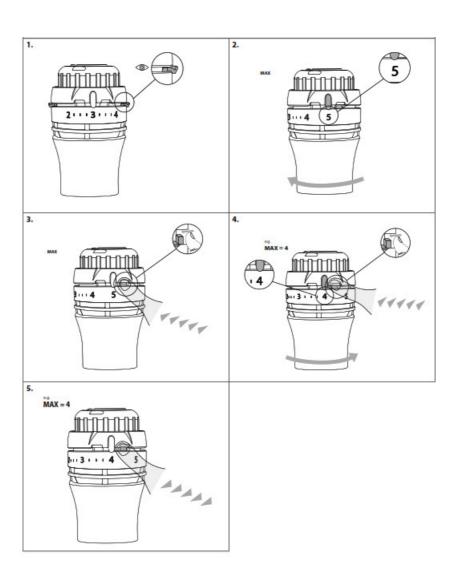


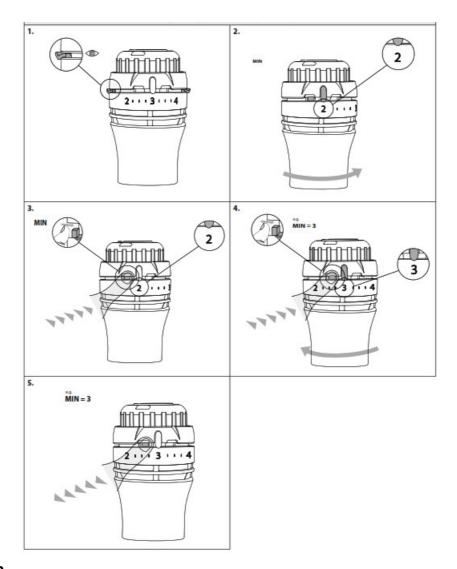

Theft protection

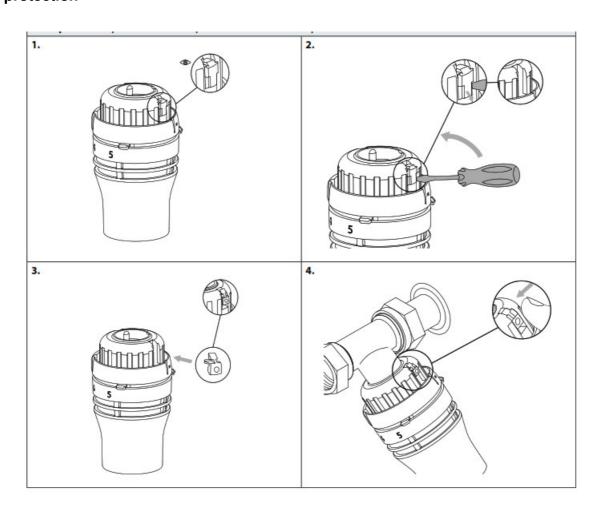


Theft protection (Removal)| (Entfernung)

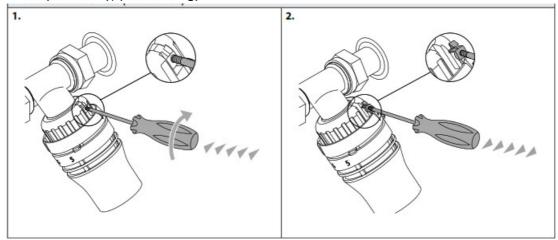

	Code no.
	013G5245
20	013G1236

Blind mark

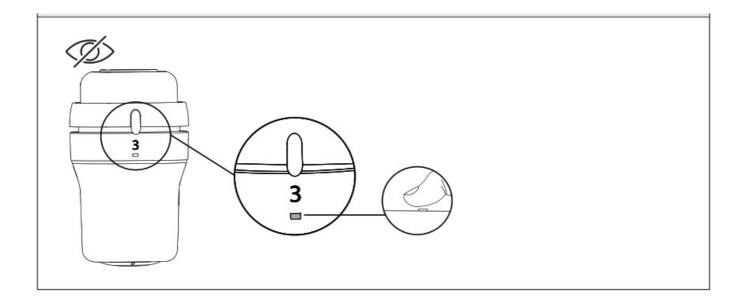

Danfoss A/S Climate Solutions – <u>danfoss.com</u> « +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

AN448535001950en-000101

Documents / Resources



<u>Danfoss 013G5245 Redia RA click Thermostatic Sensors Series</u> [pdf] Instruction Manual 013G5245 Redia RA click Thermostatic Sensors Series, 013G5245, Redia RA click Thermostatic Sensors Series, Sensors Series

Manuals+,