

# **Danfoss 013G5287 Redia RTD Thermostatic Sensors Installation Guide**

Home » Danfoss » Danfoss 013G5287 Redia RTD Thermostatic Sensors Installation Guide 🖫



#### Contents

- 1 Danfoss 013G5287 Redia RTD Thermostatic **Sensors**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Installation
- **5 Temperature Limitation**
- **6 Theft protection**
- 7 Blind mark
- 8 Documents / Resources
- 9 Related Posts



Danfoss 013G5287 Redia RTD Thermostatic Sensors



#### **Product Information**

The product is a code number 013G5287 Blind mark. It is designed to be installed following the instructions provided in the user manual.

### **Product Usage Instructions**

#### · Installation Guide

- Follow the steps provided in the installation guide.
- Refer to the code number 013G5287 Blind mark for accurate installation.
- Ensure that the torque applied during installation is 15Nm.

#### MAX


- Set the product to the maximum level.
- Refer to the example given for setting MAX, which is 4.

### • MIN


- Set the product to the minimum level.
- Refer to the example given for setting MIN, which is 3.


**Note:** For any additional information or troubleshooting, please refer to the AN448535227958en-000101 user manual.


#### Installation

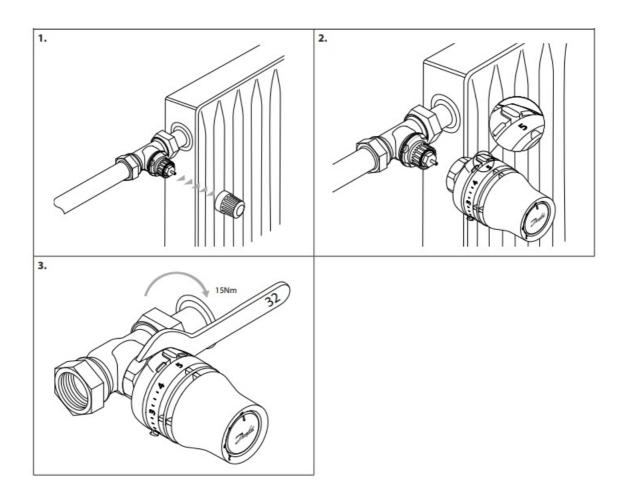


# **Temperature Limitation**

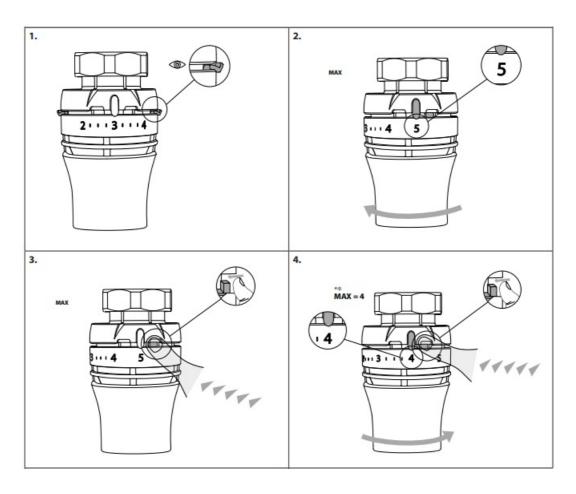

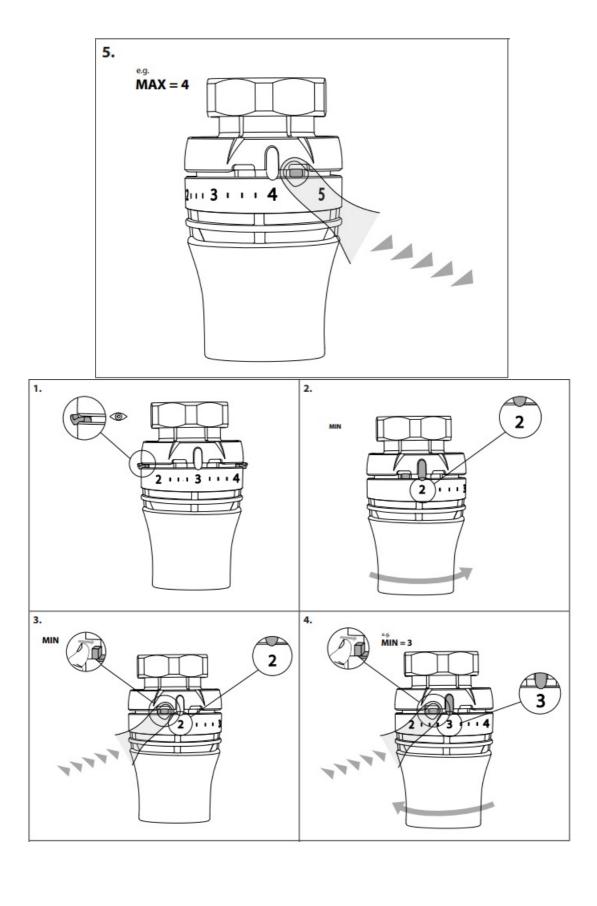

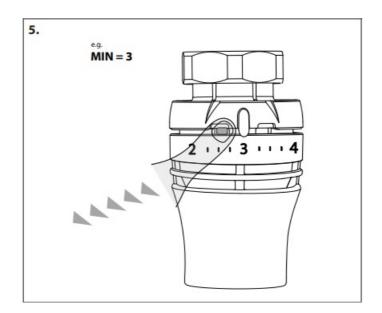


# Theft protection

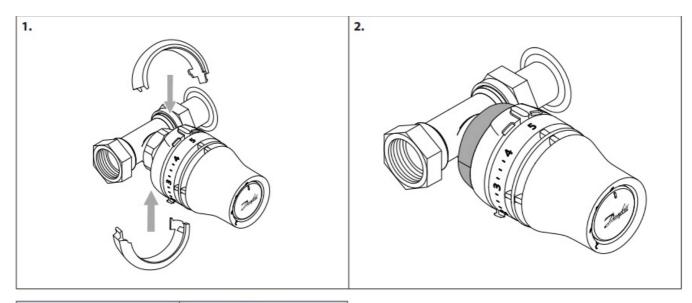

Code no.
013G5287

### **Blind mark**

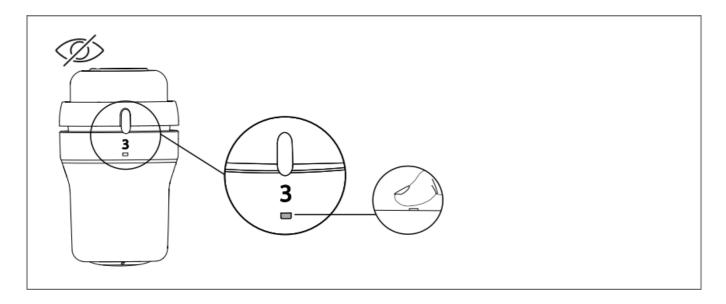

#### Danfoss A/S

Climate Solutions Web: <u>danfoss.com</u> Tel: +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material.

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

#### **Documents / Resources**



<u>Danfoss 013G5287 Redia RTD Thermostatic Sensors</u> [pdf] Installation Guide 013G5287 Redia RTD Thermostatic Sensors, 013G5287, Redia RTD Thermostatic Sensors, T hermostatic Sensors, Sensors

Manuals+,