



Danfoss 013R9504 Rav and Ravl Adapter Instructions

[Home](#) » [Danfoss](#) » Danfoss 013R9504 Rav and Ravl Adapter Instructions 

Danfoss 013R9504 Rav and Ravl Adapter Instructions




Contents


- [1 How to remove a pre-mounted adapter](#)
- [2 RAV & RAVL ADAPTER](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

How to remove a pre-mounted adapter


1. Press and hold until large M flashes. This indicates you are in mounting mode.

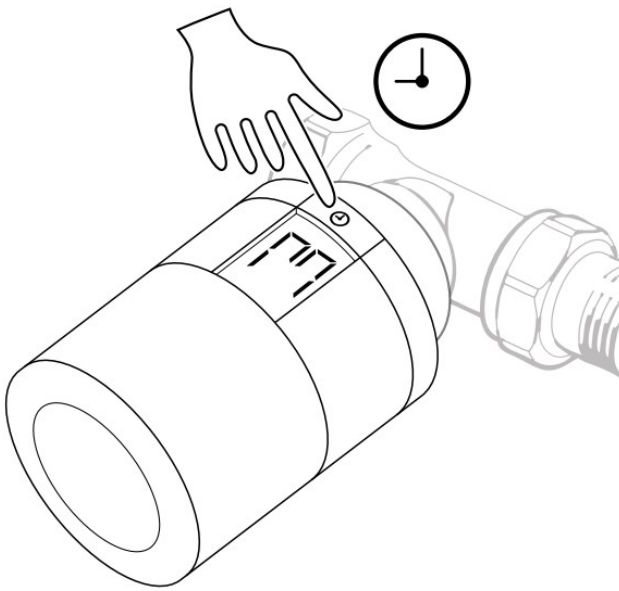

2. Remove the cover.

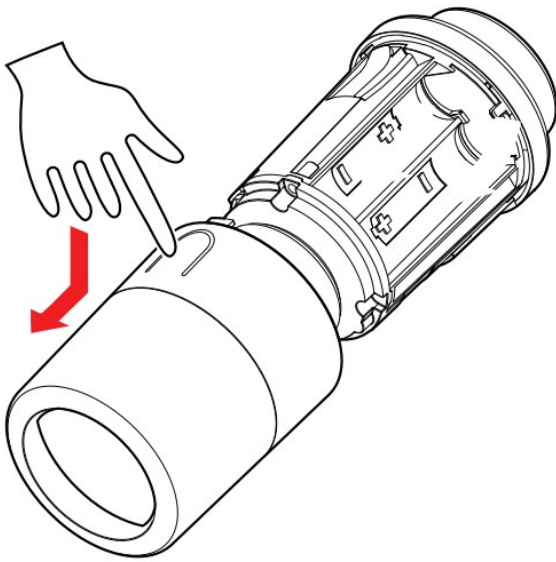


3. Press firmly on the tab and unscrew the thermostat from the adapter.

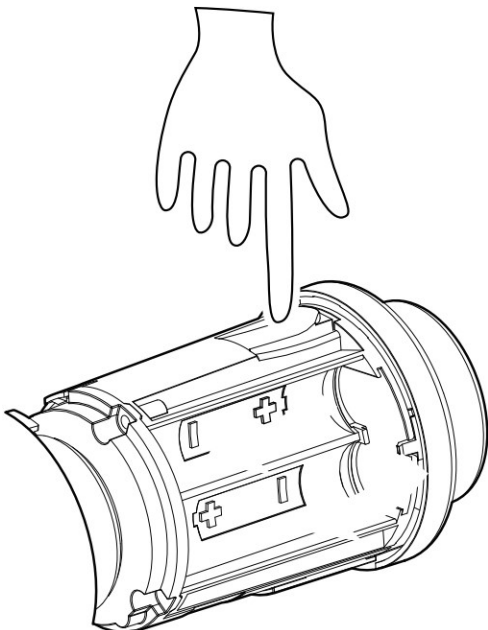



RAV & RAVL ADAPTER

VAR

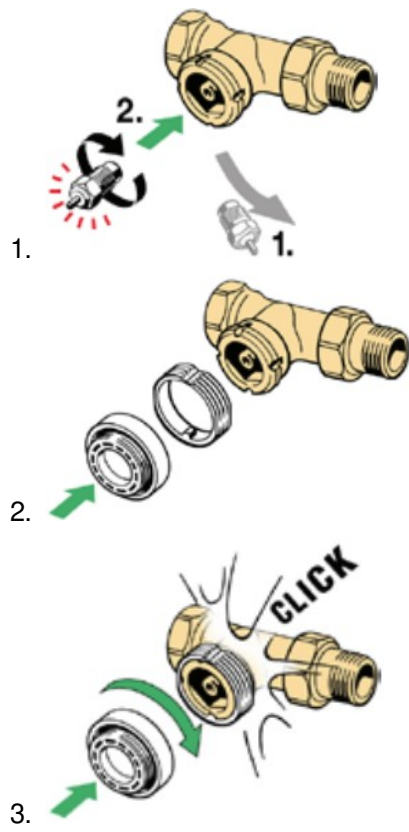

LVAR

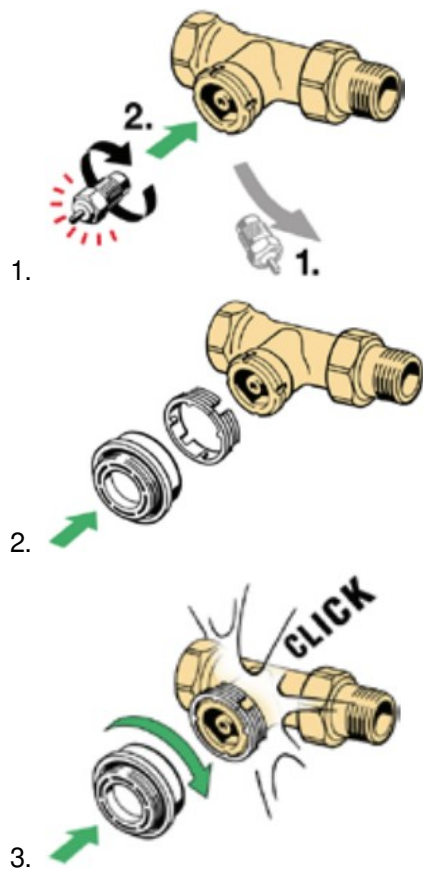

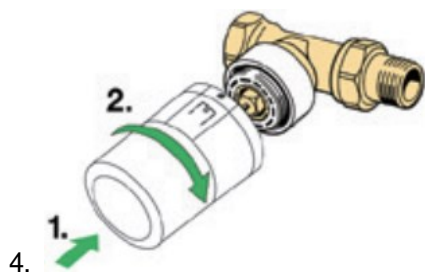

Documents / Resources

	Danfoss 013R9504 Rav and Ravl Adapter [pdf] Instructions 013R9504 Rav and Ravl Adapter, 013R9504, Rav and Ravl Adapter, Ravl Adapter, Adapter
---	---