



# Danfoss 015G3398 Redia RA click Thermostatic Sensors Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 015G3398 Redia RA click Thermostatic Sensors Installation Guide 

## Contents


- [1 Danfoss 015G3398 Redia RA click Thermostatic Sensors](#)
- [2 Installation](#)
  - [2.1 BIV Installation](#)
  - [2.2 Uninstall](#)
- [3 Temperature Limitation](#)
- [4 Shut off](#)
- [5 Theft protection](#)
- [6 Blind mark](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)




**Danfoss 015G3398 Redia RA click Thermostatic Sensors**




## Installation

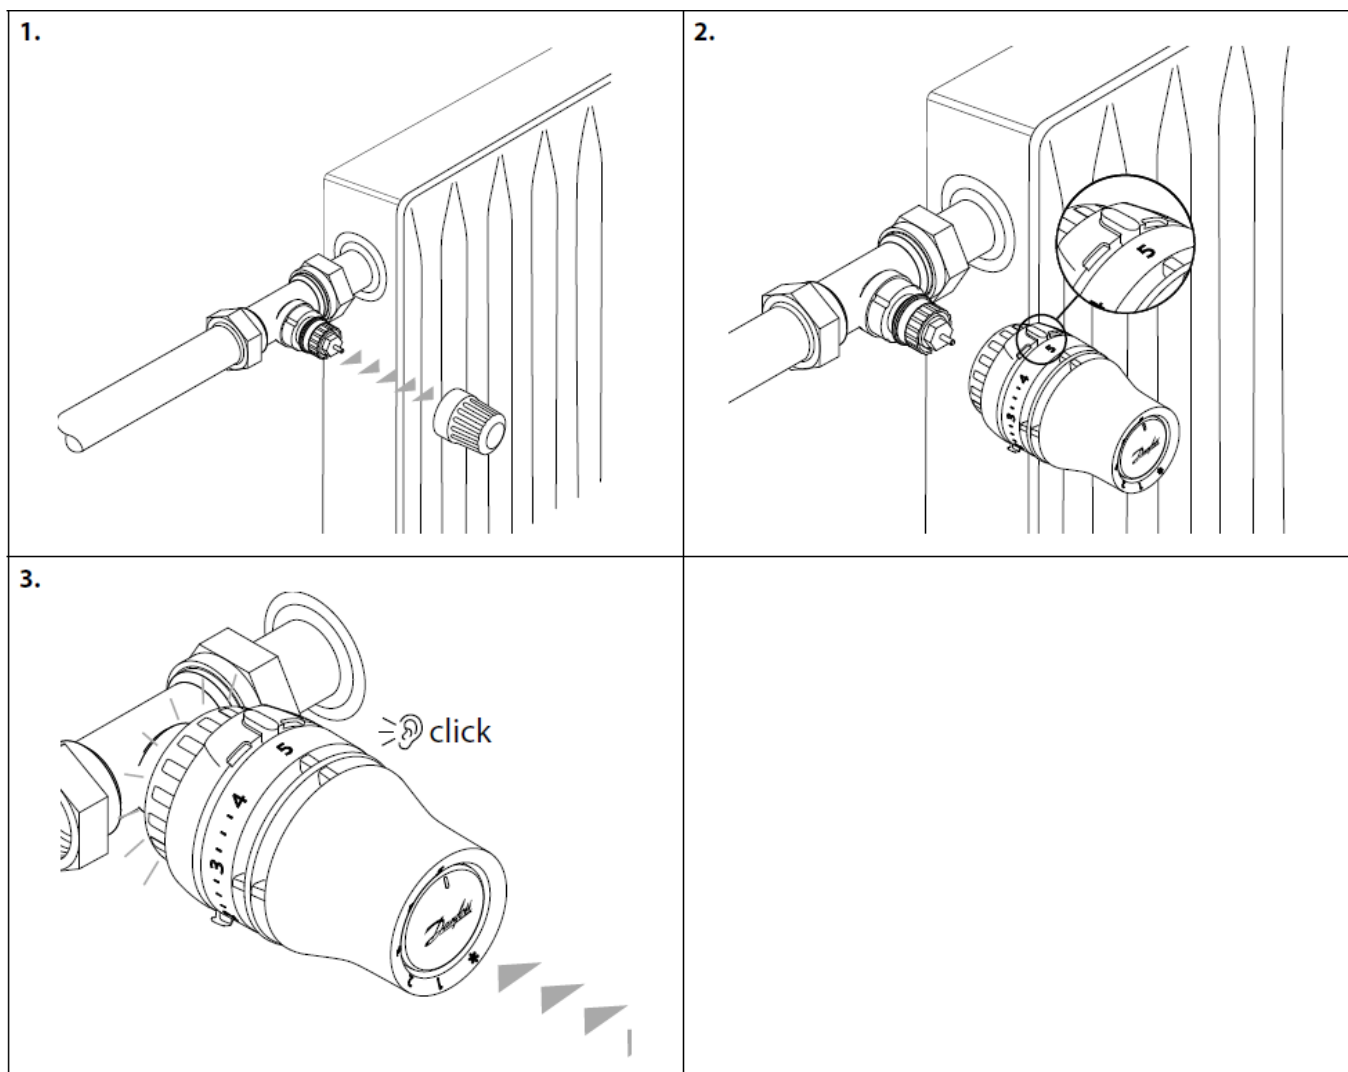

## BIV Installation

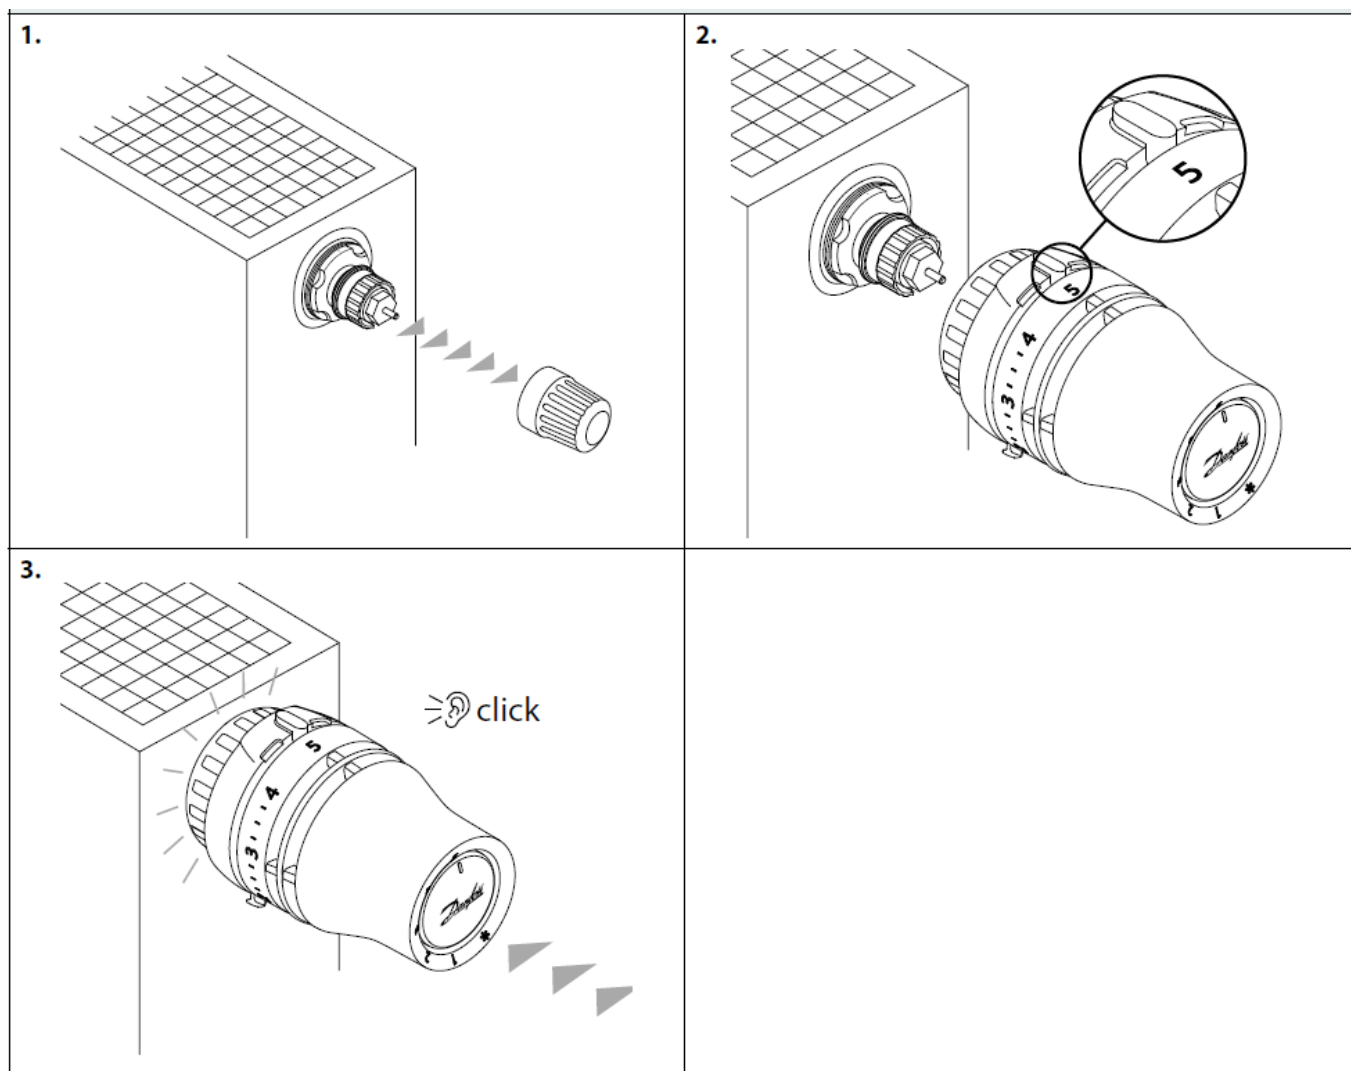


## Uninstall

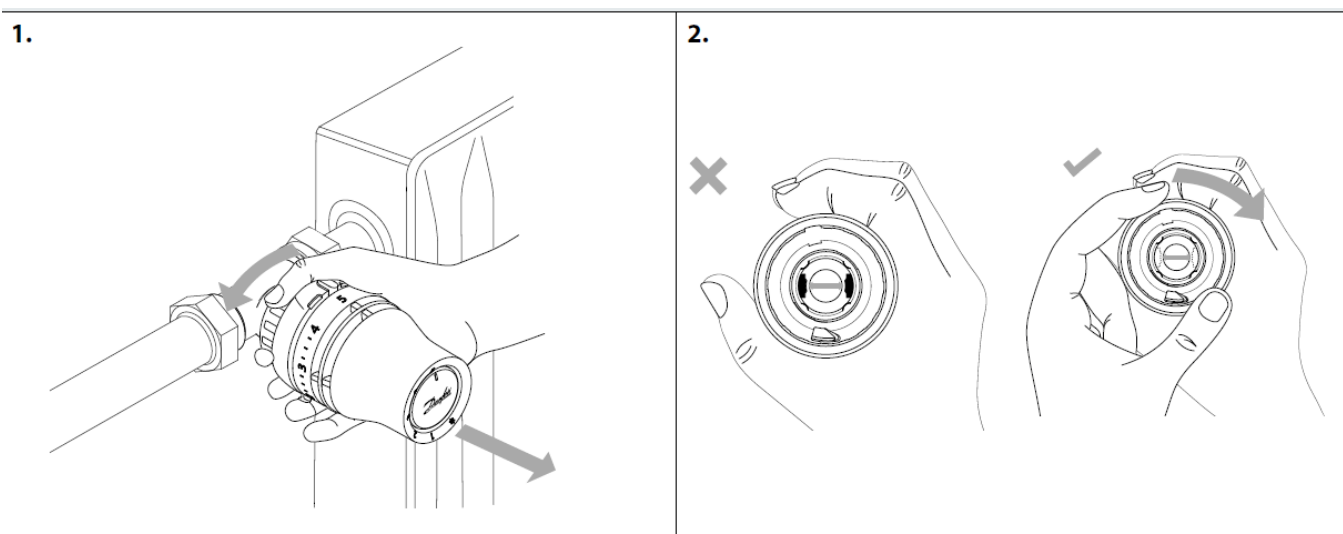


## Temperature Limitation


1.

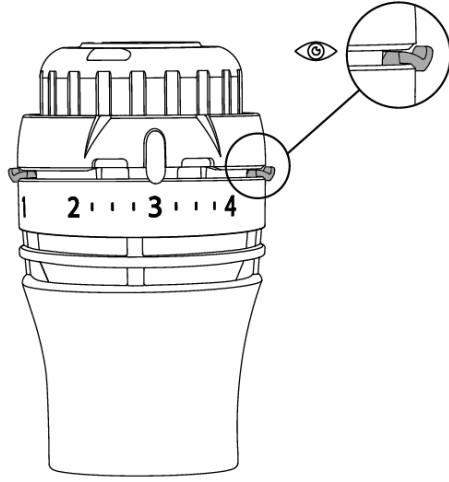


2.

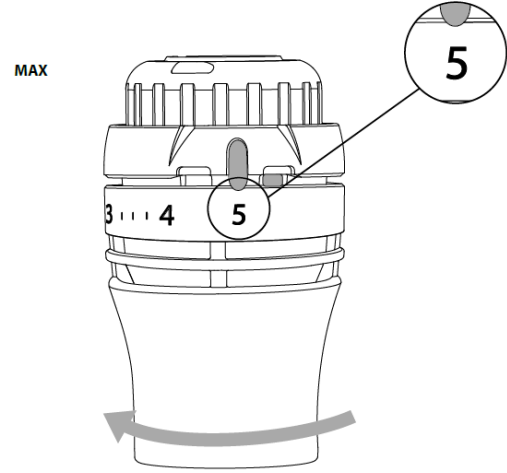

3.

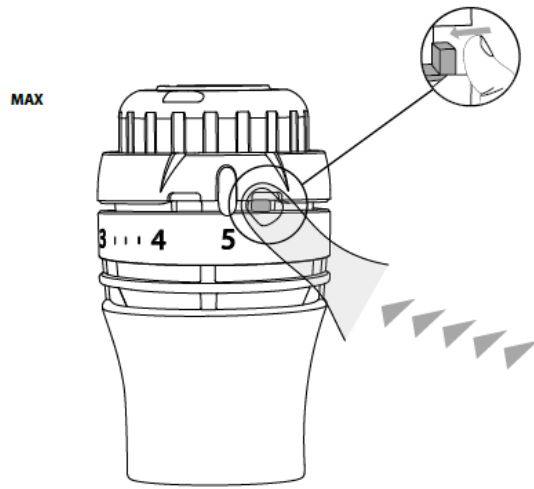


4.

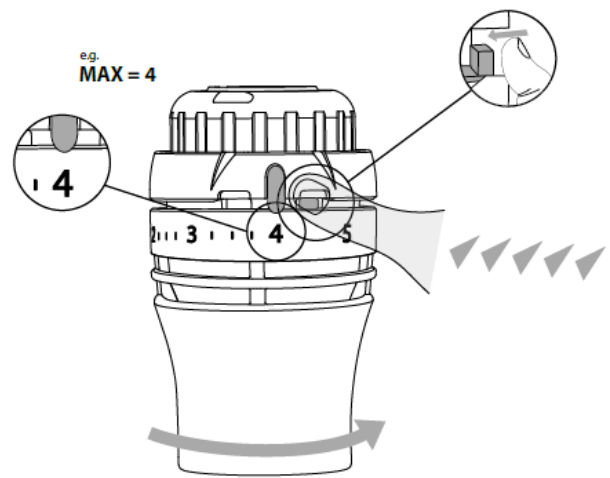


5.

e.g.  
MAX = 4

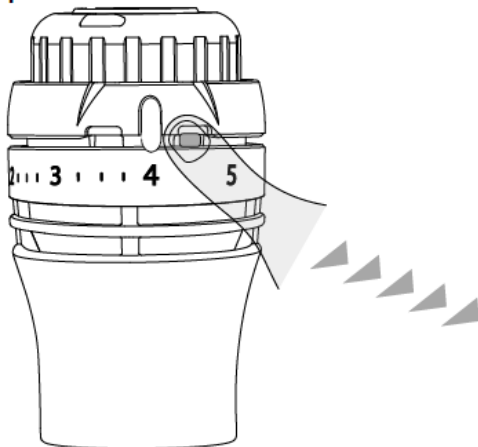


Temperature Limitation

1.

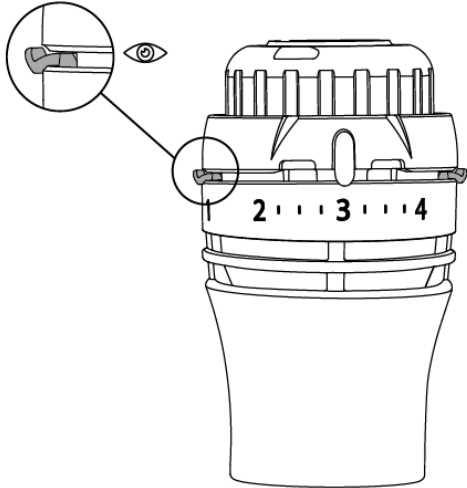


2.

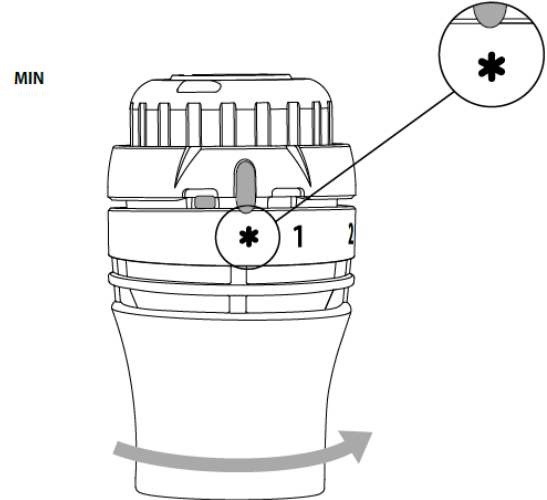


3.

MIN

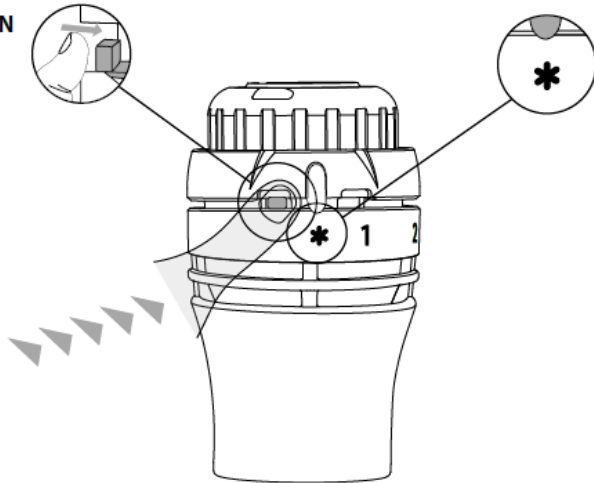


4.

eg.  
MIN = 2

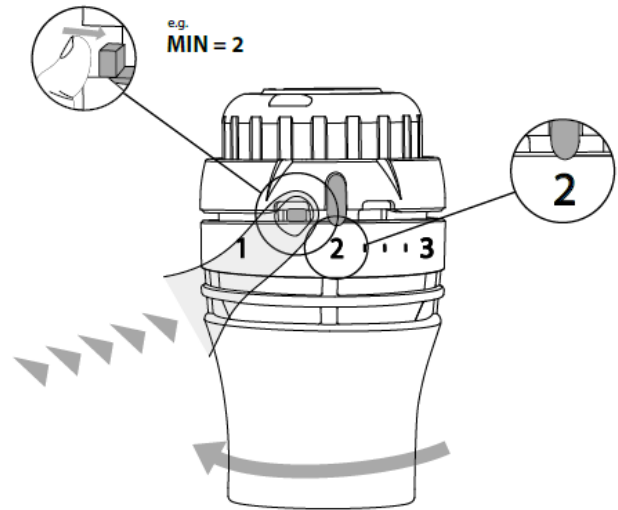


5.

eg.  
MIN = 2

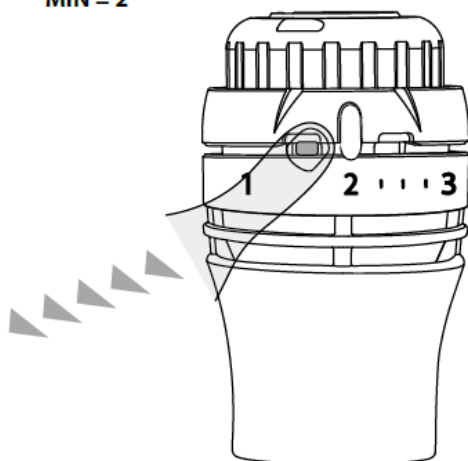


Shut off


1.

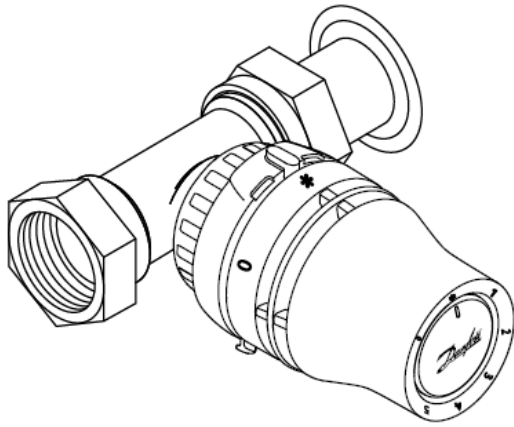


2.

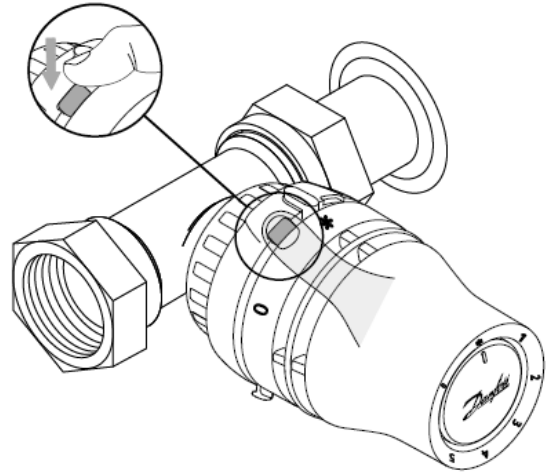


3.

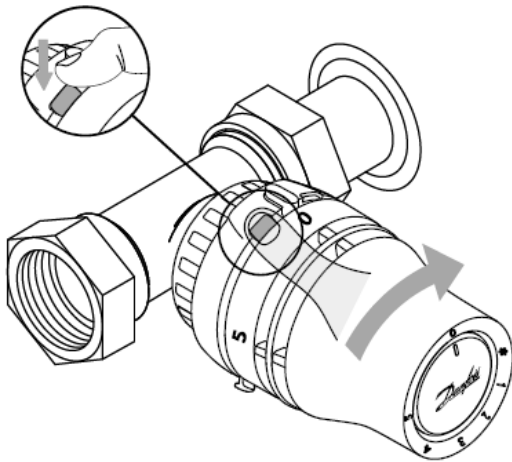

**Theft protection**

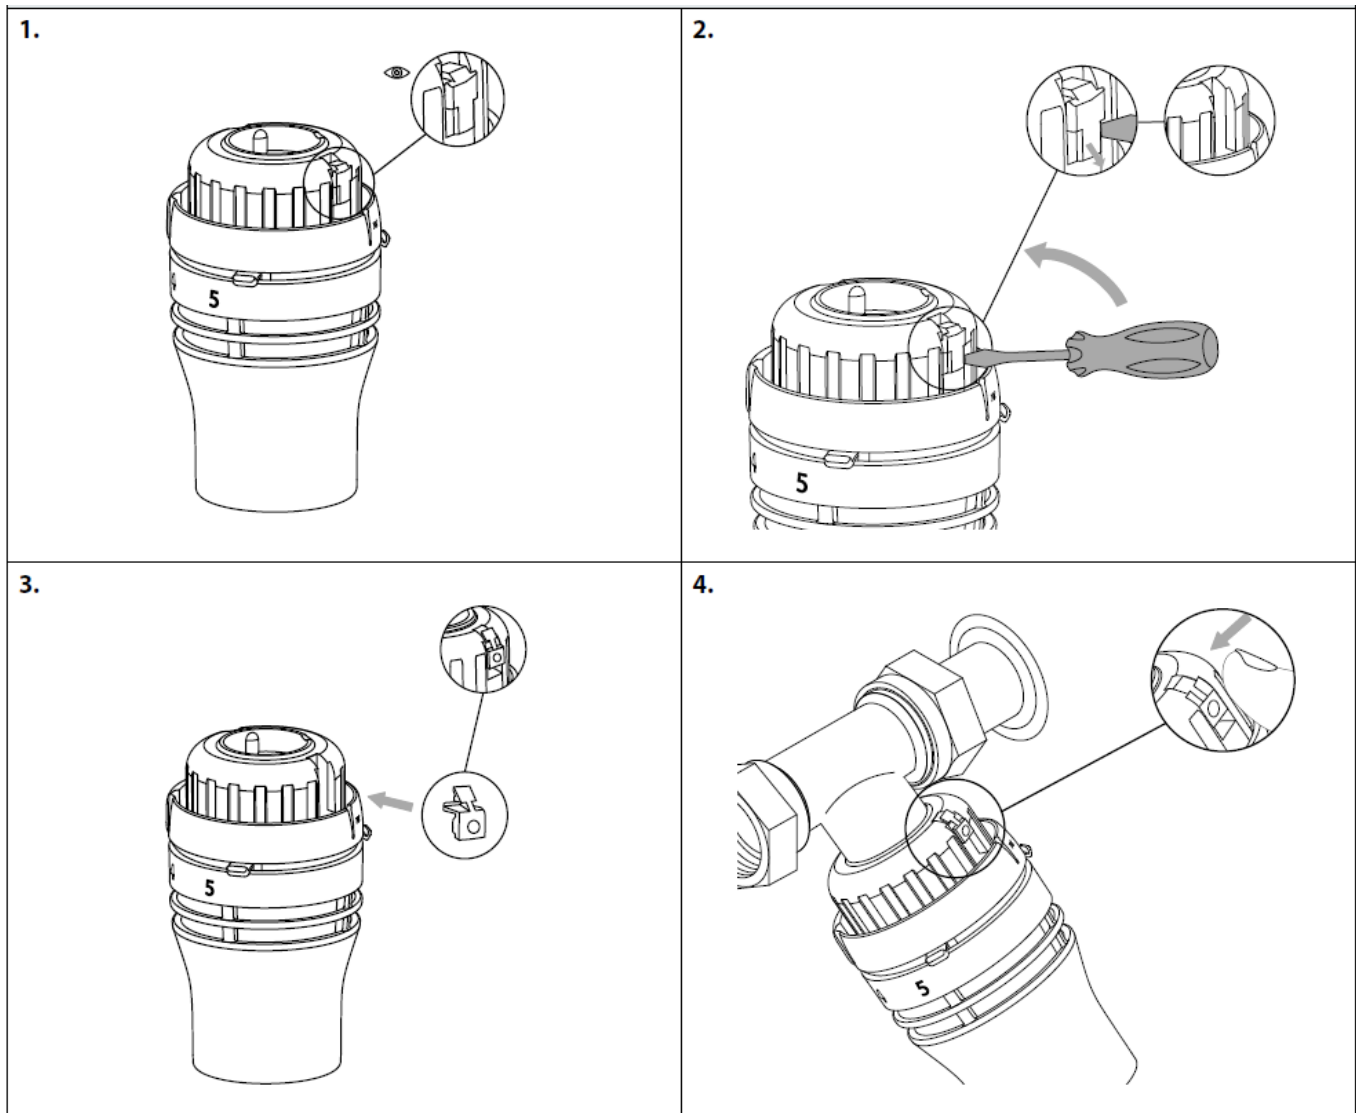


### Theft protection (Removal)

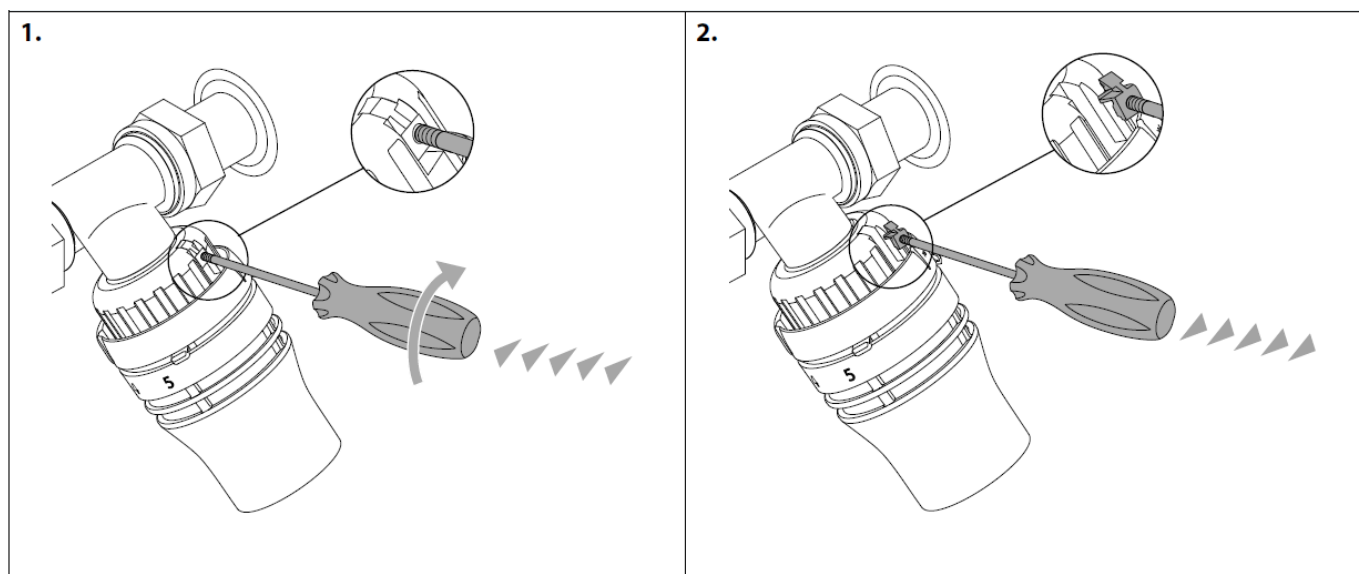

	Code no.
	<b>013G5245</b>
	<b>013G1236</b>

### Blind mark

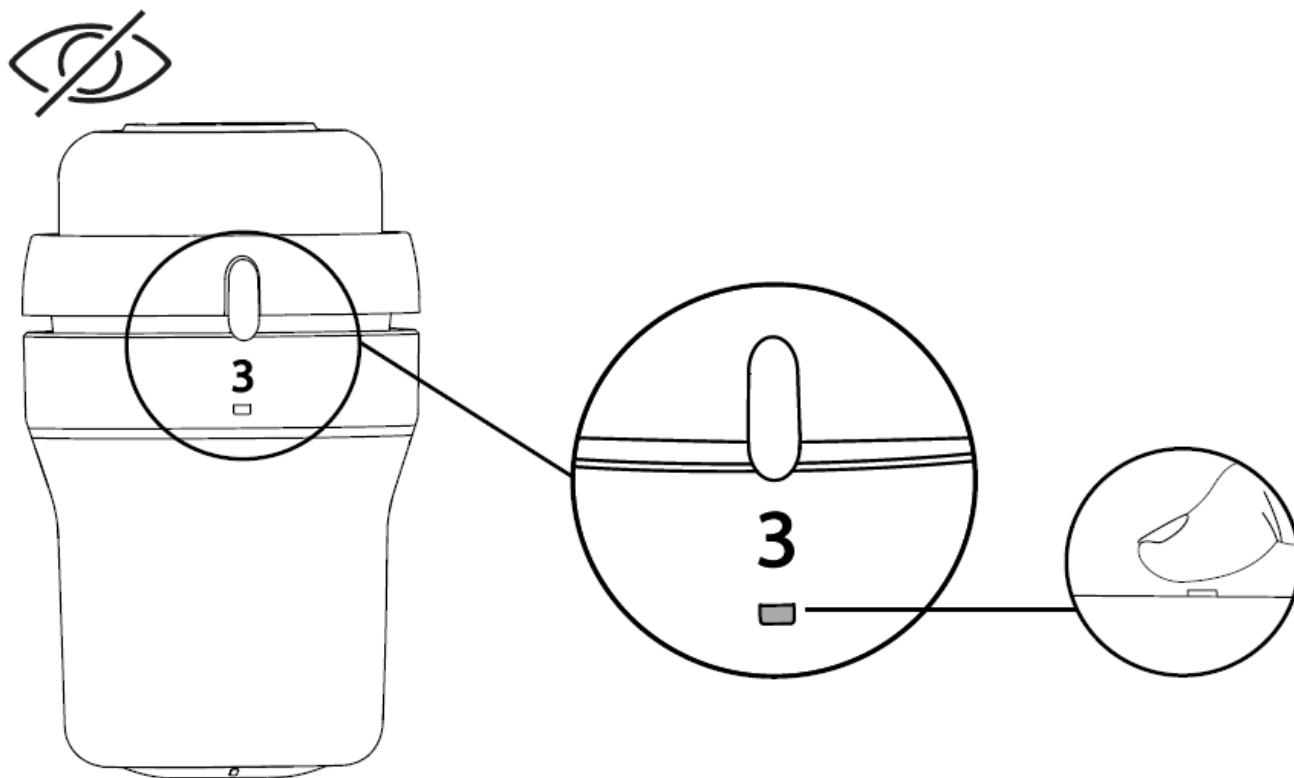

### Danfoss A/S

Climate Solutions • [danfoss.com](https://danfoss.com) • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



## Documents / Resources

 The diagram shows the Danfoss Redia RA click Thermostatic Sensors. It includes a top view of the sensor, a side view, and a cross-section view. The top view shows the sensor's body and the mounting bracket. The side view shows the sensor's profile. The cross-section view shows the sensor's internal components and the mounting bracket's internal structure. The diagram is labeled with 'Danfoss Redia RA click THERMOSTATIC SENSORS' and '015G3398, 015G3388, 015G3398 Redia RA click Thermostatic Sensors, Redia RA click, Thermostatic Sensors, Redia RA click Thermostatic Sensors, Sensors'.	<p><a href="#">Danfoss 015G3398 Redia RA click Thermostatic Sensors</a> [pdf] Installation Guide 015G3398, 015G3388, 015G3398 Redia RA click Thermostatic Sensors, Redia RA click, Thermostatic Sensors, Redia RA click Thermostatic Sensors, Sensors</p>
---	---

**Manuals+**