



Danfoss 015G4050 Thermostatic Sensors Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 015G4050 Thermostatic Sensors Installation Guide 



ENGINEERING TOMORROW

Installation Guide

Danfoss Aveo® RA/VL, RA/V
thermostatic sensors series




015G4050
015G4060


Contents

- [1 Installation](#)
- [2 Temperature Limitation](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)


Installation


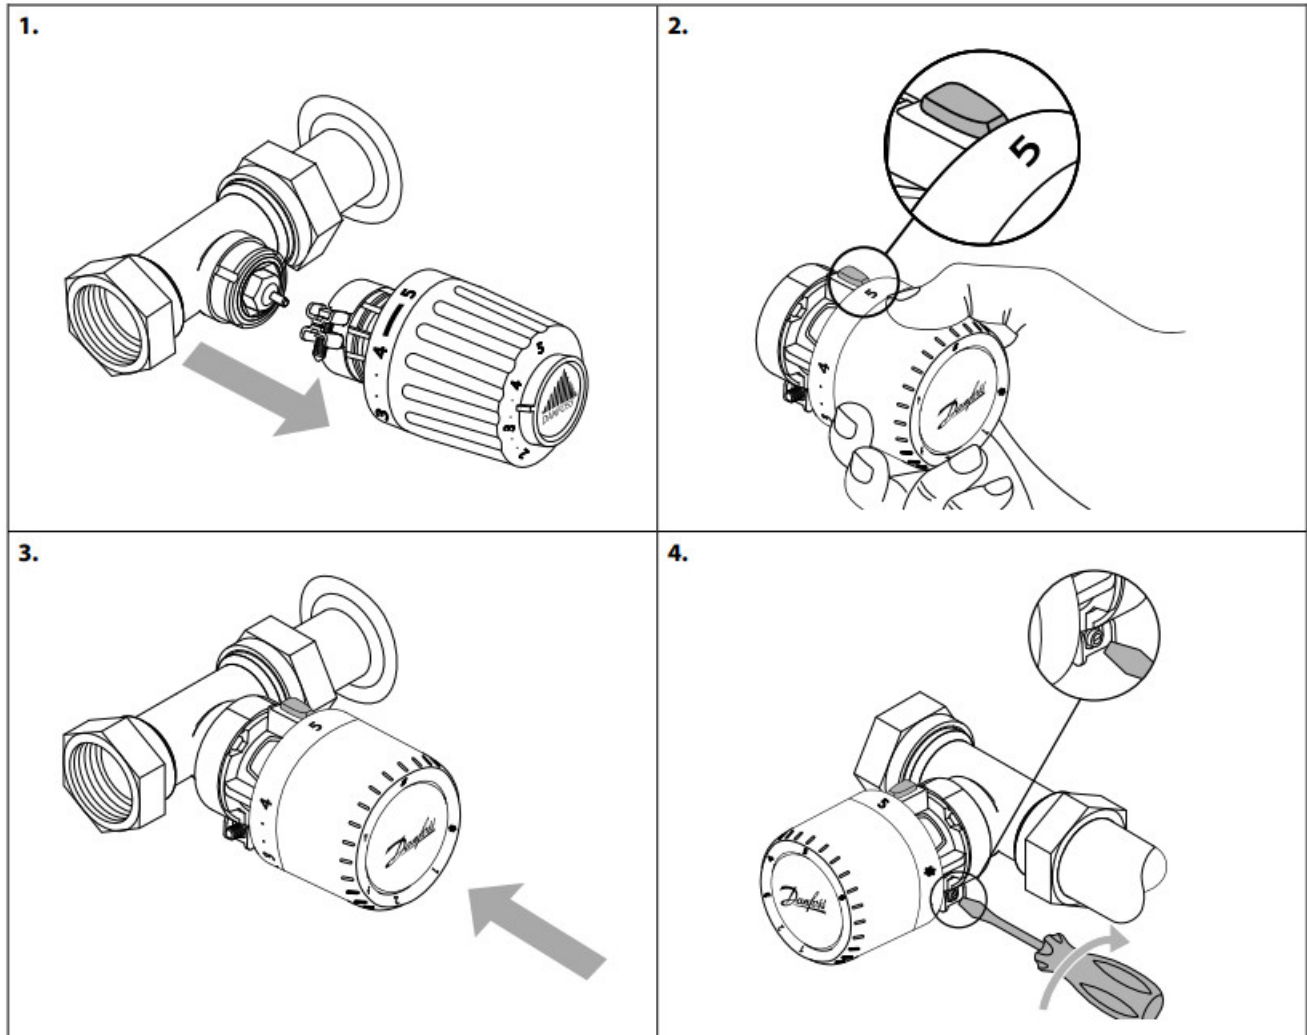


Temperature Limitation

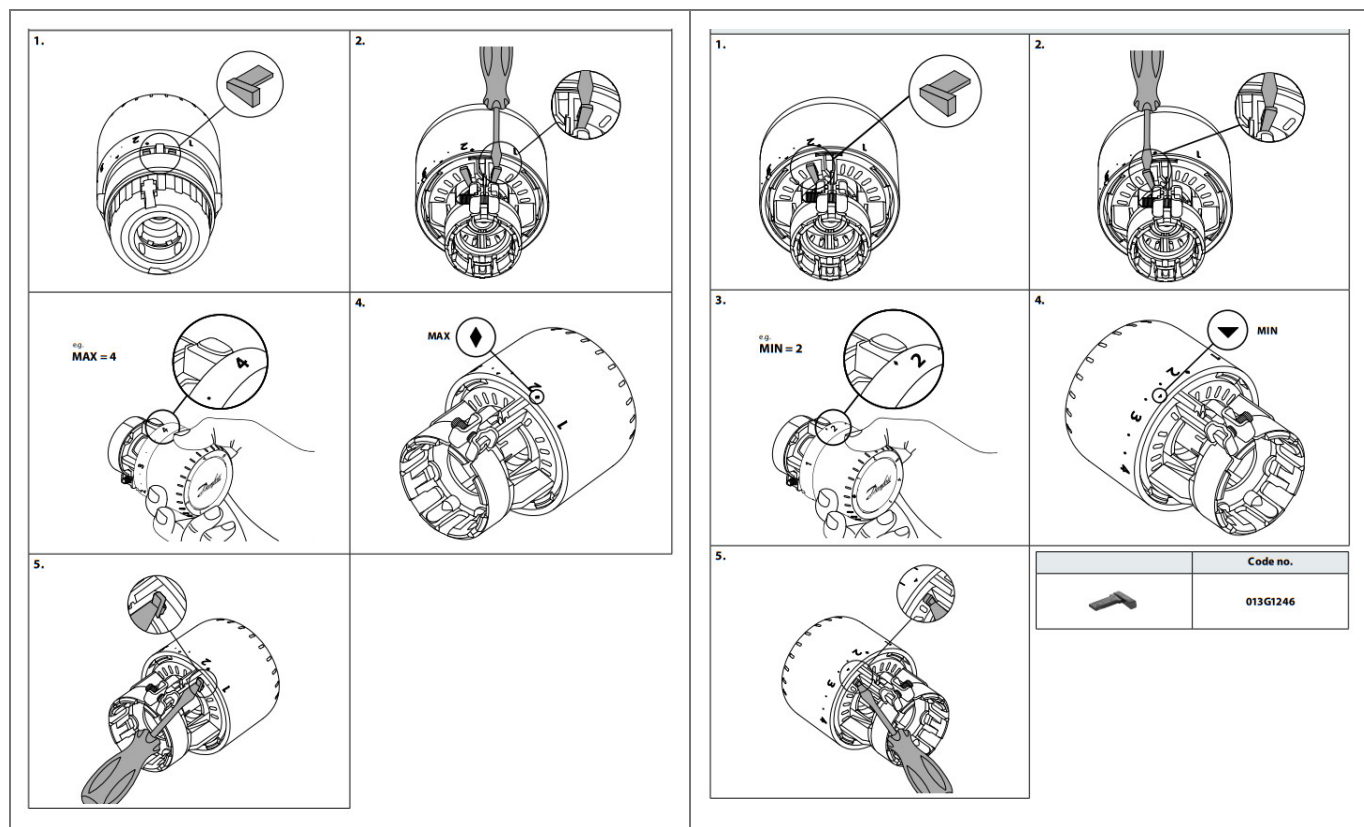


Blind mark

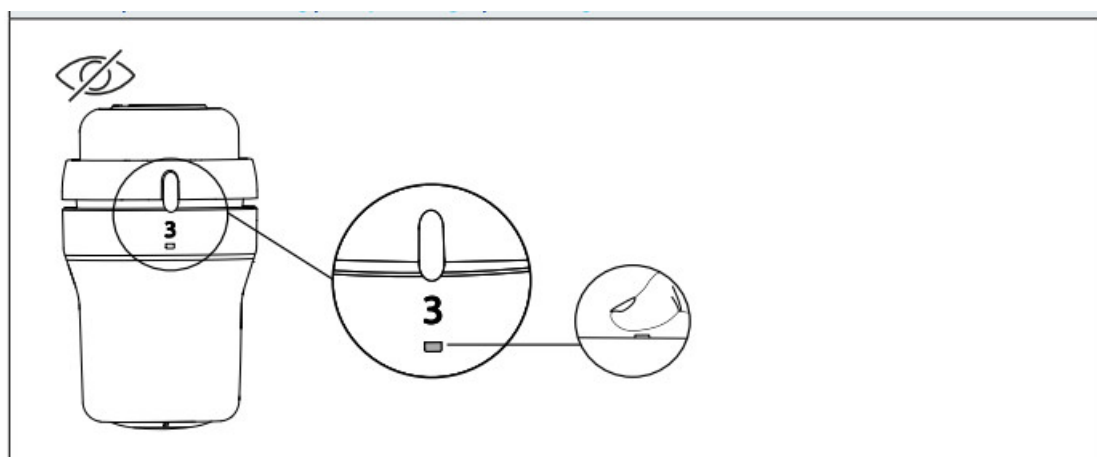

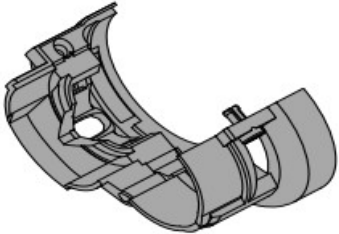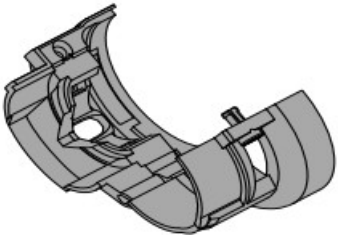	Code no.
	015G4950 RA/VL
	015G4951 RA/V

Installation

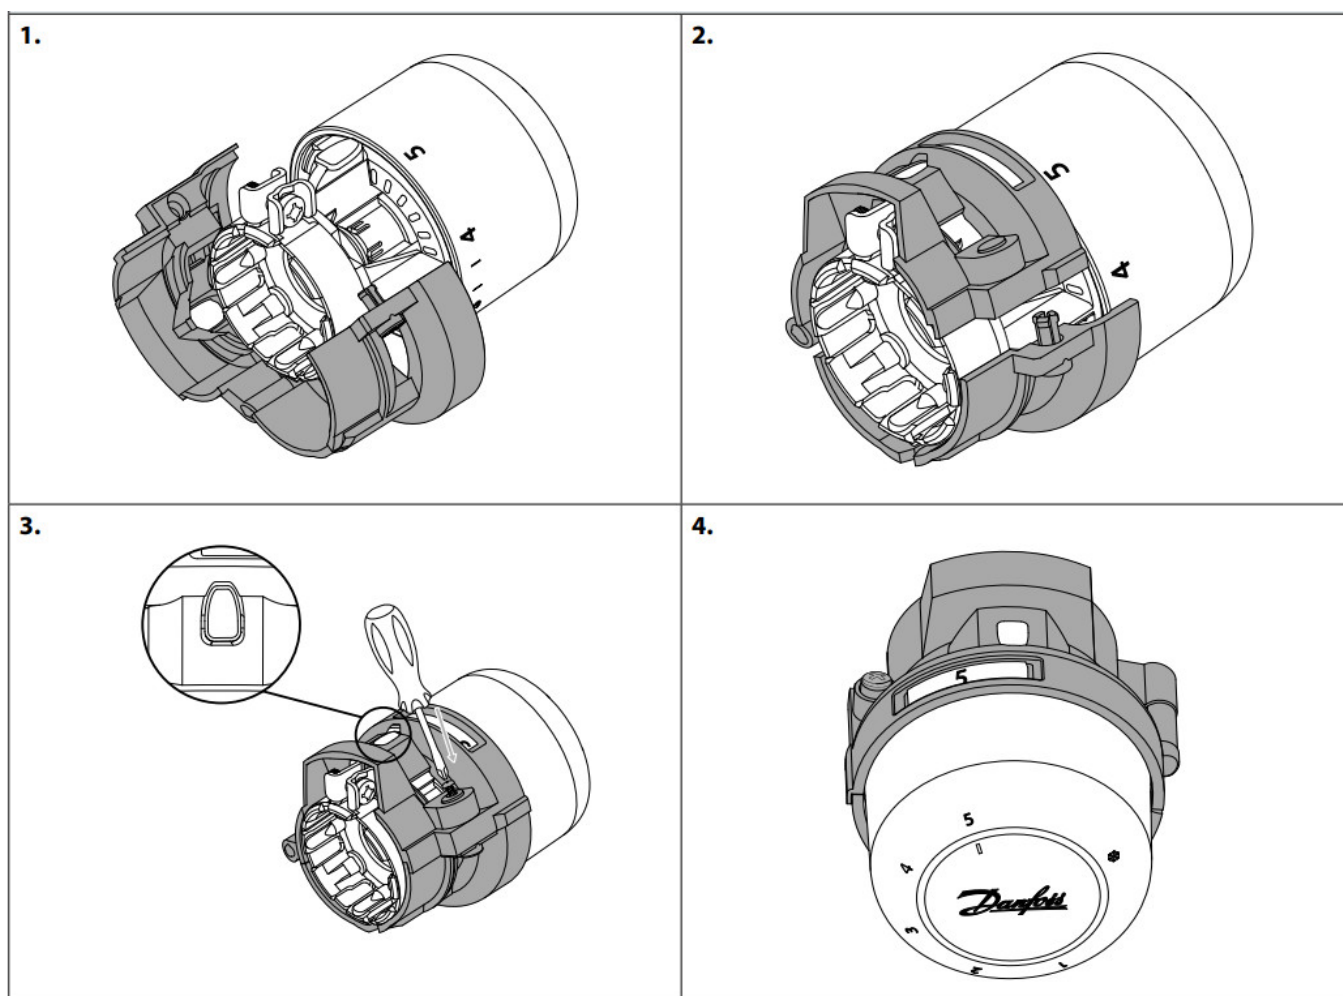

Danfoss A/S

Climate Solutions danfoss.com + +45 7488 2222


Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material.

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



© Danfoss Climate Solutions
2023.03 AN447477195492en-000101

Documents / Resources

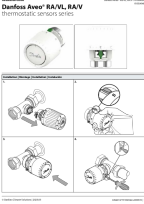	<p>Danfoss 015G4050 Thermostatic Sensors [pdf] Installation Guide 015G4050, 015G4060, 013G1246, 015G4950 RA-VL, 015G4951 RA-V, 015G4050 Thermostatic Sensors, Thermostatic Sensors, Sensors</p>
--	---

References

- [User Manual](#)