



Danfoss 015G4292 Aveo RA Click Remote Sensor Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 015G4292 Aveo RA Click Remote Sensor Installation Guide 

Contents


- [1 Danfoss 015G4292 Aveo RA Click Remote Sensor](#)
- [2 Installation](#)
- [3 BIV Installation](#)
- [4 Uninstall](#)
- [5 Remote sensor](#)
- [6 Temperature Limitation](#)
- [7 Documents / Resources](#)




Danfoss 015G4292 Aveo RA Click Remote Sensor





Installation

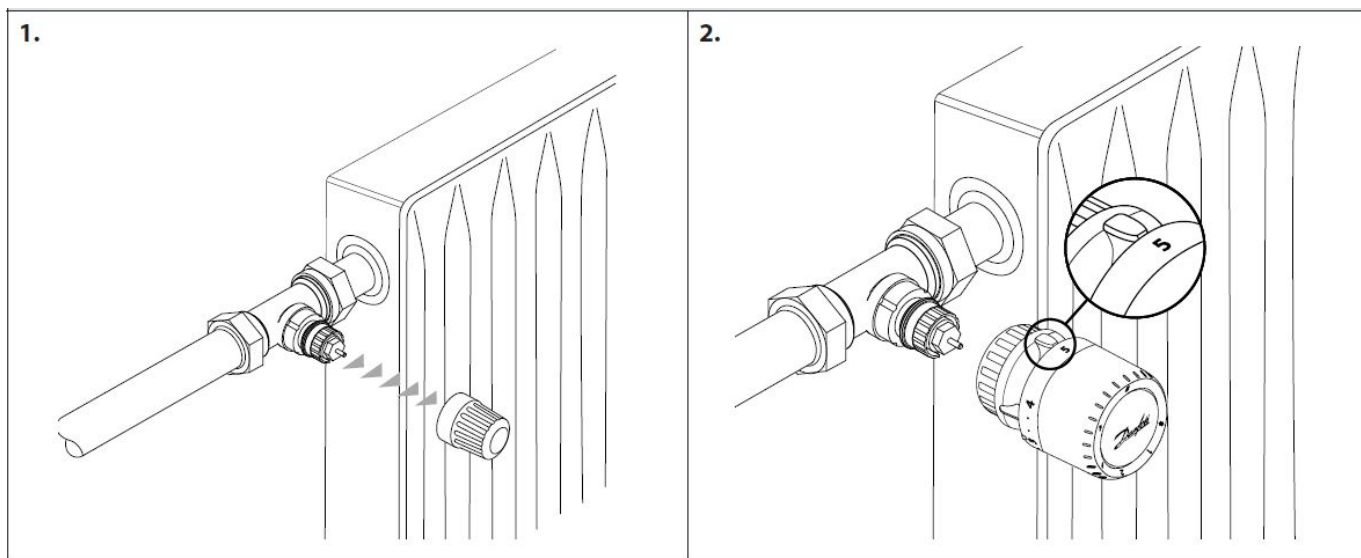

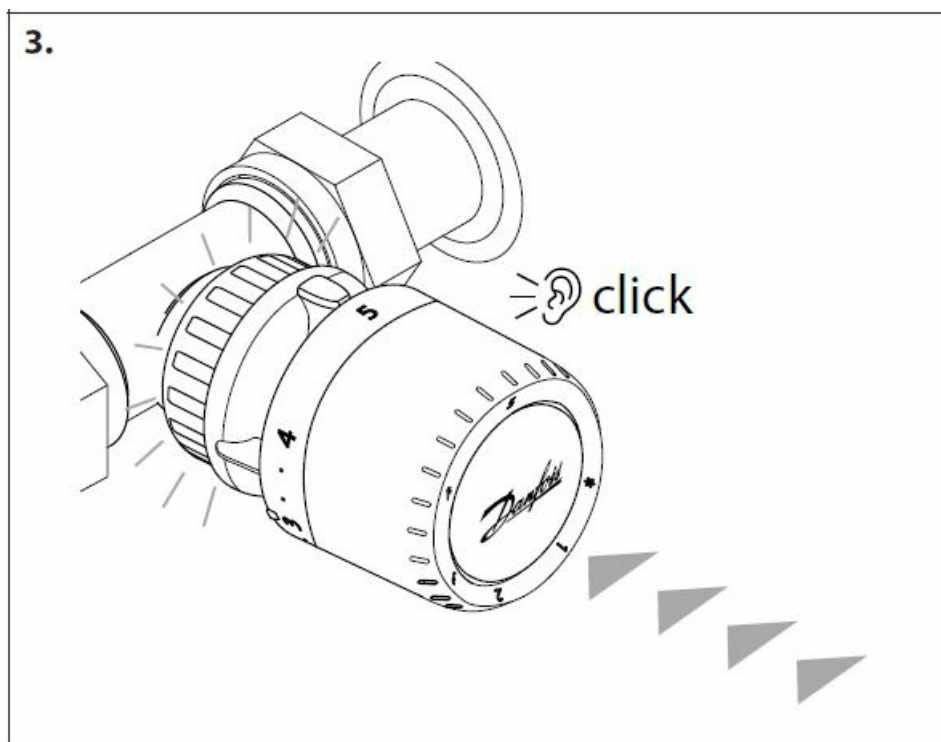


BIV Installation

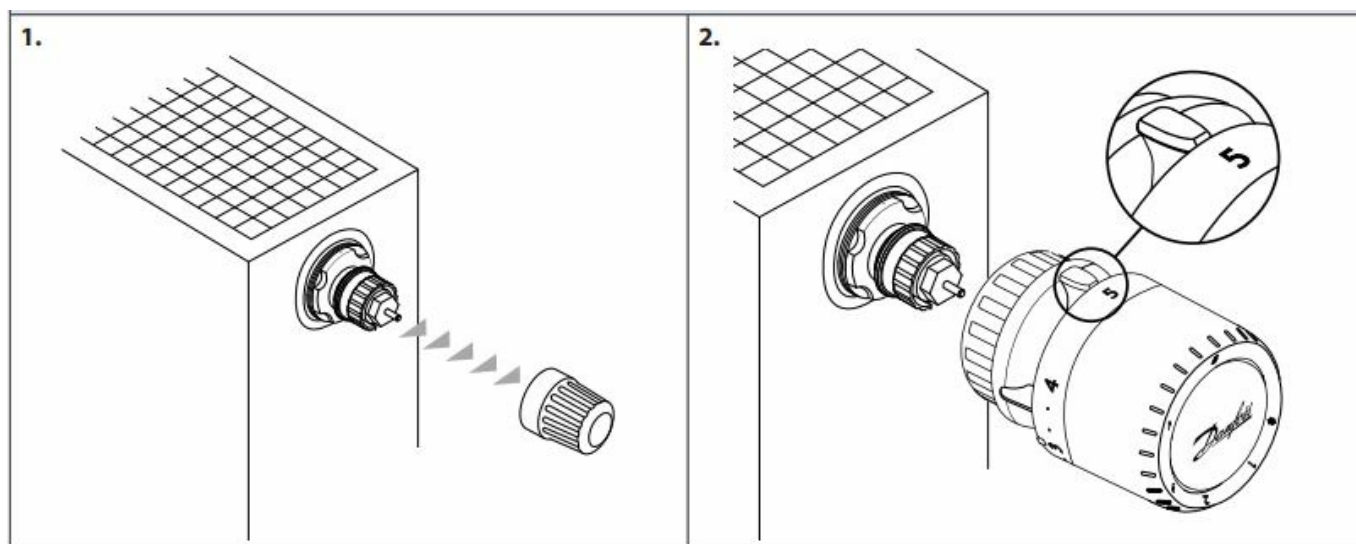


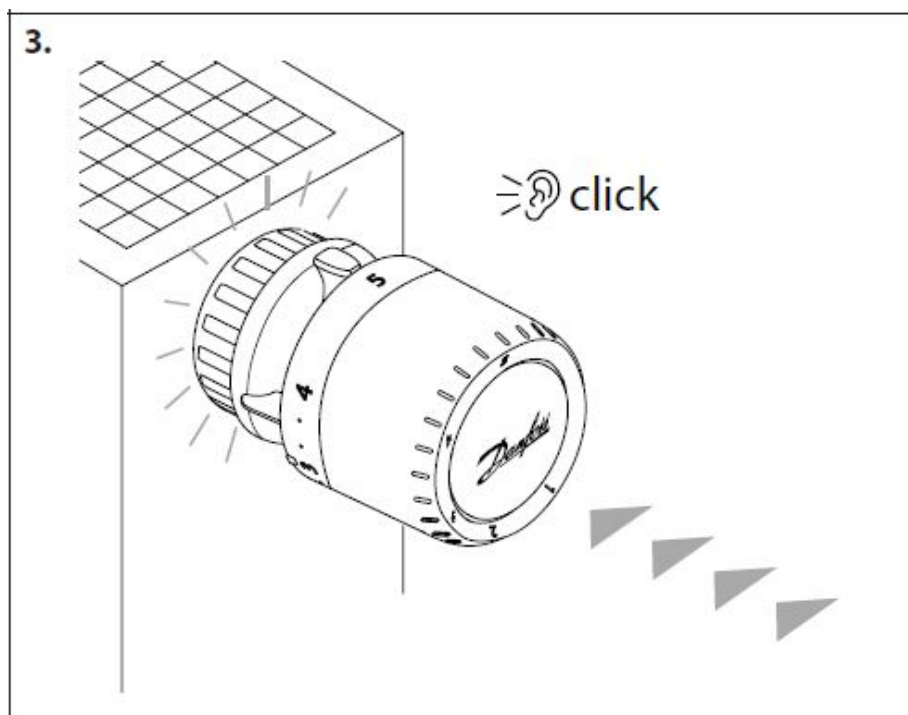


Uninstall

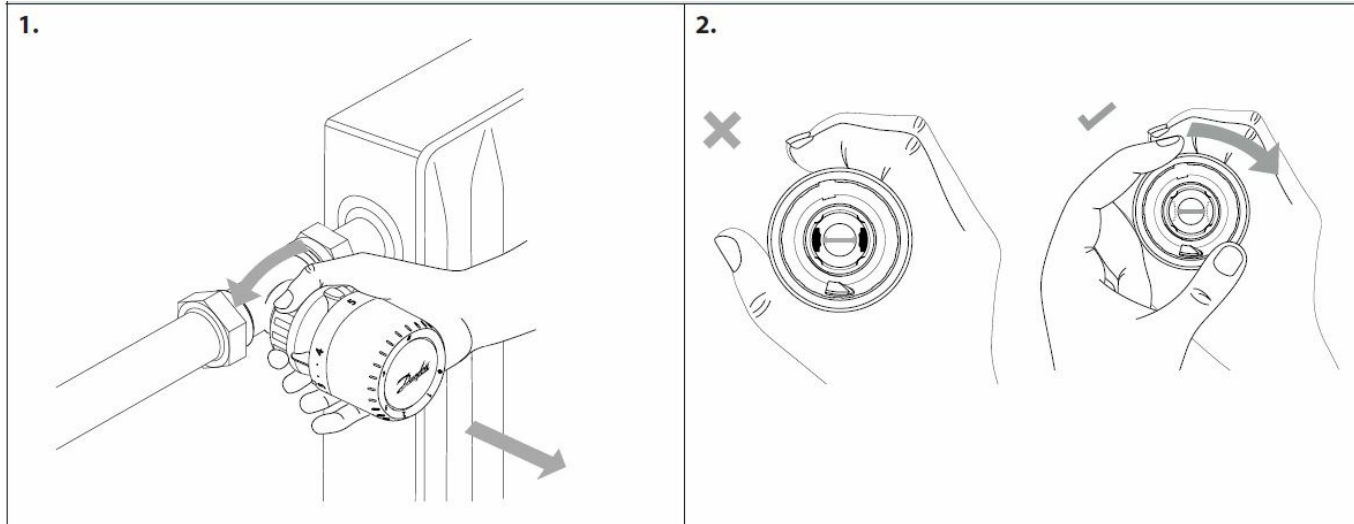

Remote sensor

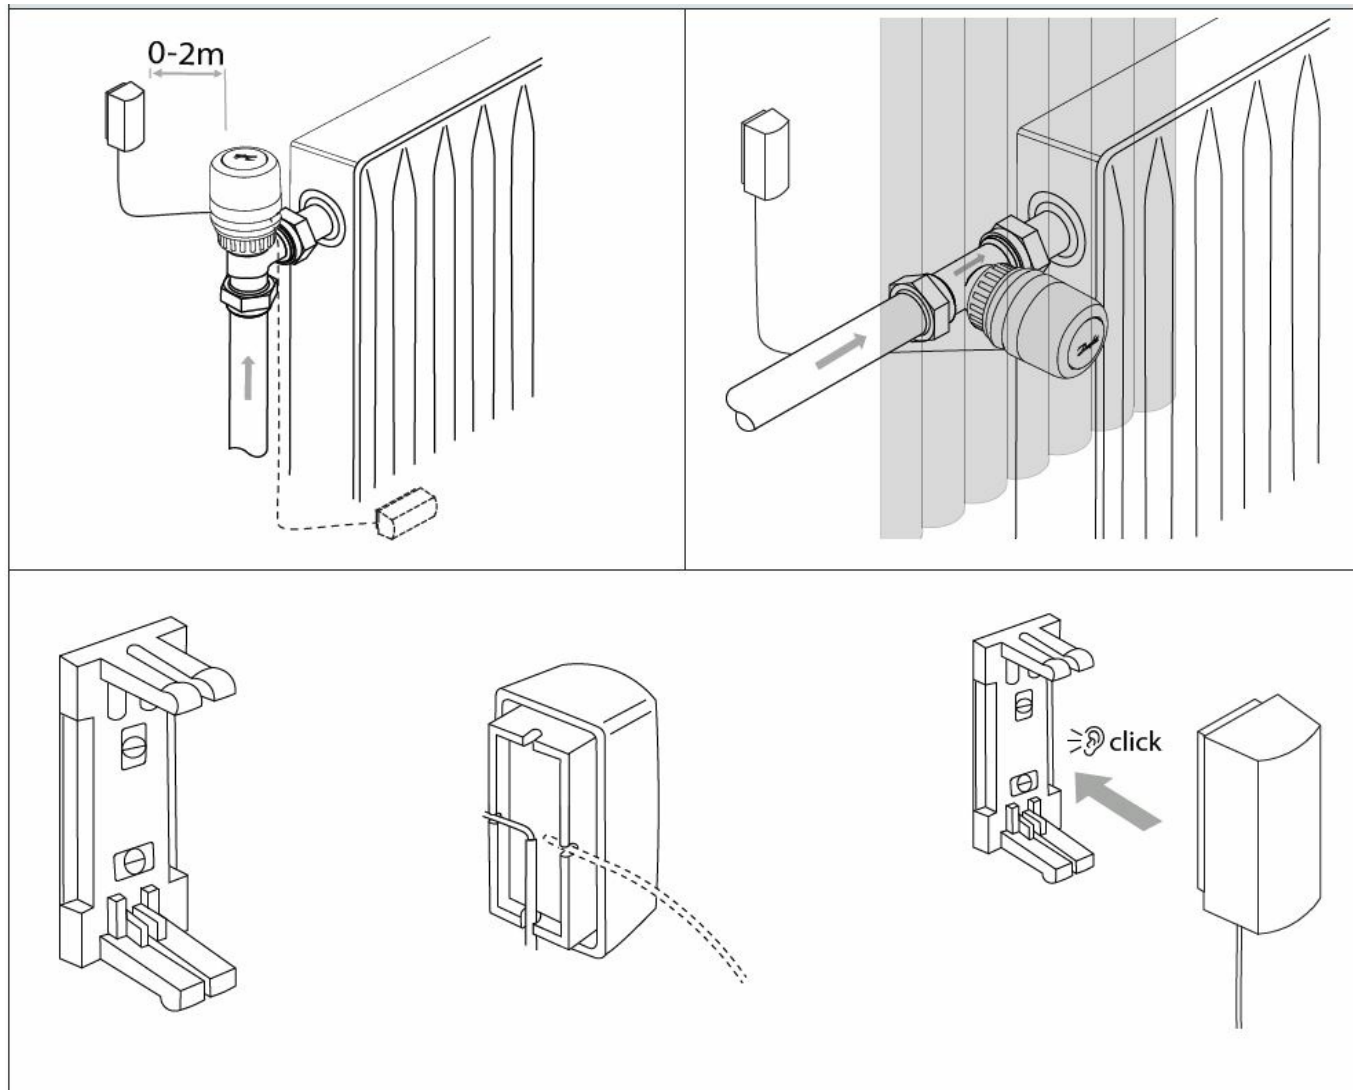


Temperature Limitation

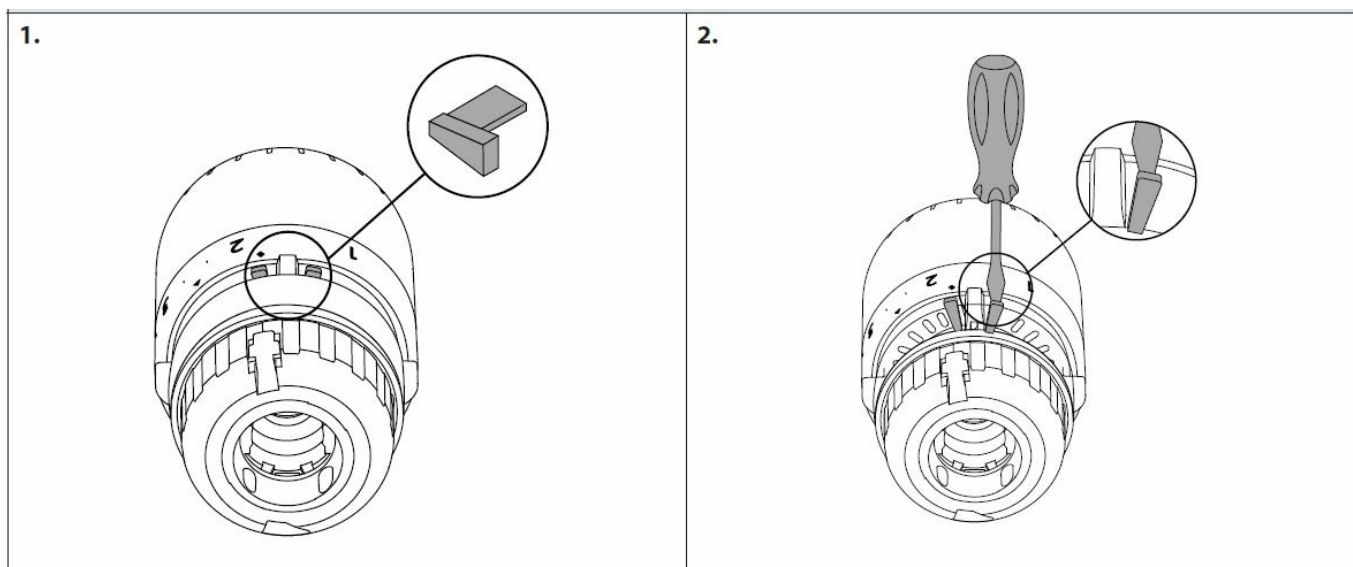


3.

e.g.
MAX = 4

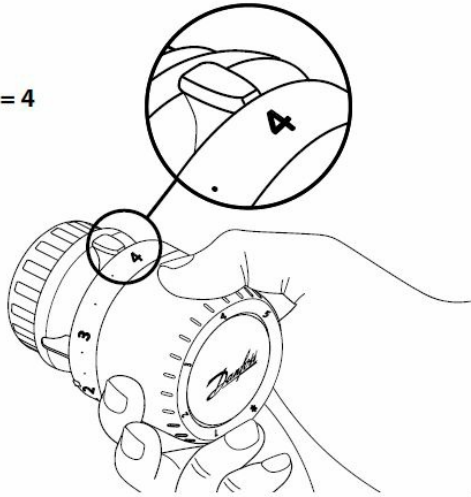


4.


MAX

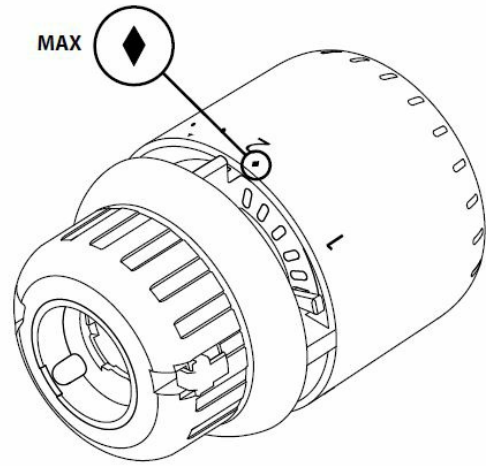


5.

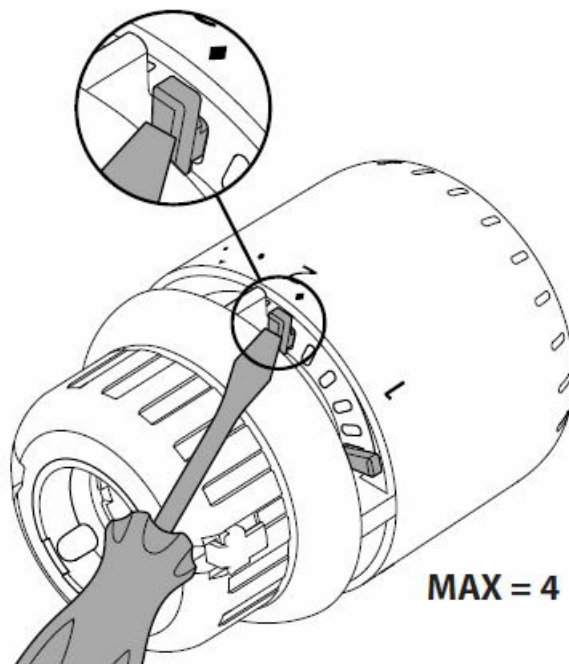

1.

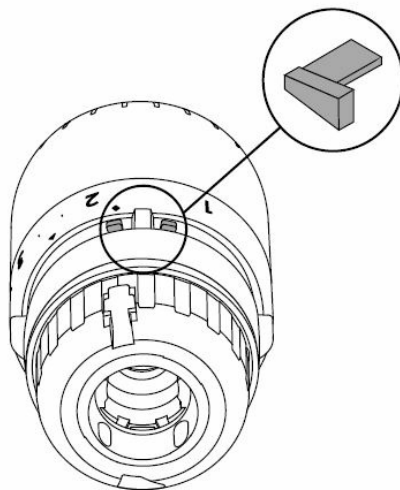


2.

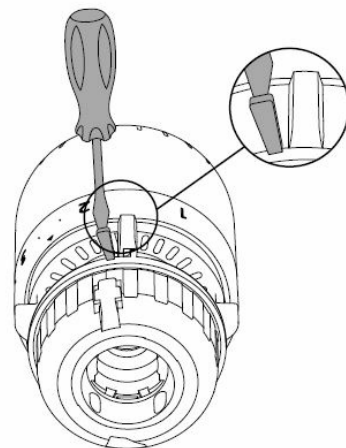


3.


e.g.
MIN = 2

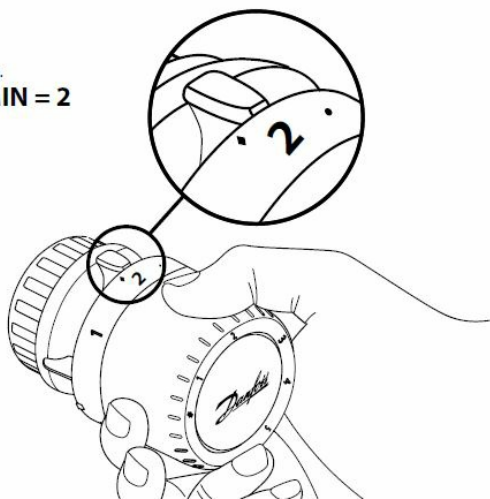

4.

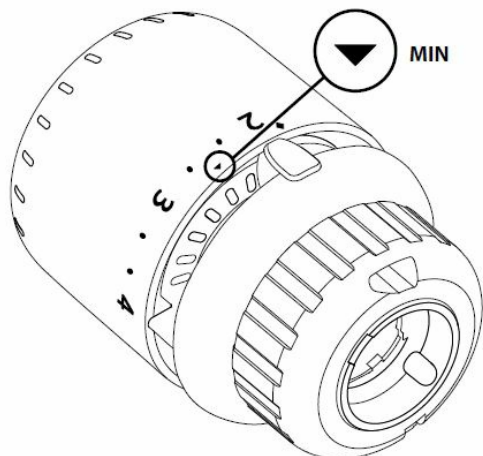


5.

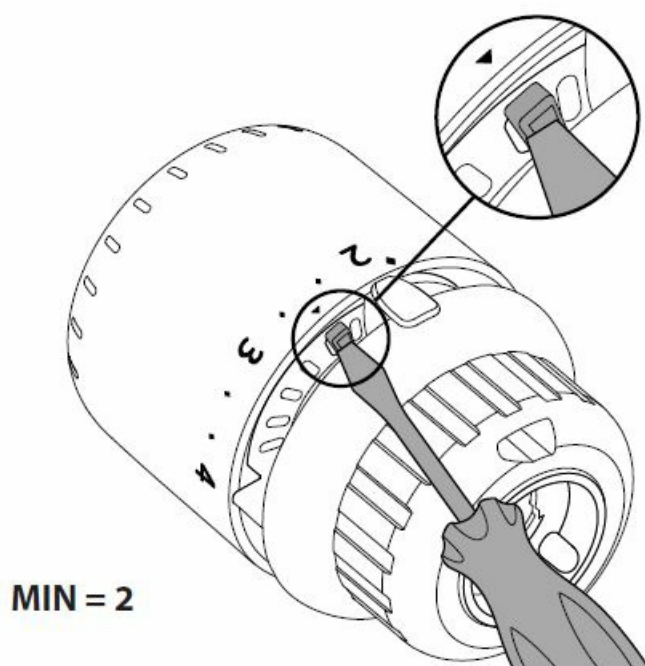

	Code no.
	013G1246
	013G1236


Blind mark

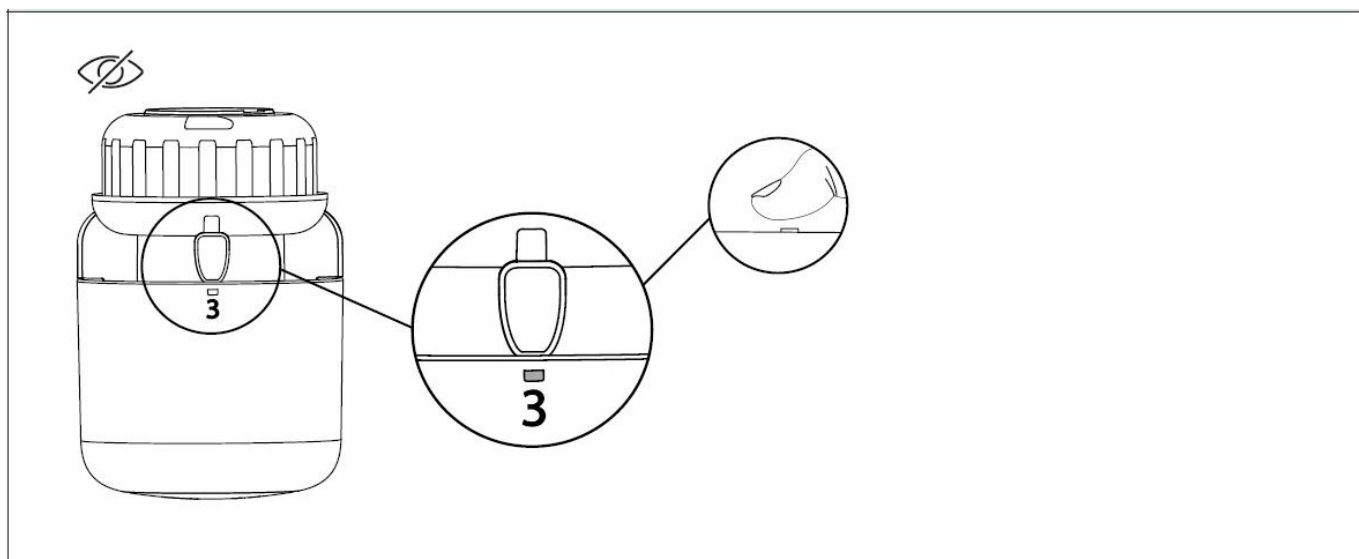

Danfoss A/S

- Climate Solutions
 - danfoss.com
 - +45 7488 2222
 - All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
-

Documents / Resources

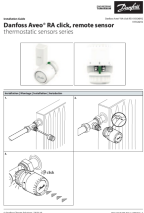	Danfoss 015G4292 Aveo RA Click Remote Sensor [pdf] Installation Guide 015G4292, 013G1246, 013G1236, 015G4292 Aveo RA Click Remote Sensor, Aveo RA Click Remote Sensor, RA Click Remote Sensor, Click Remote Sensor, Remote Sensor, Sensor
---	---