



Danfoss 015G4692 Aero RA Click Remote Thermostatic Sensor Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 015G4692 Aero RA Click Remote Thermostatic Sensor Installation Guide 



015G4692 Aero RA Click Remote Thermostatic Sensor Installation Guide




Installation Guide
Danfoss Aero® RA click /015G4682
015G4692
Danfoss Aero® RA click, remote sensor
thermostatic sensors series

Contents


- 1 Installation
- 2 Uninstall
- 3 Temperature Limitation
- 4 Blind mark
- 5 Documents / Resources

Installation


1.

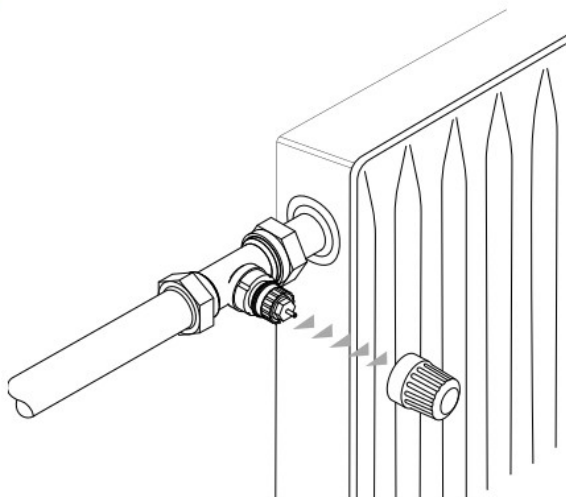


2.

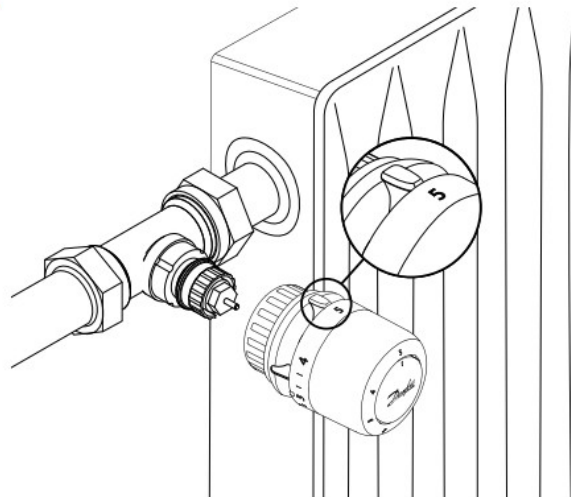


3.

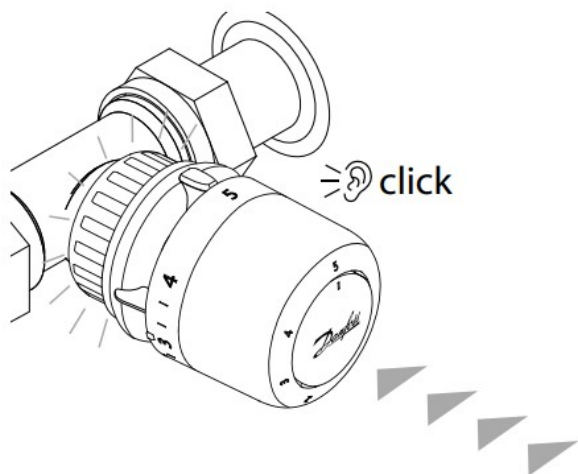


BIV Installation

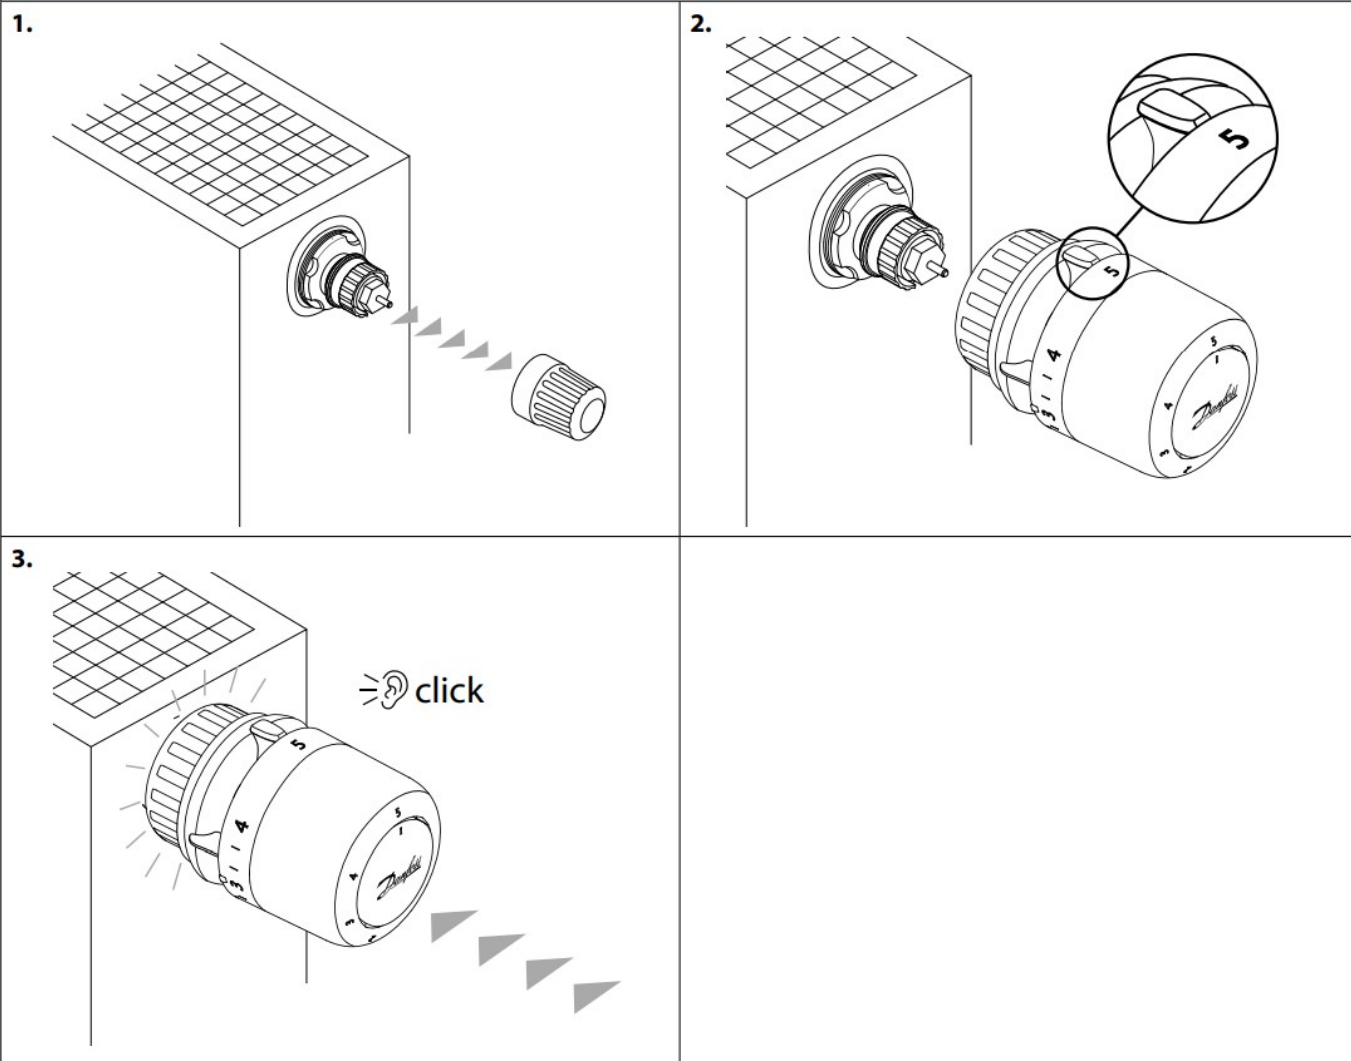

Remote sensor

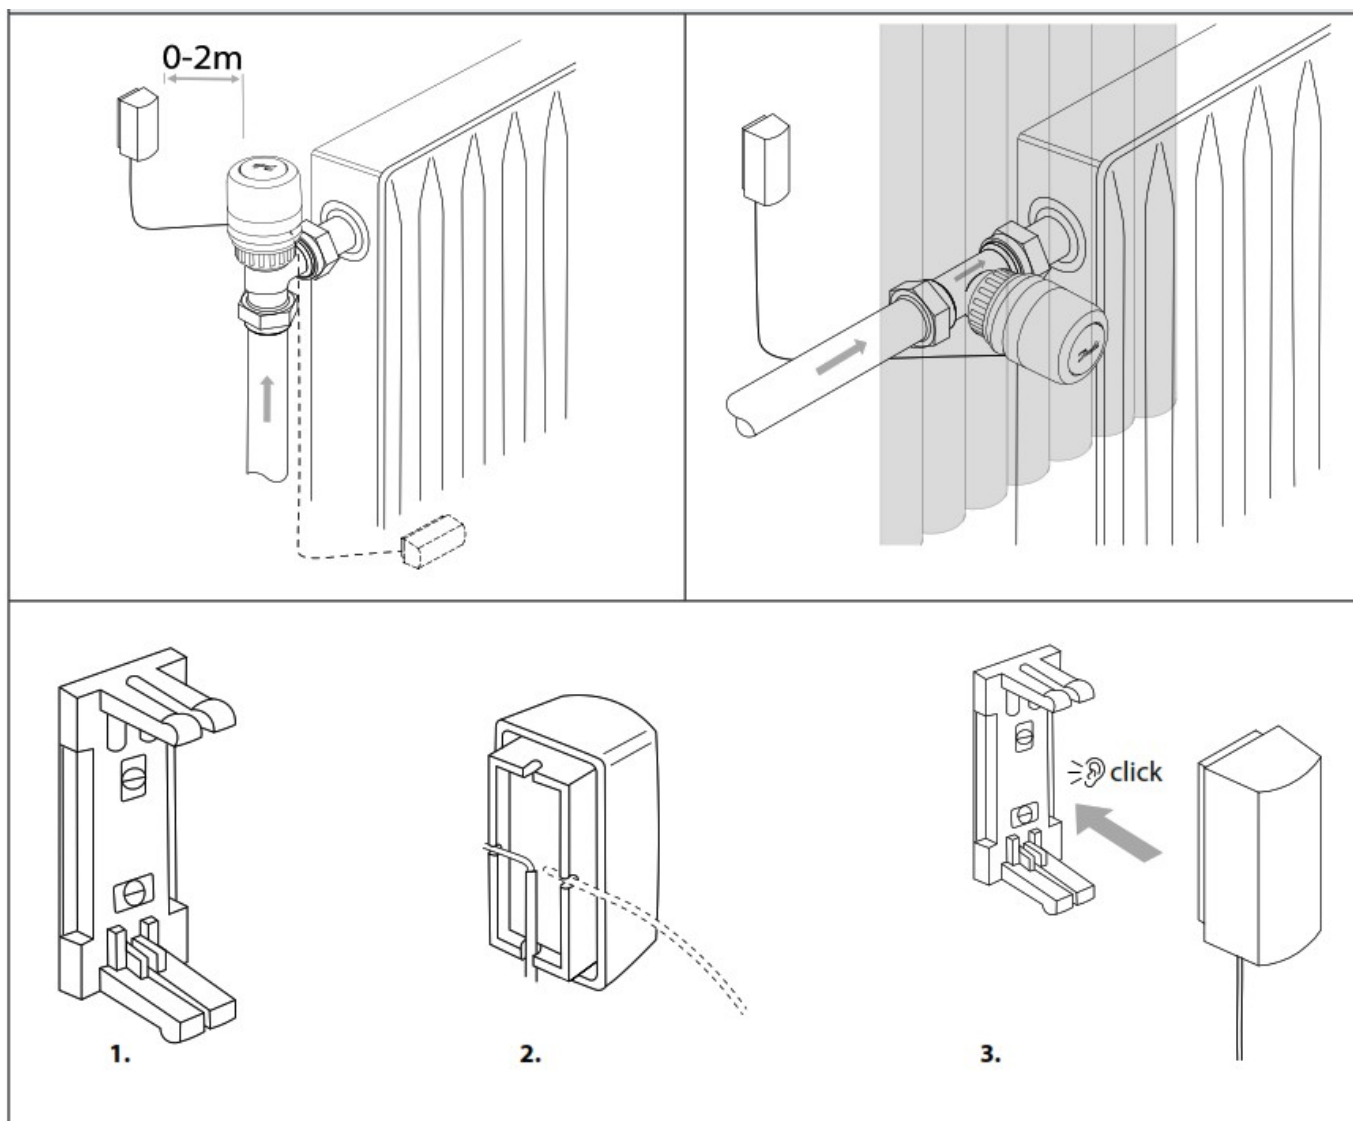


Uninstall

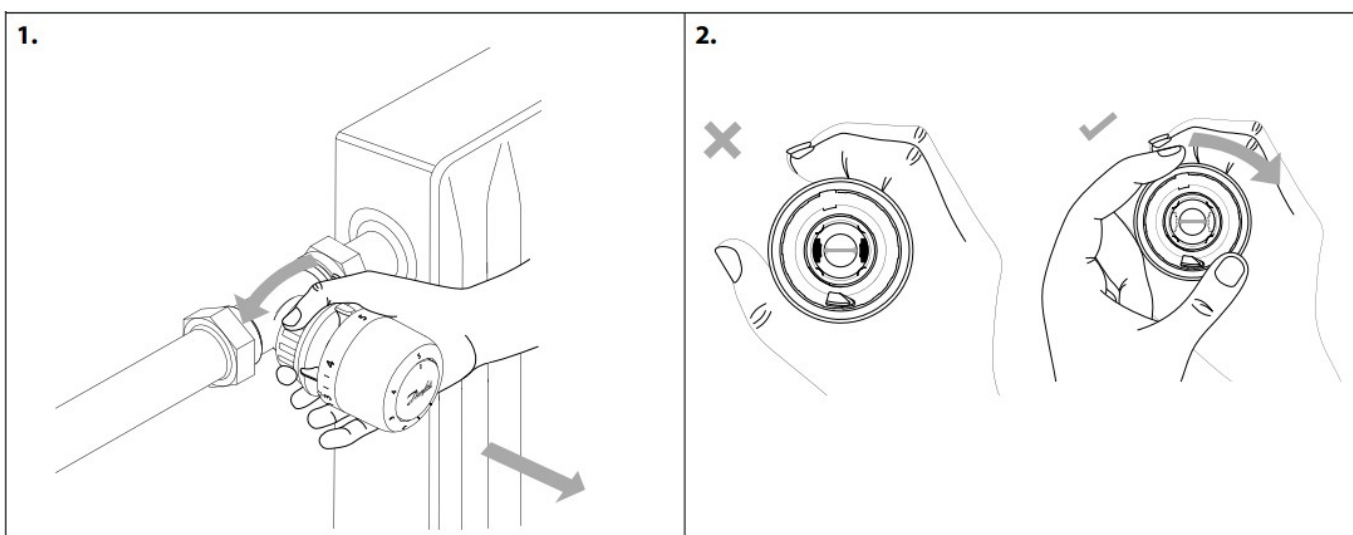


Temperature Limitation

1.


e.g.
MAX = 3

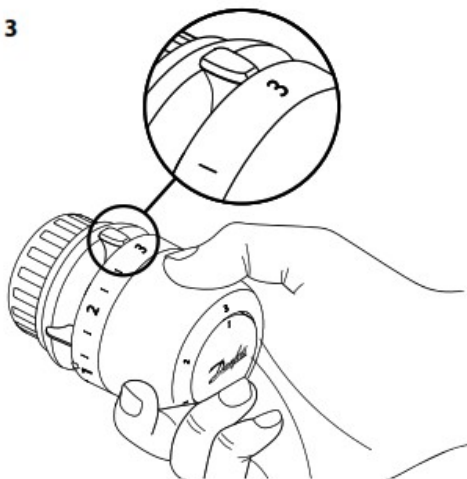


2.

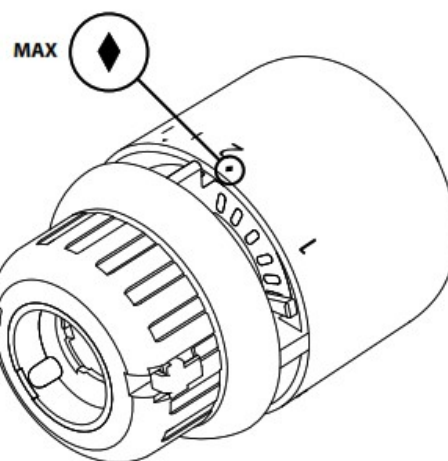


3.

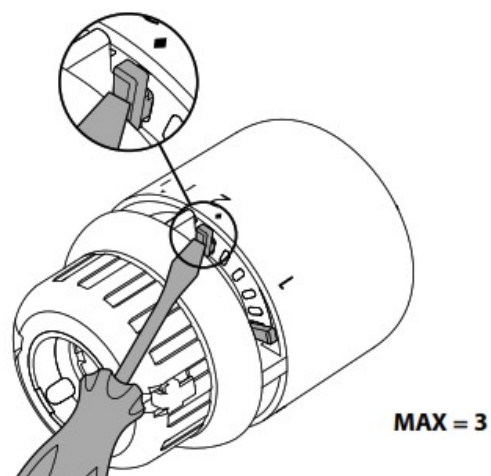

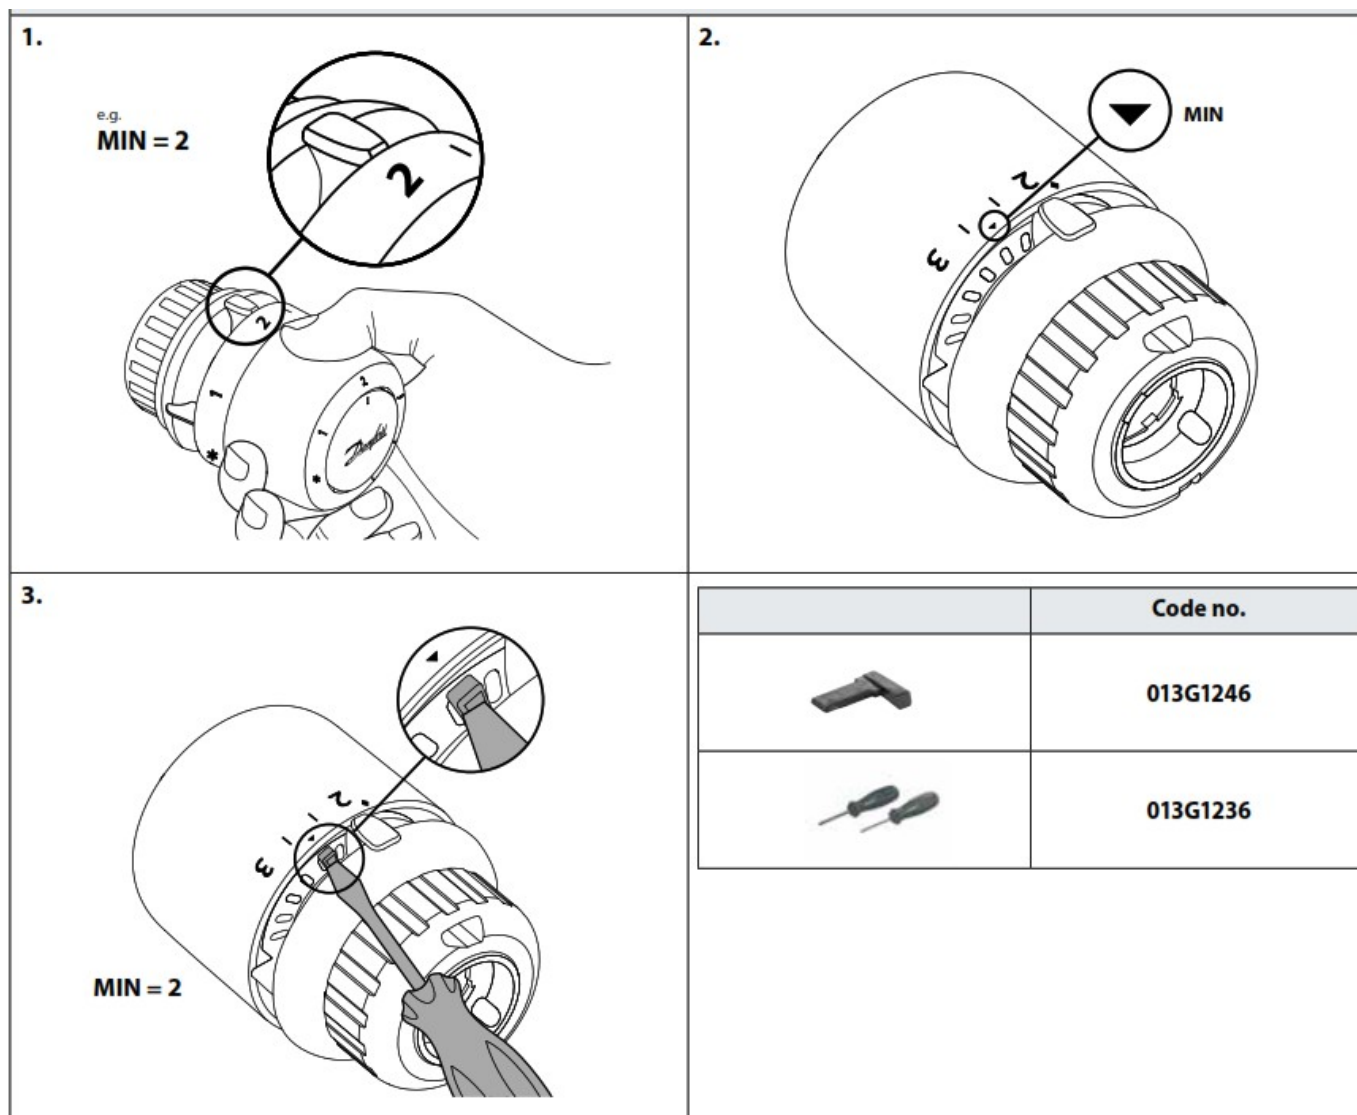

Blind mark

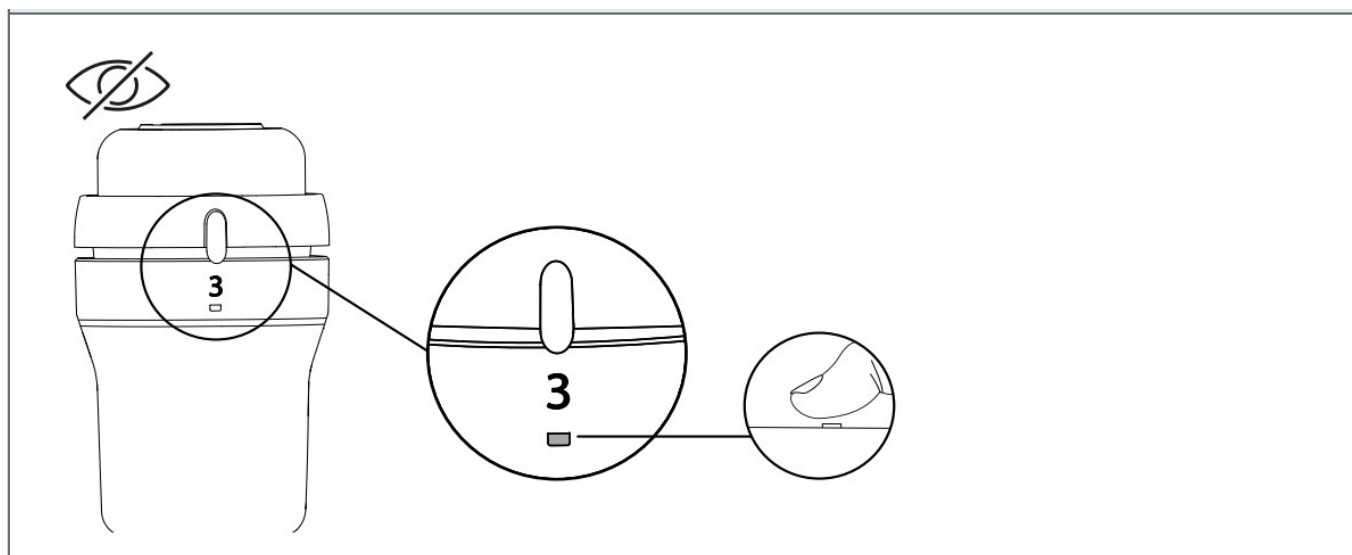

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

ENGINEERING
TOMORROW



Danfoss A/S Climate Solutions


– danfoss.com

+45 7488 2222

© Danfoss Climate Solutions
2023.03

AN446460676612en-000101

Documents / Resources

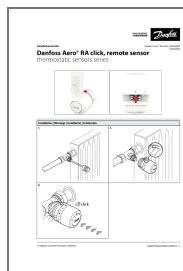

[Danfoss 015G4692 Aero RA Click Remote Thermostatic Sensor](#) [pdf] Installation Guide
015G4692 Aero RA Click Remote Thermostatic Sensor, 015G4692, Aero RA Click Remote The
rmostatic Sensor, Remote Thermostatic Sensor, Thermostatic Sensor, Sensor

[Manuals+](#).