




Danfoss 015G5326 Redia RA click Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 015G5326 Redia RA click Installation Guide 


Danfoss 015G5326 Redia RA click





Contents

- [1 VALVE Installation](#)
- [2 Presetting table](#)
- [3 SENSOR Installation](#)
- [4 Danfoss A/S](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

VALVE Installation

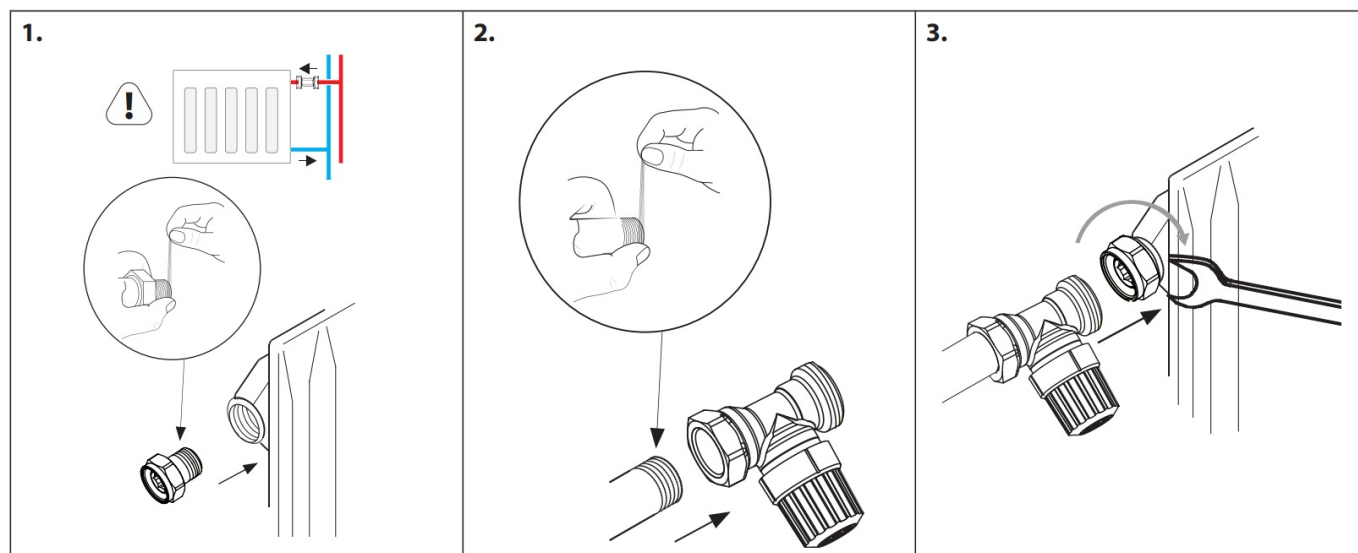

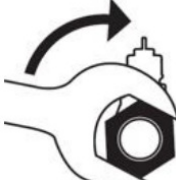
		Min. [Nm]	Max. [Nm]
	DN10 3/8 "	40	60
	DN15 1/2"	60	90
	DN20 3/4"	80	120

Presetting table

Presetting table

Code Number: Danfoss Redia® 015G5325 015G5326	ΔT			
	10K	15K	20K	
	~Watt			
	100			1
	250			2
	400			3
	650			4
	900			5
	1150			6
	1350			7
	1900			N
	$\Delta p=10\text{kPa}$			

SENSOR Installation

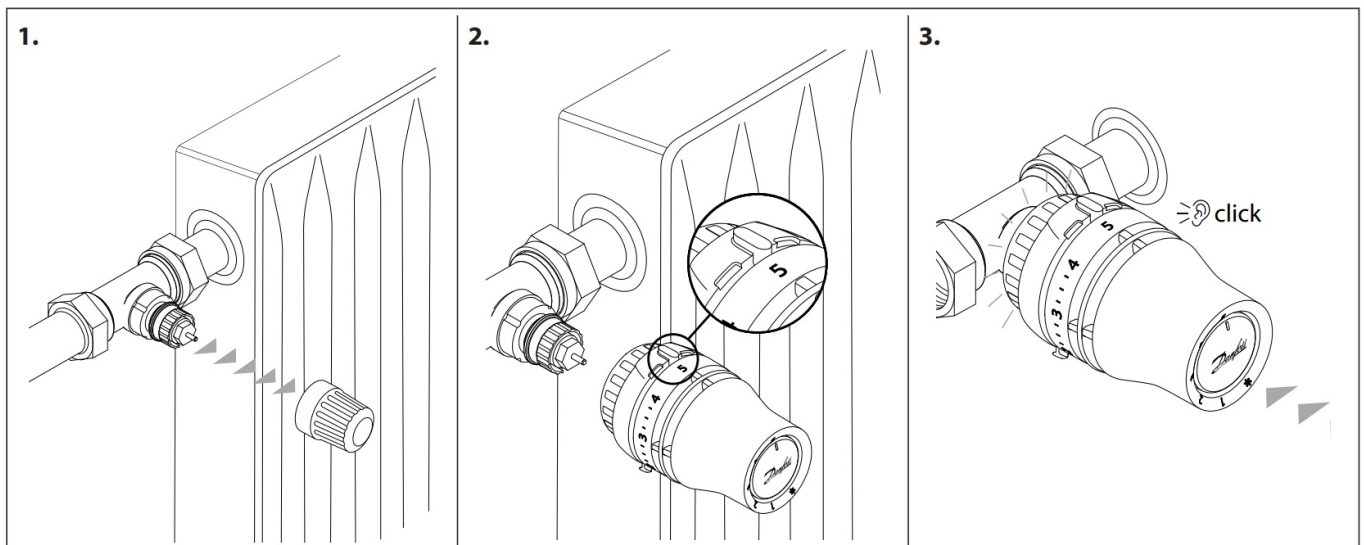

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and

other material.

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



Documents / Resources

	<p>Danfoss 015G5326 Redia RA click [pdf] Installation Guide 015G5326 Redia RA click, 015G5326, Redia RA click, RA click, click</p>
---	--

[Manuals+](#).