

# Danfoss 088R0400 Icon 2 Main Controller User Guide

 
[Home](#) » [Danfoss](#) » Danfoss 088R0400 Icon 2 Main Controller User Guide

## Contents [ [hide](#) ]

- [1 Danfoss 088R0400 Icon 2 Main Controller](#)
- [2 SPECIFICATION](#)
- [3 SIMPLIFIED EU DECLARATION OF CONFORMITY](#)
- [4 Need help? Download App](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)





**Danfoss 088R0400 Icon 2 Main Controller**

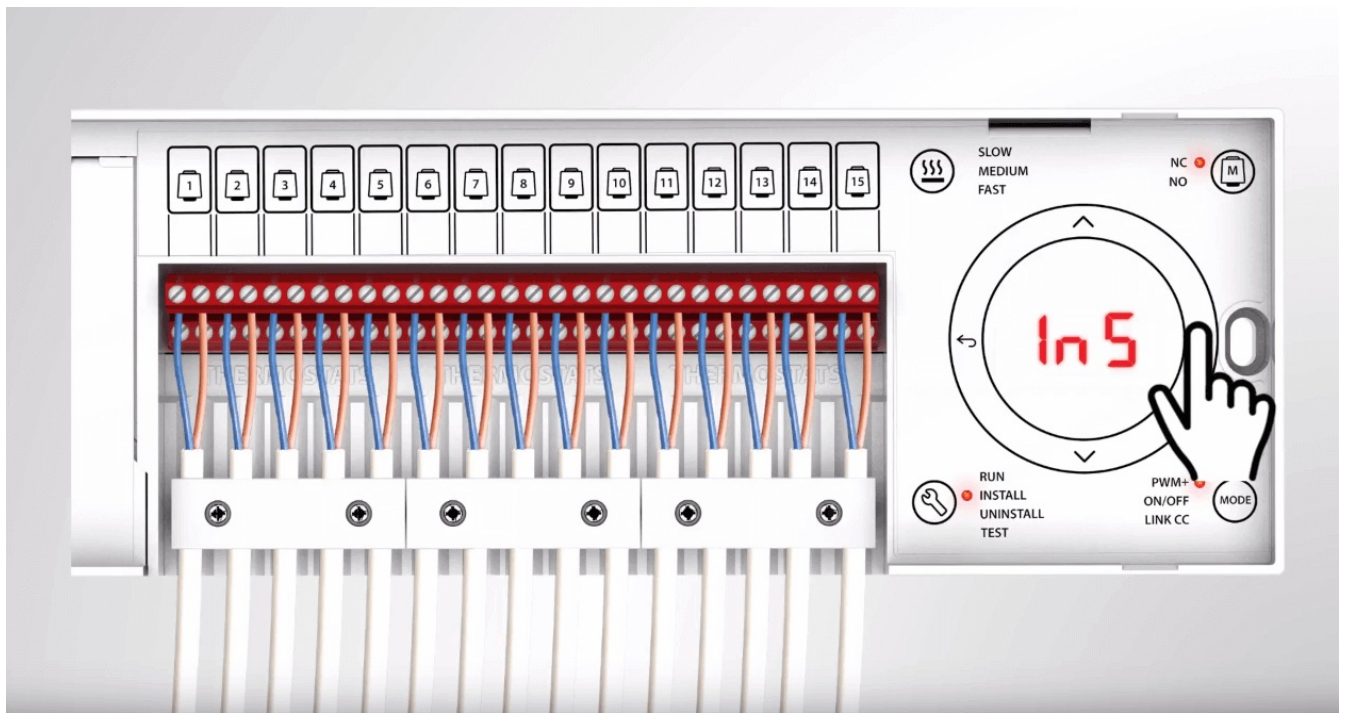

## SPECIFICATION

  - **Max. number of thermostats:** 15
- **Max. number of actuators:** 15
- **Internal fuse:** 2 A
- **Conforms with directives:** LVD, EMC, RoHS, WEEE, RED
- **Storage temp. range:** -20 °C to +60 °C
- **Output relay, boiler:** Voltage free, max. 2 A, max. Voltage 230 V~
- **Input 1&2, Setback / Cooling:** Voltage free
- **Rated impulse voltage:** 4 kV
- **Temperature for ball pressure test:** 75 °C
- **Control pollution degree:** pollution degree 2
- **Disposal instructions:** As electronic waste
- **Operating time:** permanent connection
- **Purpose of control:** Individual electronic room temperature control
- **Protection class:** Class II with earthing terminal
- **Control action type:** 1 b
- **SELV level:** 24V circuits are Safety Extra Low Voltage Software Class: A

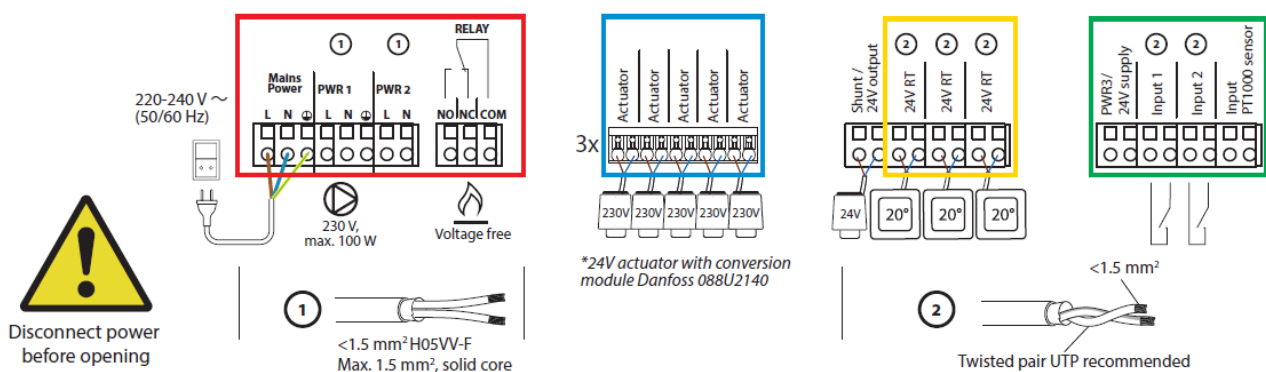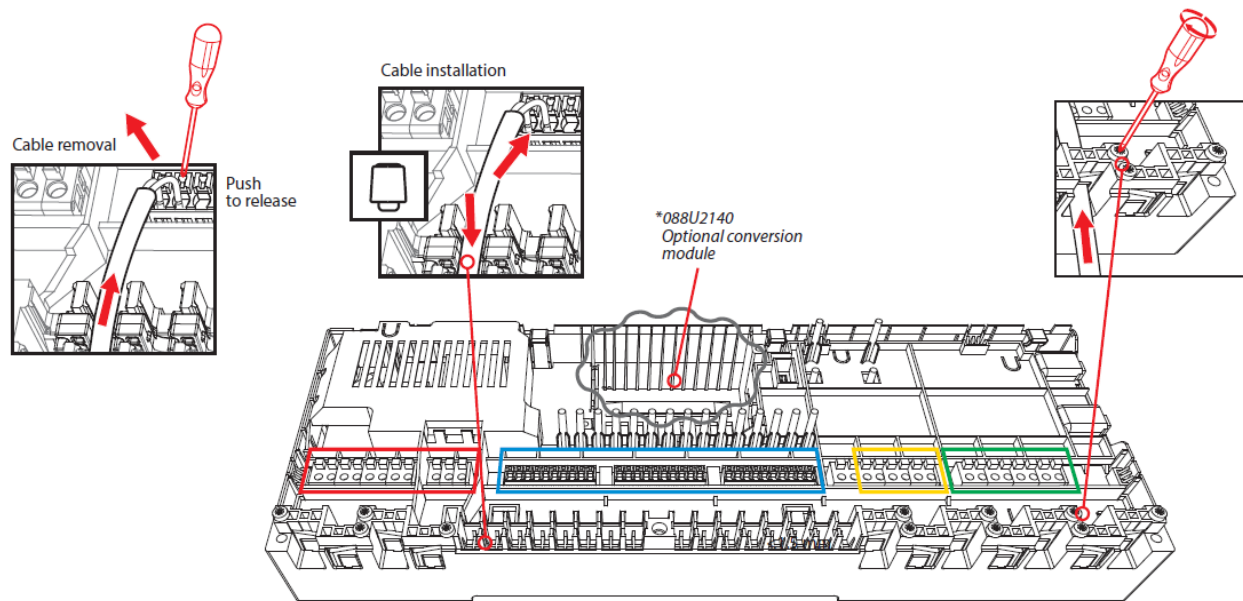


## SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Danfoss A/S declares that the radio equipment type Danfoss Icon2 MC are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
[heating.danfoss.com](http://heating.danfoss.com)

Need help? Download App


 
## Documents / Resources

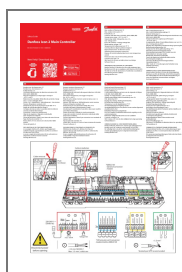

[Danfoss 088R0400 Icon 2 Main Controller](#) [pdf] User Guide  
 088R0400 Icon 2 Main Controller, 088R0400, Icon 2 Main Controller

## References

-  [Danfoss Climate Solutions for heating | Efficient solutions for superior comfort | Danfoss](#)