




Danfoss 088U1110 Icon Floor Sensor User Manual

[Home](#) » [Danfoss](#) » Danfoss 088U1110 Icon Floor Sensor User Manual 

Danfoss 088U1110 Icon Floor Sensor User Manual



Contents

- [1 Instruction](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Instruction

Use conduit systems for electrical installations acc. to EN/IEC 61386-23


The floor sensor must be mounted in a insulating conduit, sealed at the floor end (1), for easy replacement of the floor sensor if necessary.

The minimum bending radius is 5 cm (2).


The best placement for the floor sensor, is centered between two floor heating loops (3).

The floor sensor is a LIVE cable; therefore any extension made to the sensor wiring should be treated in the same way as normal main voltage cabling.

Type: NTC 47 k Ω / 25°C, 3 m

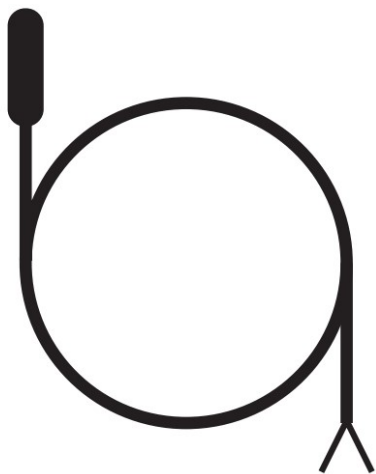


13690 000 01 Manual Installation SC 3 Metre Danfoss / VISUK20F

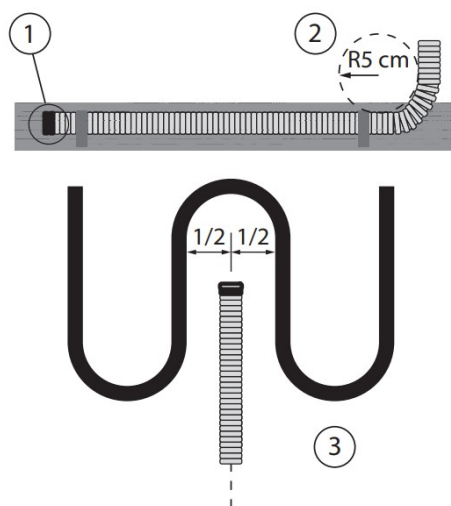

Danfoss

Documents / Resources

	<p>Danfoss 088U1110 Icon Floor Sensor [pdf] User Manual 088U1110 Icon Floor Sensor, 088U1110, Icon Floor Sensor, Floor Sensor, Sensor</p>
---	---