



Danfoss 100B1200 ECL Comfort 120 ECL Controller Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 100B1200 ECL Comfort 120 ECL Controller Installation Guide 

Contents

- 1 ECL Comfort 120 ECL Controller
 - 1.1 Installation Guide
 - 1.2 Installation Guide, ECL Comfort 120
 - 1.3 Installation Guide, ECL Comfort 120
 - 1.4 Installation Guide, ECL Comfort 120
 - 1.5 Installation Guide, ECL Comfort 120
 - 1.6 Installation Guide, ECL Comfort 120
 - 1.7 Installation Guide, ECL Comfort 120
 - 1.8 Installation Guide, ECL Comfort 120
- 2 Documents / Resources
 - 2.1 References
- 3 Related Posts


ECL Comfort 120 ECL Controller

ENGINEERING
TOMORROW



Installation Guide

ECL Comfort 120
(code no. 100B1200, 100B1600, 100B1601, 100B1603, 230 V a.c.)

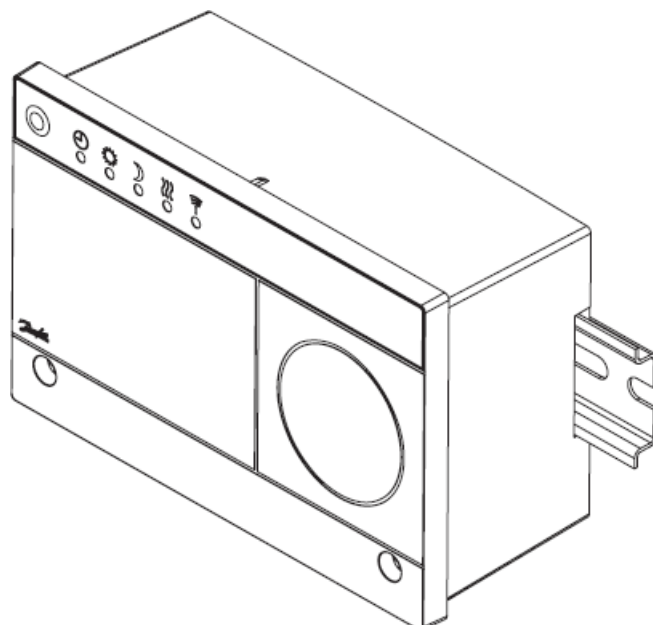





Danfoss
87H1975.10



ECL 120







Danfoss
87H1969.10

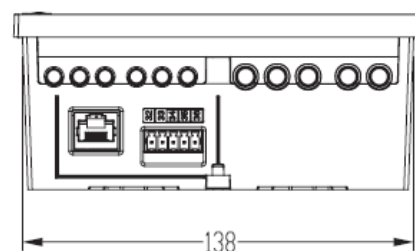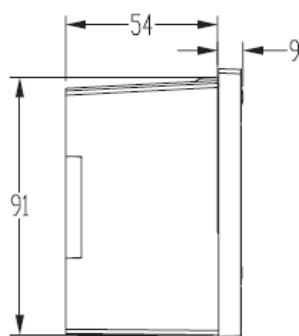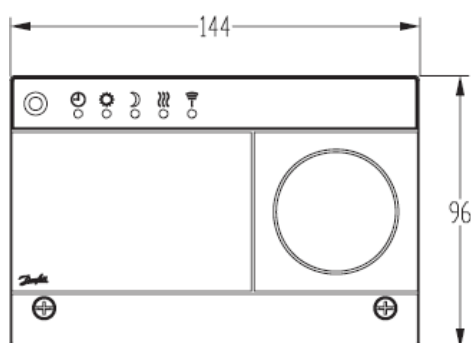
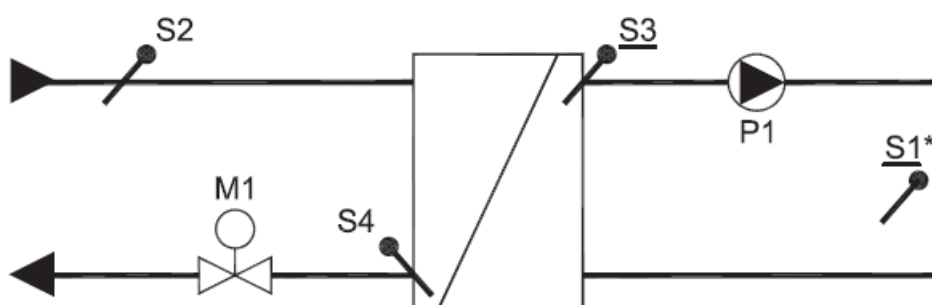


Danfoss
87H1972.10

Installation Guide, ECL Comfort 120

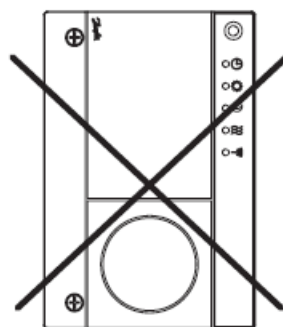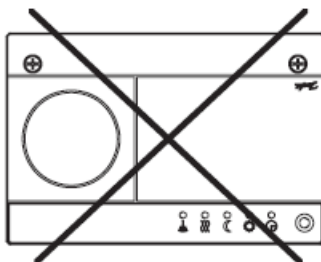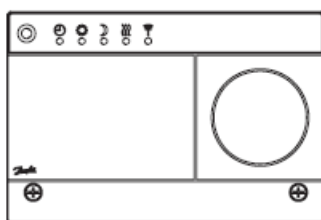
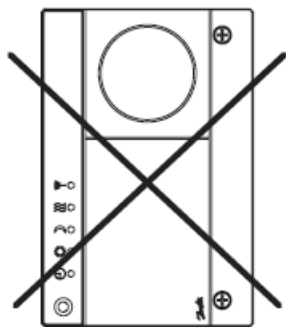


Danfoss
87H1973.10

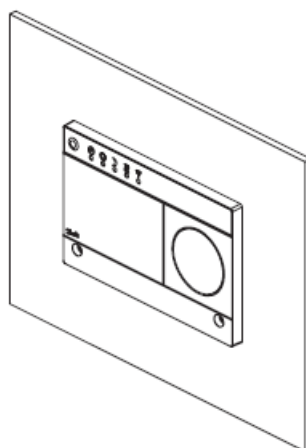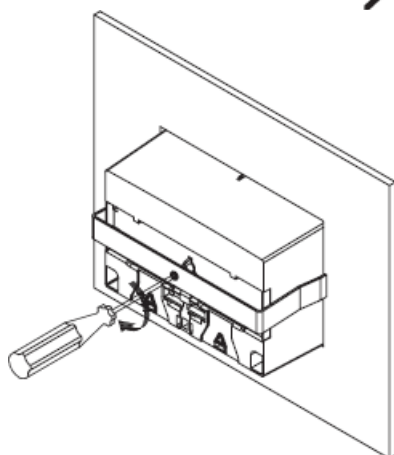


Danfoss
87H1974.10

138 x 92 mm
IEC 6155

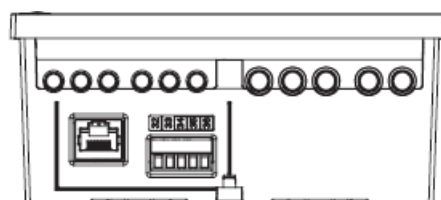
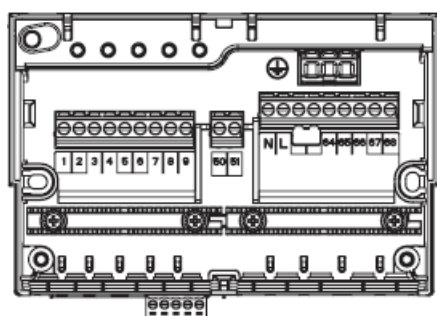


Danfoss
87H1981.10

Installation Guide, ECL Comfort 120



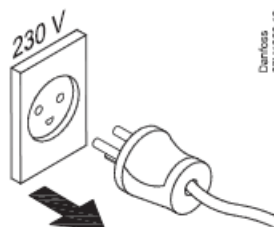


Danfoss
87H1360.10

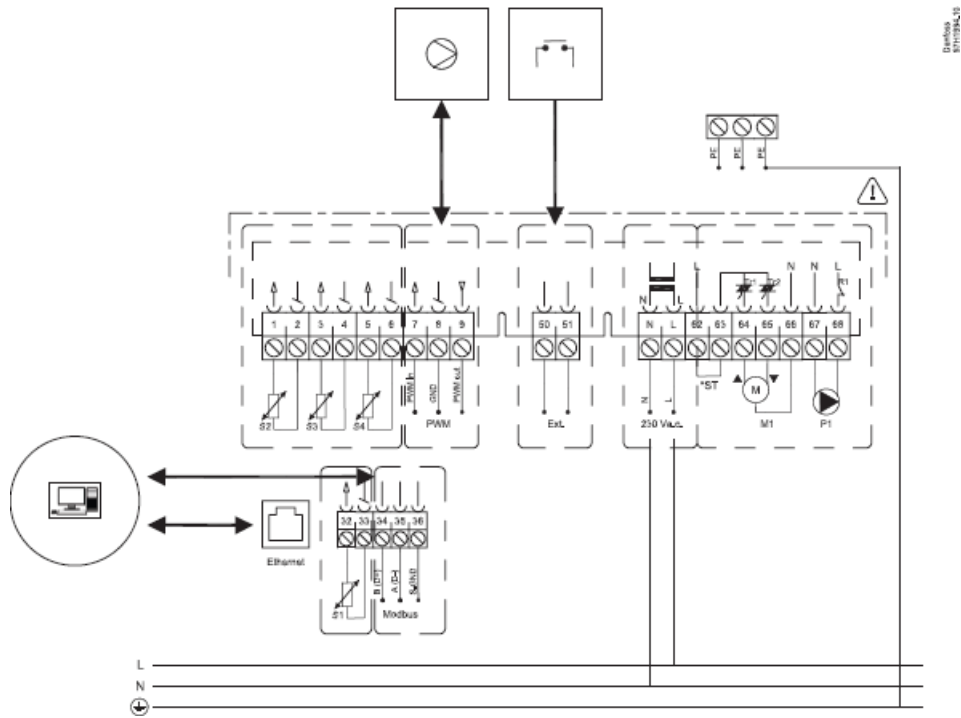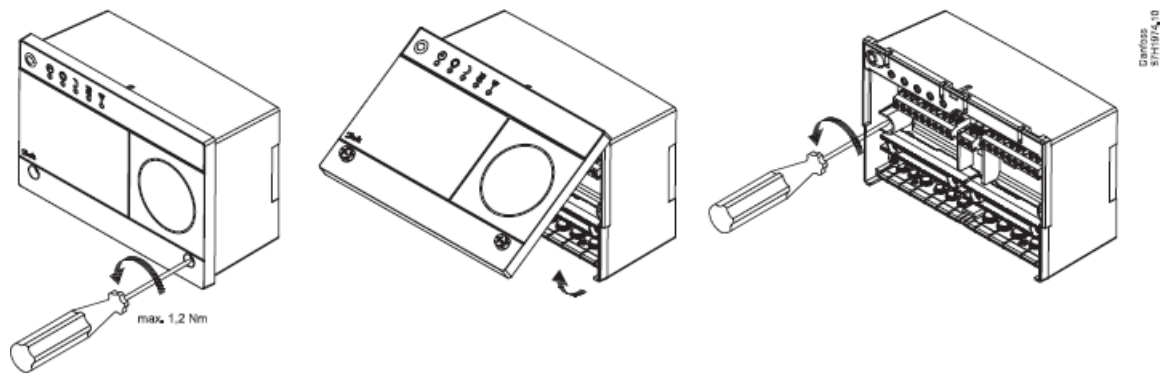


Installation Guide, ECL Comfort 120

R	4 (2) A / 230 V a.c.
R	
Tr	15 VA / 230 V a.c.

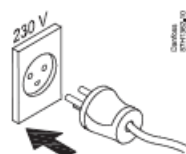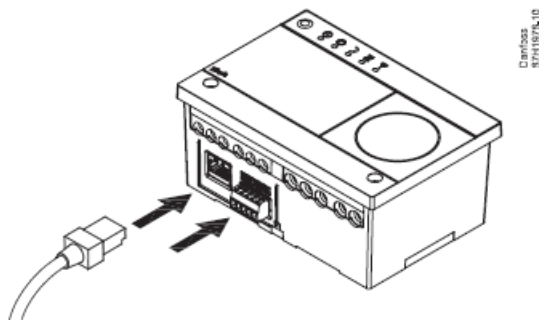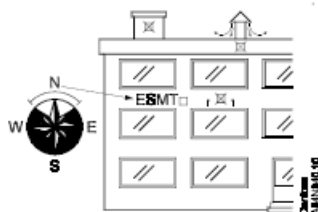

Installation Guide, ECL Comfort 120

Commissioning:

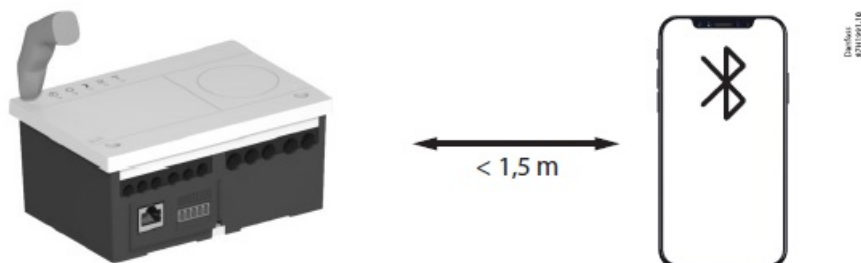

Installation Guide, ECL Comfort 120

EU-declaration of conformity

<https://store.danfoss.com/en/>

Select: ECL Comfort 120 > Documents > EU Declaration:

<https://assets.danfoss.com/approvals/192308/ID389638298581-0201.pdf>

or UK Declaration:
<https://assets.danfoss.com/approvals/188970/ID389638299582-0101.pdf>

- ?  ECL Comfort 120: www.danfoss.com
- ?  <https://www.youtube.com/user/DanfossHeating>
- > Playlists -> How-to Videos -> District Energy installation videos

Danfoss A/S
Climate Solutions + danfoss.com + +45 7488 2222




Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved,

8 | © Danfoss | DCS-SGDPT/DK | 2022.09 AN41913394756900-000101

Documents / Resources

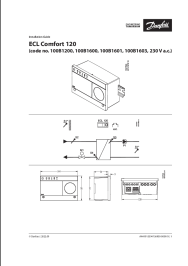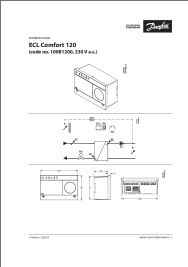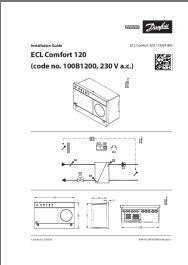	Danfoss 100B1200 ECL Comfort 120 ECL Controller [pdf] Installation Guide 100B1200, 100B1600, 100B1601, 100B1200 ECL Comfort 120 ECL Controller, 100B1200, ECL Comfort 120 ECL Controller, ECL Controller, Controller, 100B1603
	Danfoss 100B1200 ECL Comfort 120 ECL Controller [pdf] Installation Guide 100B1200 ECL Comfort 120 ECL Controller, 100B1200, ECL Comfort 120 ECL Controller, Comfort 120 ECL Controller, 120 ECL Controller, ECL Controller, Controller
	Danfoss 100B1200 ECL Comfort 120 ECL Controller [pdf] Installation Guide 100B1200 ECL Comfort 120 ECL Controller, 100B1200, ECL Comfort 120 ECL Controller, Comfort 120 ECL Controller, 120 ECL Controller, ECL Controller, Controller

References

-  [Danfoss - Engineering Tomorrow | Danfoss](#)

-  [Danfoss Global Product Store | Homepage](#)

Manuals+