



Danfoss 130BB781.10 VLT HVAC Basic Drive Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss 130BB781.10 VLT HVAC Basic Drive Instruction Manual 

Danfoss 130BB781.10 VLT HVAC Basic Drive Instruction Manual




Contents

- [1 Mounting Instruction](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Mounting Instruction

Step 1


Fit top cover onto frequency converter.

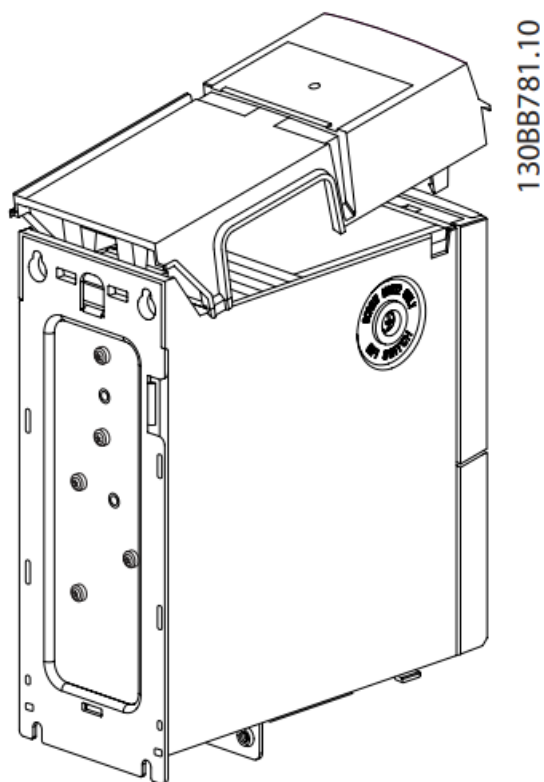

Step 2

Mount metal bracket onto frequency converter and tighten two M4 X 10 screws.


Tightening torque: 2Nm

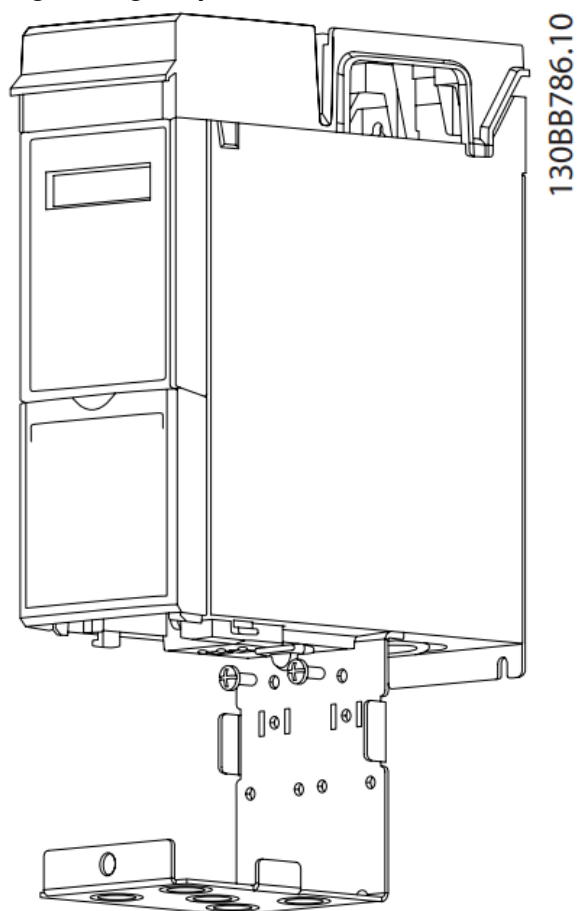

Step 3


Fit bottom cover onto frequency converter and tighten a M4 X 10 screw.

Type 1 Kit	
Frame	Conduit Size
H1	Ø22.5mm X 5
H2	Ø22.5mm X 2, Ø28.4mm X 3
H3	Ø22.5mm X 2, Ø28.4mm X 3
H4	Ø22.5mm X 2, Ø34.7mm X 3
H5	Ø22.5mm X 3, Ø34.7mm X 3

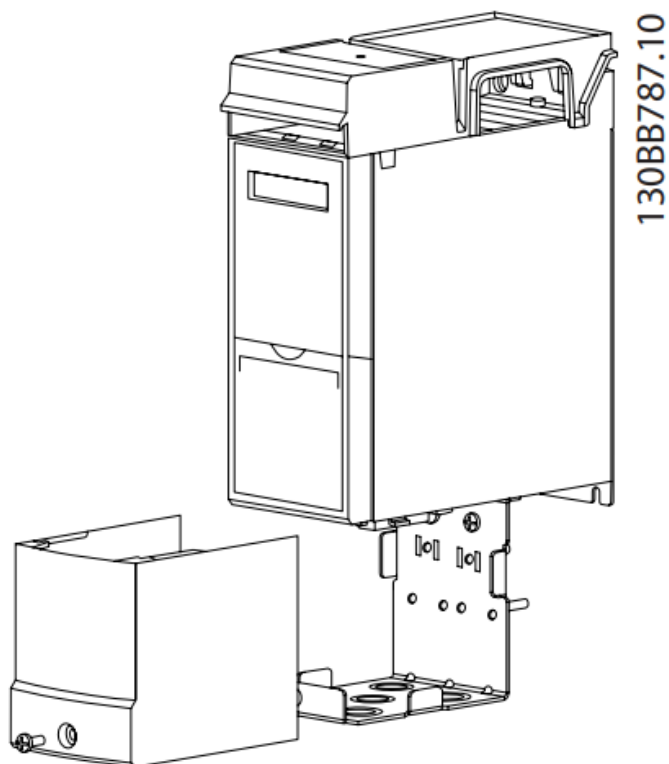

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products ready on order provided that such cessations can be made without subsequent diagnoses being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Sanford and the Danfoss Ergo type are trademarks of Fonda A/S. All rights reserved.

Danfoss

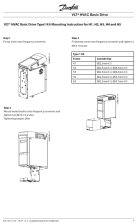

[Danfoss 130BB781.10 VLT HVAC Basic Drive](#) [pdf] Instruction Manual
130BB781.10, 130BB787.10, 130BB786.10, 130BB781.10 VLT HVAC Basic Drive, 130BB781.10, VLT HVAC Basic Drive, HVAC Basic Drive, Basic Drive

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.