



# Danfoss 130BB783.10 Frequency Converter Instruction Manual

[Home](#) » [Danfoss](#) » Danfoss 130BB783.10 Frequency Converter Instruction Manual 

## Contents

- [1 Danfoss 130BB783.10 Frequency Converter](#)
- [2 Step 1](#)
- [3 Step 2](#)
- [4 Step 3](#)
- [5 Step 4](#)
- [6 Specifications:](#)
- [7 Frequently Asked Questions \(FAQ\):](#)
  - [7.1 Q: What IP rating does the product have?](#)
  - [7.2 Q: What is the recommended torque for tightening screws?](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## Danfoss 130BB783.10 Frequency Converter


### INSTRUCTION MANUAL

VLT® HVAC Basic Drive

VLT® HVAC Basic Drive IP21 Kit Mounting Instruction for H1, H2, H3, H4 and H5


## Step 1

Fit top cover onto frequency converter.

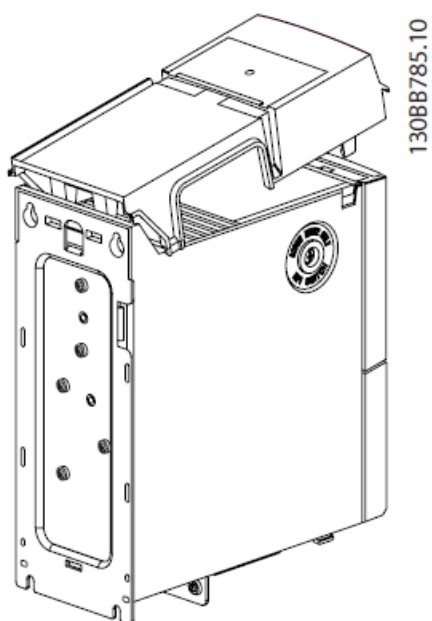


## Step 2

Install clamps onto metal bracket and tighten M4 X 20 screws.

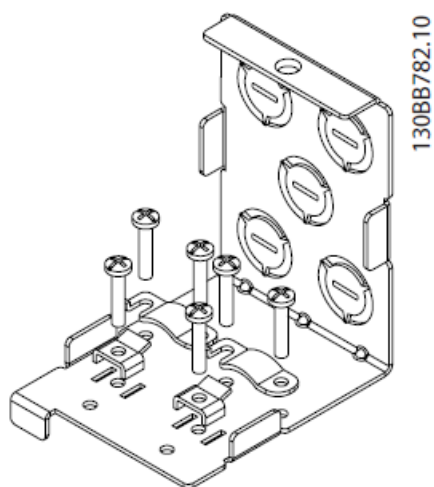


## Step 3

Mount metal bracket onto frequency converter and tighten two M4 X 10 screws.  
Tightening torque: 2Nm.

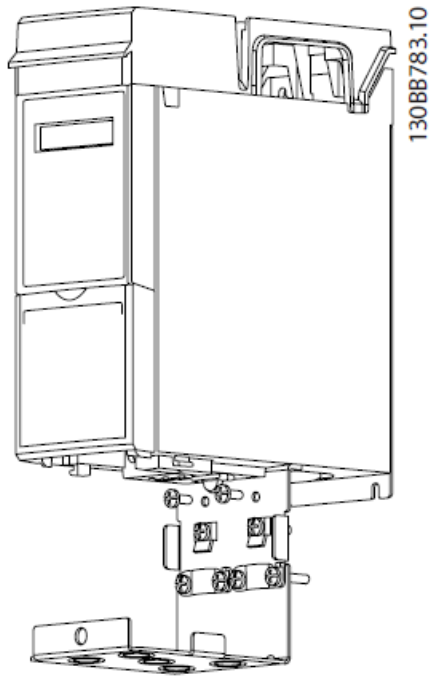

#### Step 4

Fit bottom cover onto frequency converter and tighten an M4 X 10 screw.

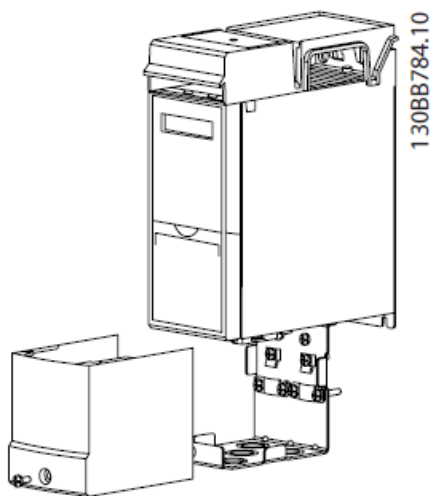

#### Note

IP21 is only achieved with LCP mounted

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss NS. All rights reserved.

#### Specifications:

- Model: 130BB783.10, 130BB785.10, 130BB782.10, 130BB784.10
  - IP Rating: IP21 (with LCP mounted)
  - Torque: 2Nm
  - Screw Sizes: M4 X 10, M4 X 20
- 

## Frequently Asked Questions (FAQ):

**Q: What IP rating does the product have?**


A: The product has an IP21 rating, which is achieved when the LCP is mounted.

**Q: What is the recommended torque for tightening screws?**

A: The recommended torque for tightening screws is 2Nm.

---

## Documents / Resources

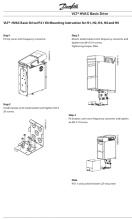	<p><a href="#">Danfoss 130BB783.10 Frequency Converter</a> [pdf] Instruction Manual 130BB783.10, 130BB785.10, 130BB782.10, 130BB784.10, 130BB783.10 Frequency Converter, 130BB783.10, Frequency Converter, Converter</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.