

Danfoss 132B0281 Graphical LCP Adapter Installation Guide

Home » Danfoss » Danfoss 132B0281 Graphical LCP Adapter Installation Guide 🖫



Installation Instructions
Graphical LCP Adapter

Contents

- 1 132B0281 Graphical LCP
- Adapter
- 2 Items supplied3 Mounting the Option
- 4 Documents / Resources
 - 4.1 References

132B0281 Graphical LCP Adapter

Use the adapter to connect the VLT® Control Panel LCP 102 to the frequency converter via a cable.

Items supplied

Code number of the graphical LCP adapter is 132B0281. The kit includes:

- · GLCP adapter.
- 2 screws.

Code number of the LCP remote mounting kit is 130B1113. The kit includes:

- · Graphical LCP.
- · Fasteners.
- 3 m (9.8 ft) cable.
- · Gasket.

Mounting the Option

Mount the option according to Illustration 1.1.

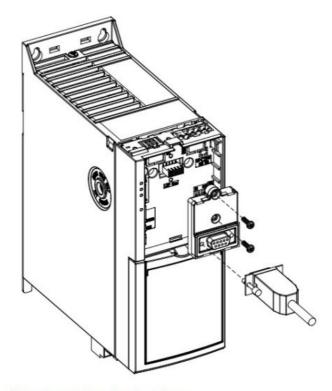


Illustration 1.1 Mounting the Adapter

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.





<u>Danfoss 132B0281 Graphical LCP Adapter</u> [pdf] Installation Guide 132B0281, 130B1113, 132B0281 Graphical LCP Adapter, 132B0281, Graphical LCP Adapter, LCP Adapter

References

- Danfoss Drives: World-leading drive manufacturer | Danfoss
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.