



134N3195 Automation Drive



# Danfoss 134N3195 Automation Drive Installation Guide

[Home](#) » [Danfoss](#) » Danfoss 134N3195 Automation Drive Installation Guide 

## Contents

- [1 Danfoss 134N3195 Automation Drive](#)
- [2 Specifications](#)
- [3 Introduction](#)
- [4 Safety Instructions](#)
- [5 Items Supplied](#)
- [6 Connectors](#)
- [7 Installation](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)



**Danfoss 134N3195 Automation Drive**



## Specifications

- Voltage: 3×400 V
- Power range: kW (hp)

## Installation Instructions

Make sure to follow the specific installation instructions provided for your supplied variant of the FC 302 frequency converter.

## Safety Instructions

### WARNING:

Ensure to wait the specified minimum waiting time after power has been removed before performing any service or repair work to prevent serious injury or death due to residual voltage in the capacitors. Always use an appropriate voltage measuring device to confirm that capacitors are fully discharged.

## Items Supplied

Depending on the ordering number, you will receive the FC 302 with either 2 or 4 motor connectors as specified in the illustrations.

## Connectors Overview

The frequency converter comes with various connectors, including mains, motor, PROFIBUS, and I/O box connectors. Refer to Table 4.1 for detailed descriptions.

## Wire/Connector Assignment

Refer to Tables 4.2 and 4.3 for wire/connector assignments for plug X1 and plug X2, respectively. Make sure to use the correct mating parts for connections.

## Motor Connection Variants

- **2 Motor Connection Variant (134N3195):** Keep blind plugs installed to maintain the protection rating. Refer to Table 4.4 for specific connections.
- **4 Motor Connection Variant (134N3196):** Internal terminal connections are involved. Refer to Table 4.5 for detailed connections.

## Introduction

### NOTICE

- VLT® AutomationDrive FC 302 with connectors is not UL approved.
- The ETR functionality is not guaranteed.
- Enclosure protection rating: IP55.

## Safety Instructions

### WARNING

#### DISCHARGE TIME

The frequency converter contains DC-link capacitors, which can remain charged even when the frequency converter is not powered. High voltage can be present even when the warning LED indicator lights are off. Failure to wait the specified time after power has been removed before performing service or repair work can result in death or serious injury.

- Stop the motor.
- Disconnect AC mains and remote DC-link power supplies, including battery back-ups, UPS, and DC-link connections to other frequency converters.
- Disconnect or lock the PM motor.
- Wait for the capacitors to discharge fully. The minimum duration of waiting time is specified in Table 2.1.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

Voltage [V]	Power range [kW (hp)]	Minimum waiting time (minutes)
3×400	0.55–7.5 (0.75–10)	4

## Items Supplied

Depending on the ordering number, the following is supplied:

### FC 302 with 2 motor connectors (134N3195)

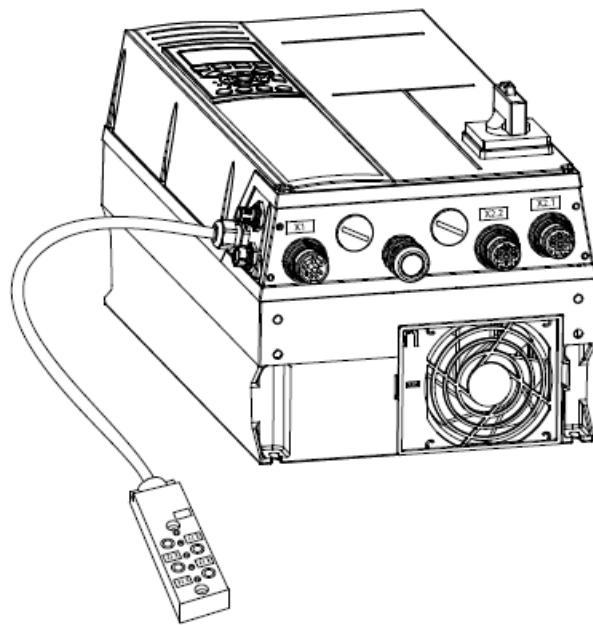


Illustration 3.1 2 Motor Connectors

**FC 302 with 4 motor connectors (134N3196)**

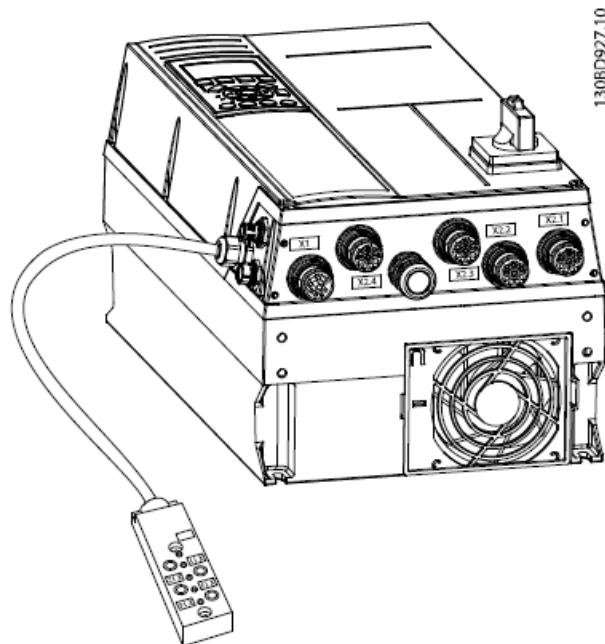


Illustration 3.2 4 Motor Connectors

**FC 302 with MCO – mains connectors and 4 cable glands (134N8410)**

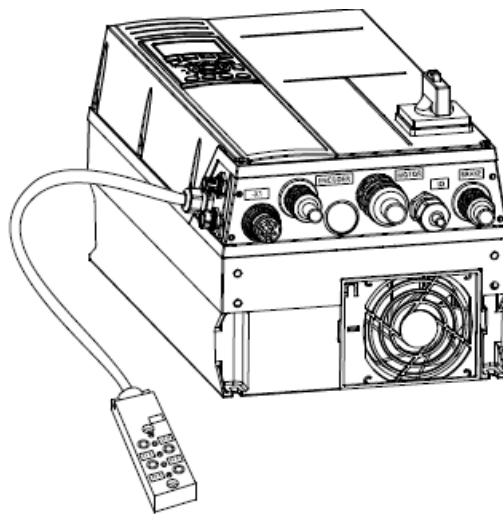


Illustration 3.3 Mains Connectors and 4 Cable Glands

### FC 302 with connectors – side view

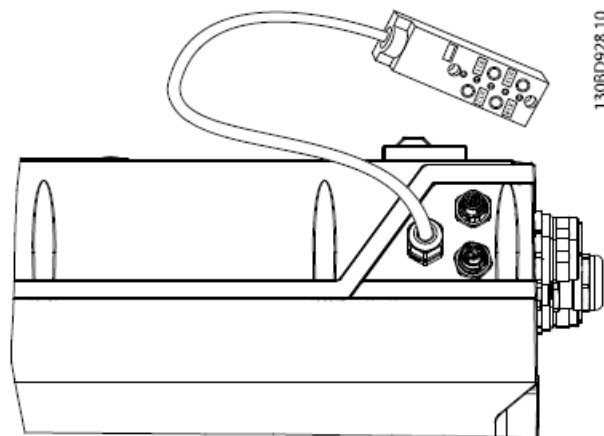


Illustration 3.4 Side View

### NOTICE

See the VLT® AutomationDrive FC 301/FC 302 Design Guide for dimensions and further information.

## Connectors

### Overview

The frequency converter has 7 connectors plus 2 or 4 motor connectors.

Label	Connector	Description
X1	Mains	Mains in M23 (in M25) Male
X2.1-X2.4	Motor	Motor connection M23 Female
X51	PROFIBUS – Male	PROFIBUS M12
X52	PROFIBUS – Female	PROFIBUS M12
X11-X14	I/O box connector	Phoenix I/O box

Table 4.1 Connectors

### X1- Mains M23 (in M25) Male

## General ratings

- Pins 1, 2, 3, and 4: 480 V AC, maximum 15 A.
- Pins C and D: 30 V DC, maximum 3 A.
- Tightening torque: 1.5–2.0 Nm (13.3–17.7 in-lb)

Pin	Label	Connected to the frequency converter wiring schematic	Minimum wire [mm <sup>2</sup> (AWG)]
1	T1	91 (L1)	2.5 (14)
4	T2	92 (L2)	2.5 (14)
3	T3	93 (L3)	2.5 (14)
2	PE	95 (PE)	2.5 (14)
D	0 V DC	35	0.75 (18)
C	24 V DC	36	0.75 (18)

Table 4.2 Wire/Connector Assignment for Plug X1

- Mating part: Mains X1 (female)
- Phoenix ordering number: KK-0885/XX,XX

## X2.1–X2.4 Motor Connectors M23 (in M25) Female

## General ratings

- Pins 1, 2, 3, and 4: 480 V AC, maximum 15 A.
- Pins C and D: 30 V DC, maximum 3 A.
- Tightening torque: 1.5–2.0 Nm (13.3–17.7 in-lb).

Pin	Label	Connected to the frequency converter wiring schematic	Minimum wire [mm <sup>2</sup> (AWG)]
1	U	96 (U)	2.5 (14)
3	V	97 (V)	2.5 (14)
4	W	98 (W)	2.5 (14)
2	PE	99 (PE)	2.5 (14)

Table 4.3 Wire/Connector Assignment for Plug X2

- Mating part: Motor X2 (male)
- Phoenix ordering number: KCX-K0341/XX, XX Maximum cable length: 7.0 m (23 ft)

## 2 Motor Connection Variant (134N3195)

To meet the protection rating, always keep blind plugs installed.

Label	Connected to the frequency converter wiring schematic
X2.1-B	53
X2.2-A	50
X2.1-A and X2.2-B	Connected to a common terminal
X2.1-C and X2.2-C	Connected to an open terminal available in the frequency converter
X2.1-D and X2.2-D	Connected to an open terminal available in the frequency converter

Table 4.4 2 Motor Connection

## 4 Motor Connection Variant (134N3196)

Label	Connected to the frequency converter wiring schematic
X2.1-B	53
X2.4-A	50
X2.1-A and X2.2-B	Connected via an internal terminal
X2.2-A and X2.3-B	Connected via an internal terminal
X2.3-A and X2.4-B	Connected via an internal terminal

Table 4.5 4 Motor Connection

X51 PROFIBUS M12 Male, X52 PROFIBUS M12 Female

### General ratings

- 30 V DC, maximum 1 A.
- Tightening torque: 0.2–0.3 Nm (1.8–2.7 in-lb)

Label		Connected to the frequency converter PROFIBUS connector
1	5 V DC	67
2	–	63
3	0 V DC	66
4	–	62

Table 4.6 PROFIBUS Connection

- Mating part: PROFIBUS X52 and X51 (female/male)
- Phoenix ordering number: SAC-2P-MSB/ XX,XX-910/FSB SCO CT

#### **X11–X14 I/O Connector Box (134N3195–134N3196)**

Phoenix sensor/actuator box – SACB-4/4-L-0,57HPUR CDA -1531426.

Tightening torque sensor/actuator cable: 0.4 Nm (3.5 in-lb).

Label	Wire	Connected to the frequency converter wiring schematic	
X11-X14 1	Brown	12	+24 V Out
X11-X14 2			
X11-X14 3	Blue	20	COM D IN
X14-4	Gray	33	D IN
X13-4	Yellow	29	D IN/OUT
X12-4	Green	19	D IN
X11-4	White	18	D IN

Table 4.7 Connector Box (134N3195–134N3196)

#### **X11–X14 I/O Connector Box (134N8410)**

Phoenix sensor/actuator box – SACB-4/4-L-0,57HPUR CDA -1531426.

Tightening torque sensor/actuator cable: 0.4 Nm (3.5 in-lb)



Label	Wire	Connected to the wiring schematic		
X11-X14 1	Brown	Connected to the frequency converter wiring schematic	12	+24 V Out
X11-X14 2				
X11-X14 3	Blue		20	COM D IN
X14-4	Gray	Connected to the C- option, MCO 305 wiring schematic	X57-4	–
X13-4	Yellow		X57-3	–
X12-4	Green		X57-2	–
X11-4	White		X57-1	–

Table 4.8 Connector Box (134N8410)

#### Overview of Marking and Cable Glands (134N8410)

Marking	Type of cable gland	Allowed cable diameter [mm (in)]
Encoder	EMC M20x1,5 7.5–14.0	7.5–14.0 (0.3–0.55)
Motor	EMC M25x1,5 10.0–18.0	10.0–18.0 (0.4–0.7)
Brake	EMC M20x1,5 7.5–14.0	7.5–14.0 (0.3–0.55)
I/O	M25x1.5 50.625 (plastic RAL 7035)	11–16 (0.45–0.6)

Table 4.9 Cable Glands (134N8410)

## Installation

### • NOTICE

For installation, refer to the VLT® AutomationDrive FC 301/FC 302 Operating Instructions.

### • NOTICE


For installation of 134N8410 FC 302 with MCO, also refer to the VLT® Motion Control Option MCO 305 Operating Instructions.

## FAQ

**Q: How long should I wait after removing power before servicing the frequency converter?**

**A:** The minimum waiting time specified is 4 minutes, as indicated in Table 2.1.

## Documents / Resources

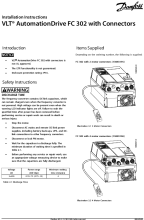

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.