



Danfoss ABN A5 Actuator NC 5mm 120 VAC without Cord and Adapter User Guide

[Home](#) » [Danfoss](#) » Danfoss ABN A5 Actuator NC 5mm 120 VAC without Cord and Adapter User Guide 


Danfoss ABN A5 Actuator NC 5mm 120 VAC without Cord and Adapter User Guide




Contents

- [1 Mounting](#)
- [2 Dimensions](#)
- [3 Unlock NC version \(First Open Function\)](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Mounting

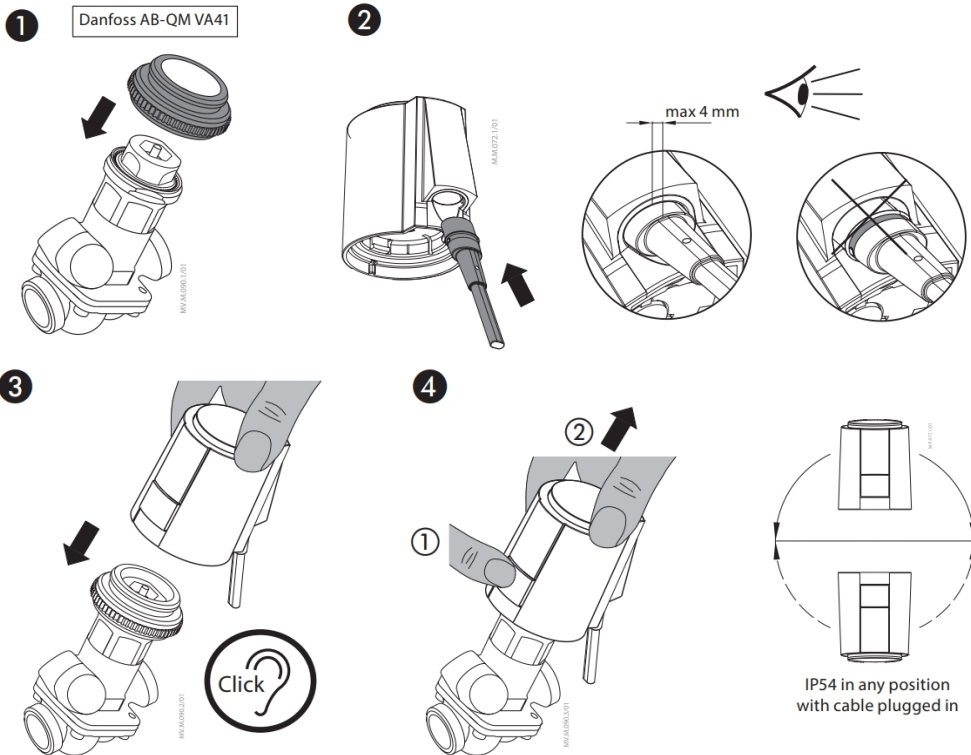

Dimensions

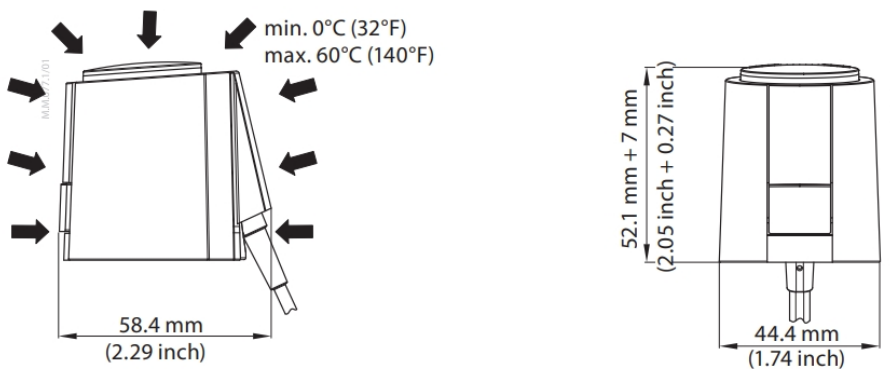


Unlock NC version (First Open Function)


Note:

- * 24 V versions
- ** 230 V versions

- ABN A5 NO & AB-QM

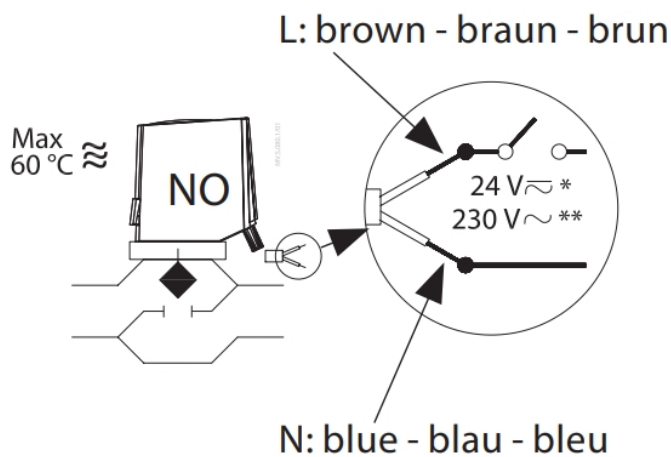

- ABN A5 NC & AB-QM

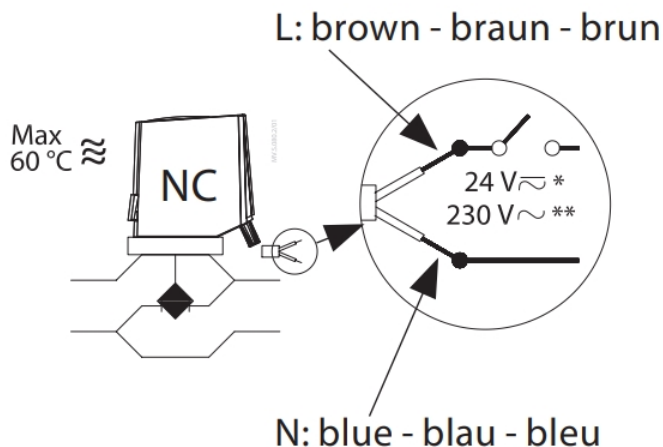

Danfoss A/S

Climate Solutions

danfoss.com


+45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



Documents / Resources

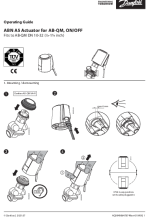	<p>Danfoss ABN A5 Actuator NC 5mm 120 VAC without Cord and Adapter [pdf] User Guide ABN A5 Actuator NC 5mm 120 VAC without Cord and Adapter, ABN A5, Actuator NC 5mm 120 VAC without Cord and Adapter, Actuator</p>
---	---