

# **Danfoss Aero RA Click Thermostatic Sensors Installation** Guide

Home » Danfoss » Danfoss Aero RA Click Thermostatic Sensors Installation Guide 🖺

#### **Contents**

- 1 Danfoss Aero RA Click Thermostatic
- **Sensors**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Installation
- **5 BIV Installation**
- 6 Uninstall
- **7 Temperature Limitation**
- 8 Blind mark
- 9 Documents / Resources
- **10 Related Posts**



**Danfoss Aero RA Click Thermostatic Sensors** 



#### **Product Information**

The product is identified by the code numbers 013G1246 and 013G1236. It comes with an installation guide that includes instructions for setting up the product. There is also a blind mark included for proper installation.


The product has a maximum setting of 4 and a minimum setting of 2.

## **Product Usage Instructions**


- 1. Refer to the installation guide for proper setup and installation of the product.
- 2. Ensure that the blind mark is properly aligned during installation.
- 3. Set the product to the desired maximum or minimum setting by following these steps:
  - 1. For maximum setting, turn the dial until it reaches the number 4.
  - 2. For minimum setting, turn the dial until it reaches the number 2.

Make sure to test the product after installation to ensure that it is functioning properly.


## Installation

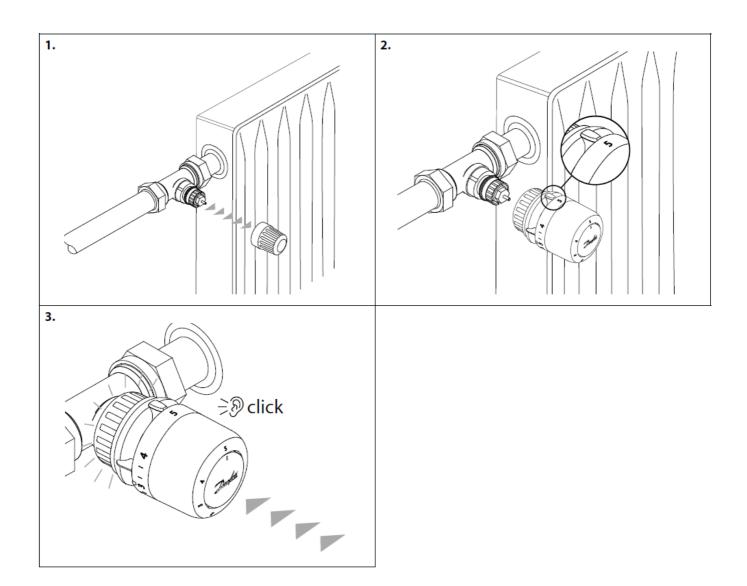


**BIV Installation** 

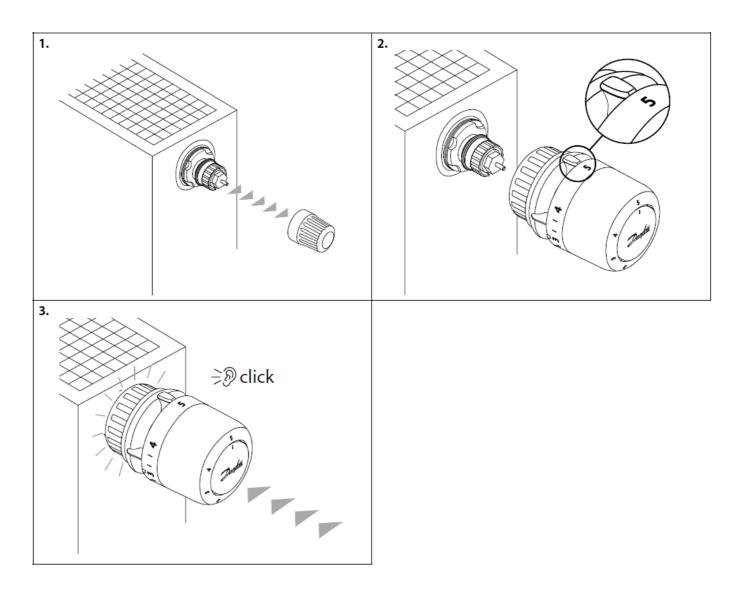



# Uninstall

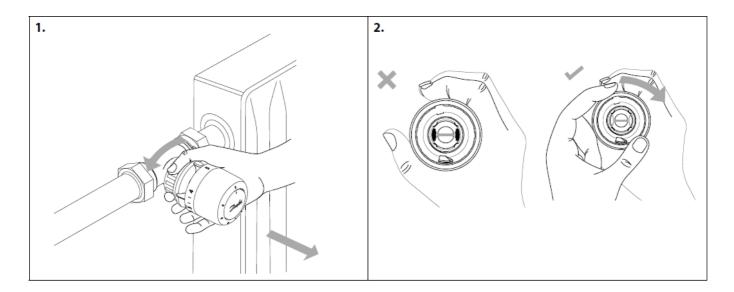


**Temperature Limitation** 

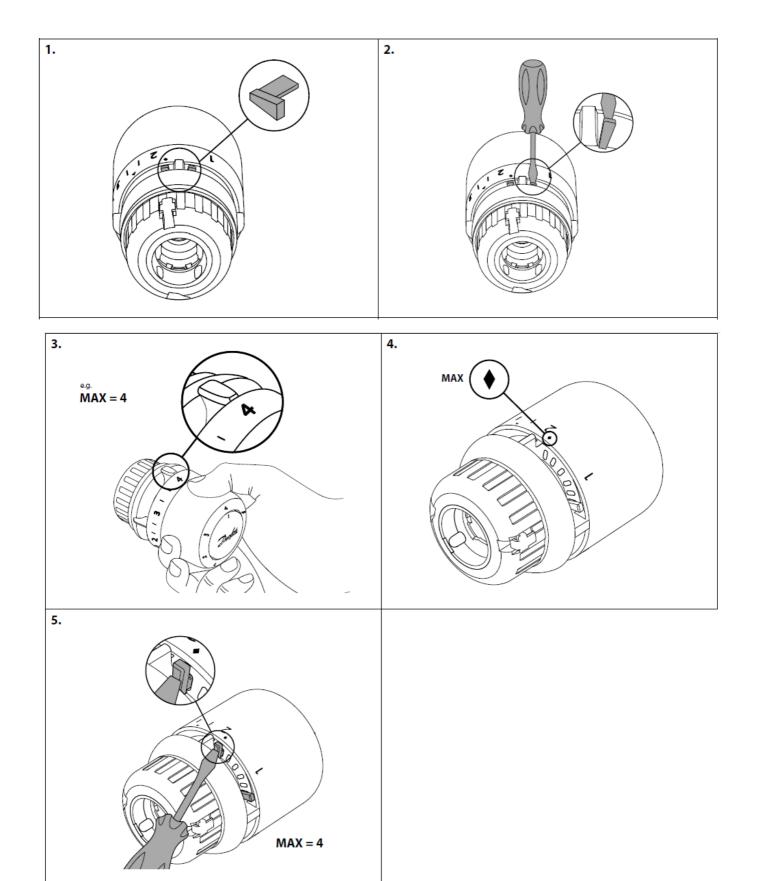

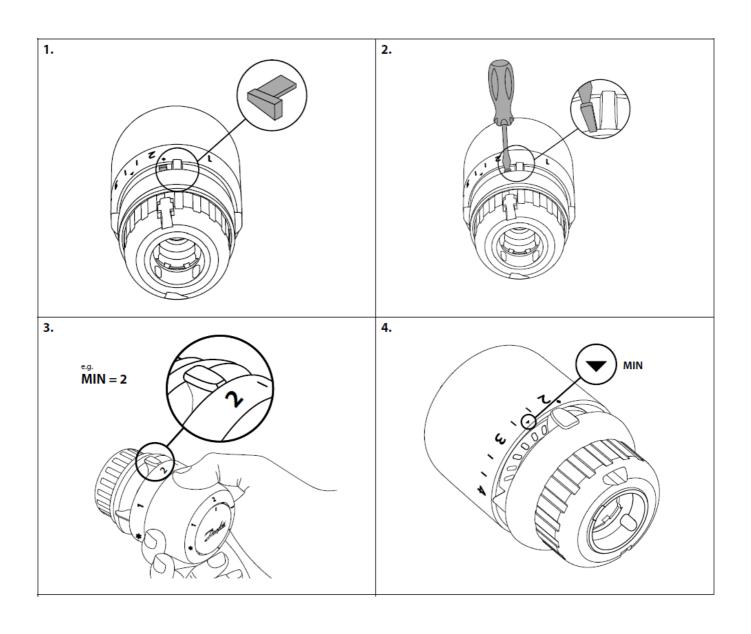

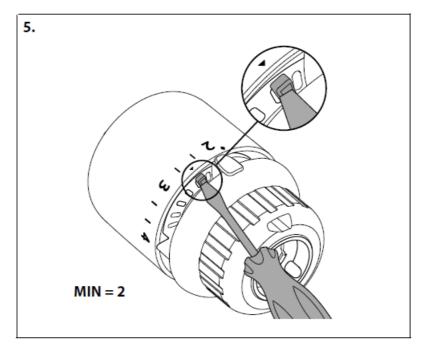


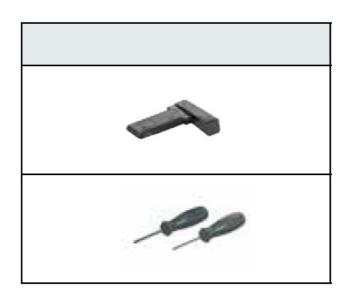


## Code no.

- 013G1246
- 013G1236

# Theft protection

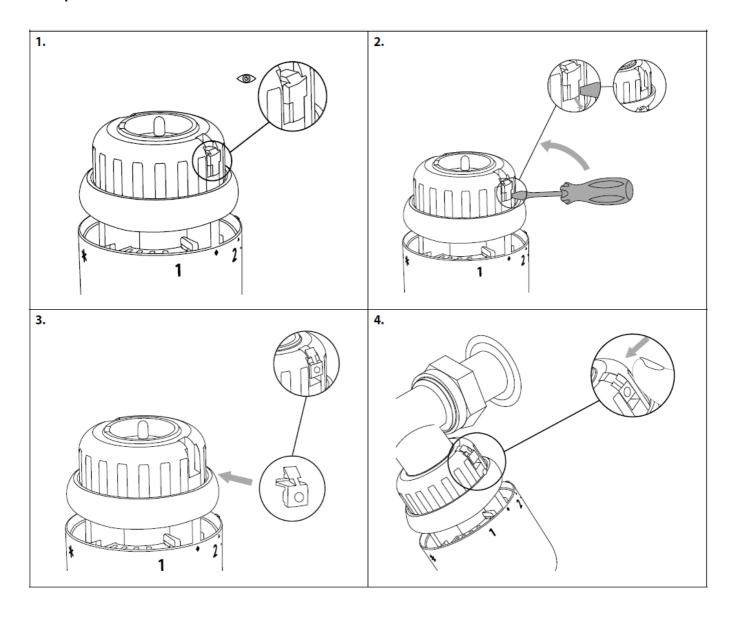

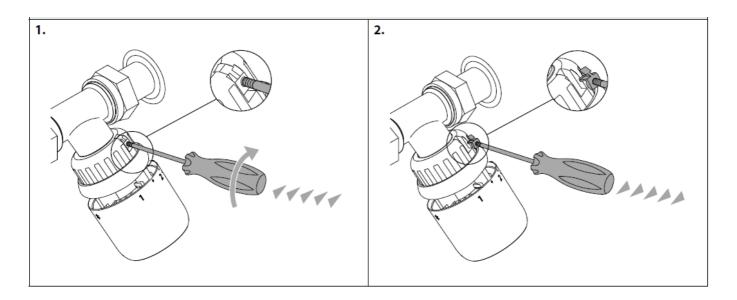




# Code no.

- 013G5245
- 013G1236

# **Blind mark**

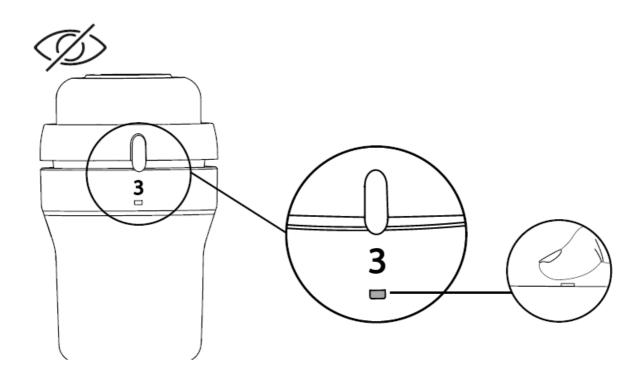

#### Danfoss A/S

Climate Solutions <u>danfoss.com</u> +45 7488 2222 Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material.

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or Tunction of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

## **Documents / Resources**



<u>Danfoss Aero RA Click Thermostatic Sensors</u> [pdf] Installation Guide 013G1246, 013G1236, 013G5245, Aero RA Click Thermostatic Sensors, Aero RA, Click Thermostatic Sensors, Thermostatic Sensors, Sensors



<u>Danfoss Aero RA Click Thermostatic Sensors</u> [pdf] Installation Guide Aero RA Click Thermostatic Sensors, Aero RA Click, Thermostatic Sensors, Sensors



<u>Danfoss Aero RA Click Thermostatic Sensors</u> [pdf] Installation Guide 015G4680, 015G4622, 015G4623, 015G5205, 015G4690, Aero RA Click Thermostatic Sensors, Aero RA Click, Thermostatic Sensors

Manuals+.