



Danfoss Aero RA-V Series Remote Sensor Installation Guide

[Home](#) » [Danfoss](#) » Danfoss Aero RA-V Series Remote Sensor Installation Guide 


Danfoss Aero RA-V Series Remote Sensor Installation Guide







Contents


- [1 Installation](#)
- [2 Remote sensor](#)
- [3 Temperature Limitation](#)
- [4 Blind mark](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Installation

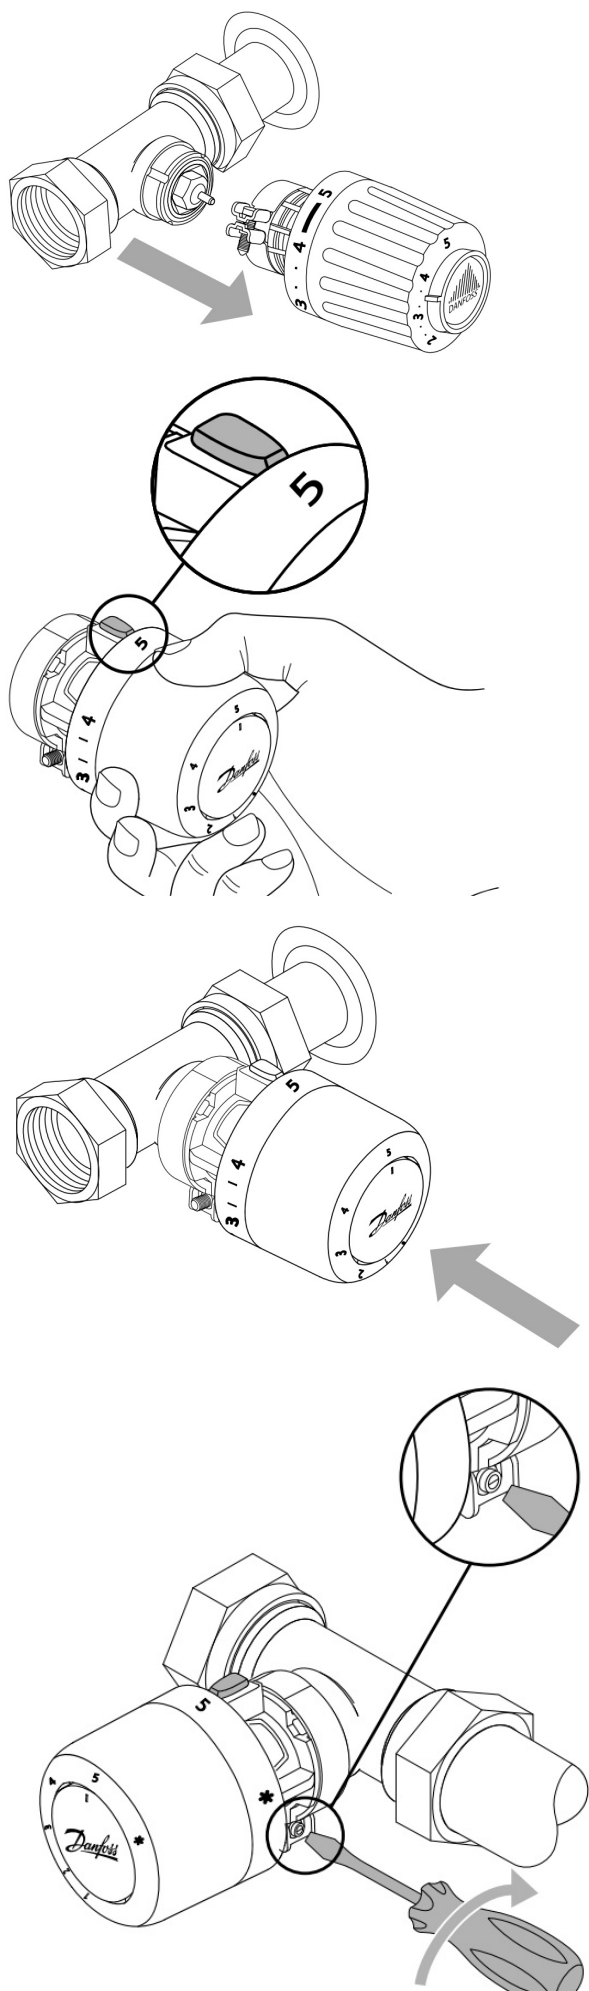



Remote sensor

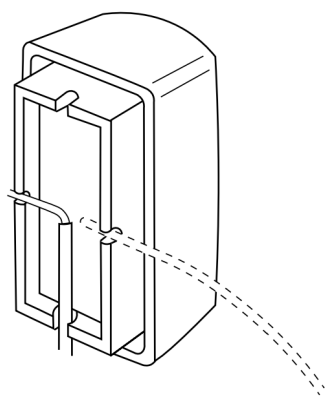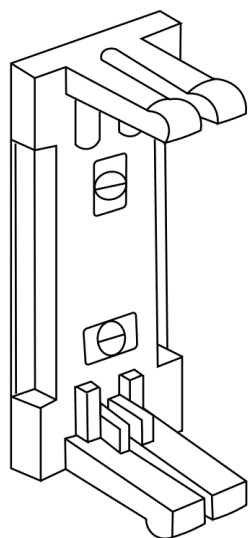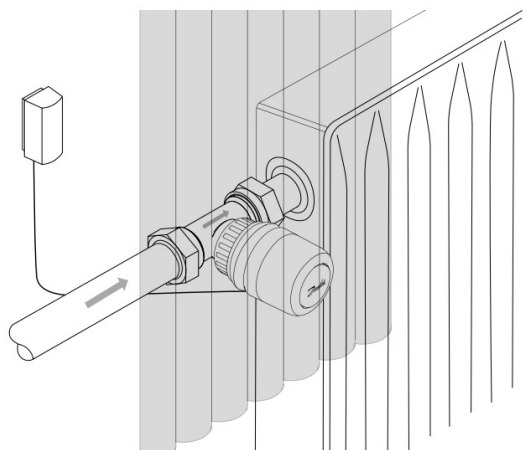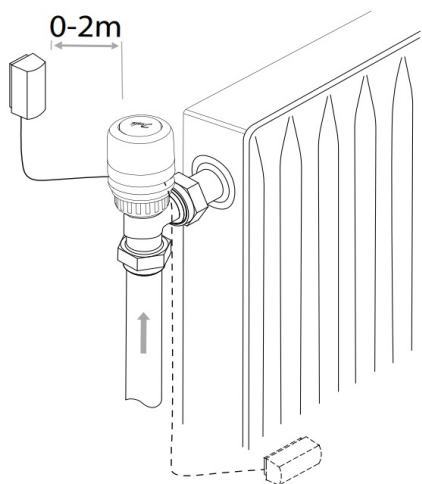



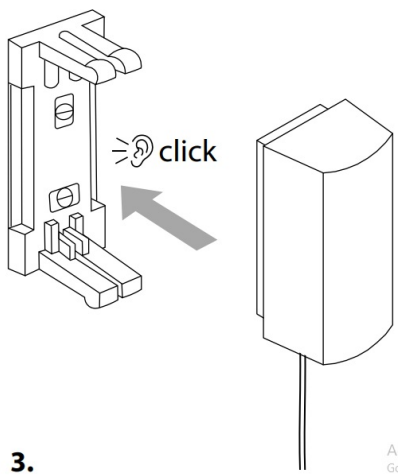


Temperature Limitation

e.g.
MAX = 4

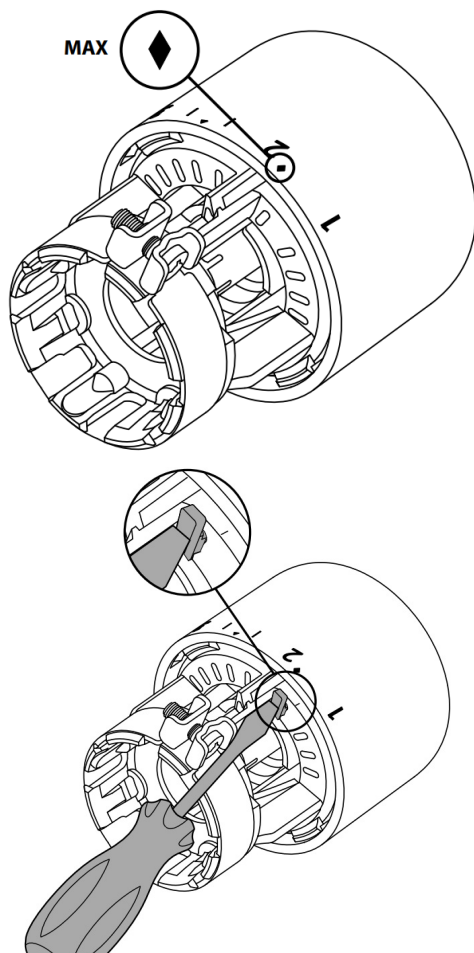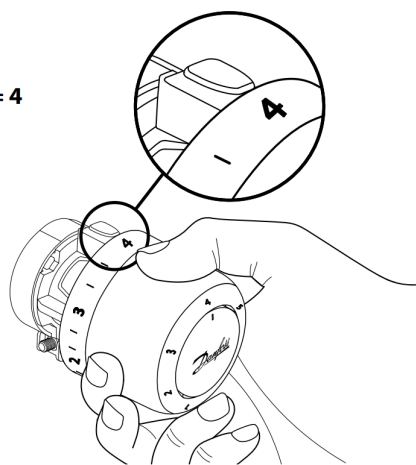


e.g.
MIN = 2

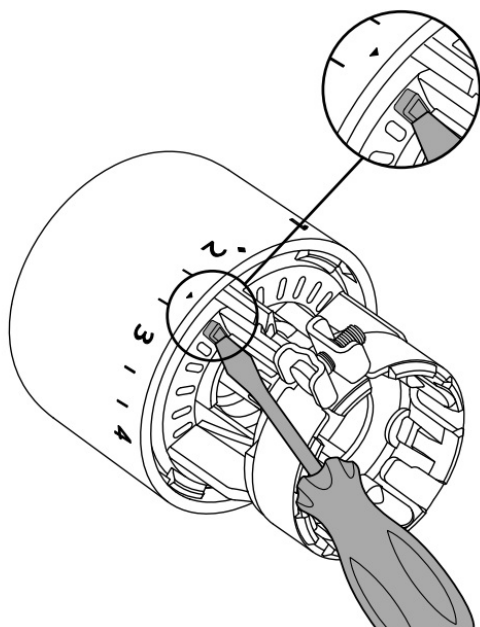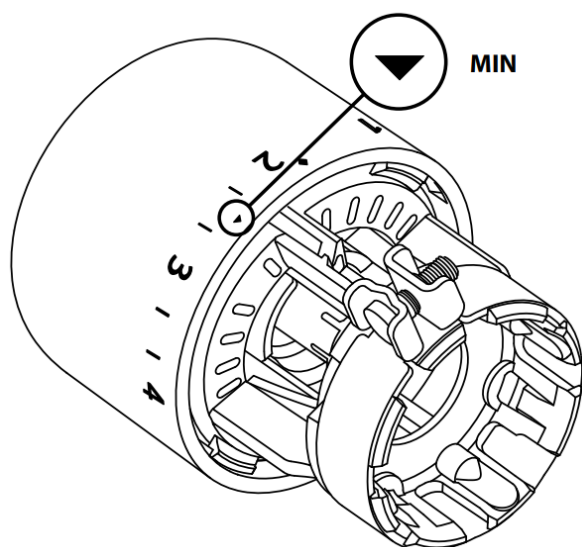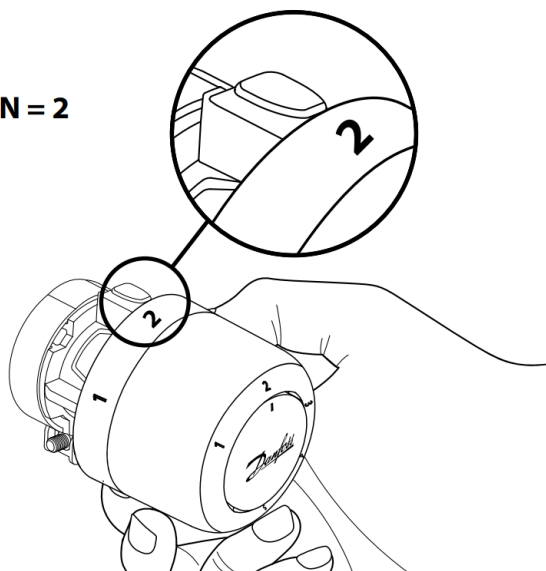


Code no.
013G1246


Blind mark

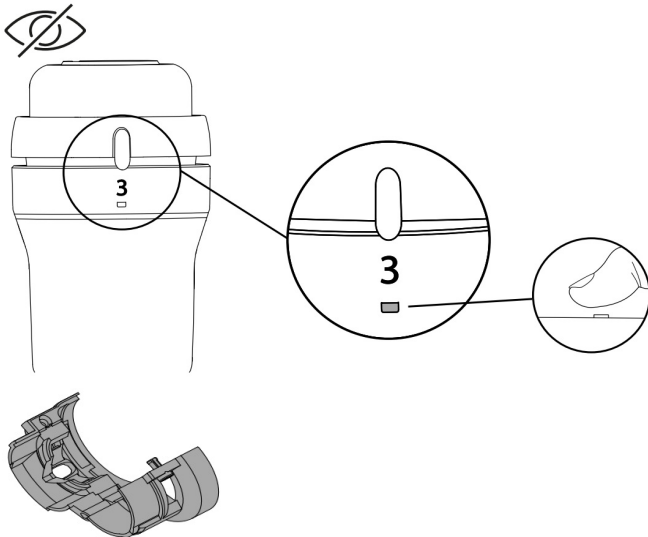

Code no. 013G1246

Installation

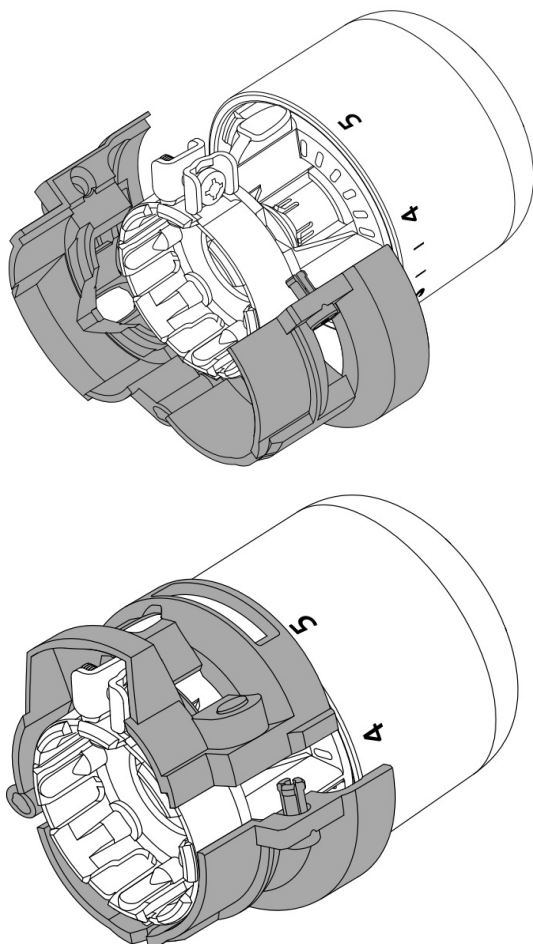

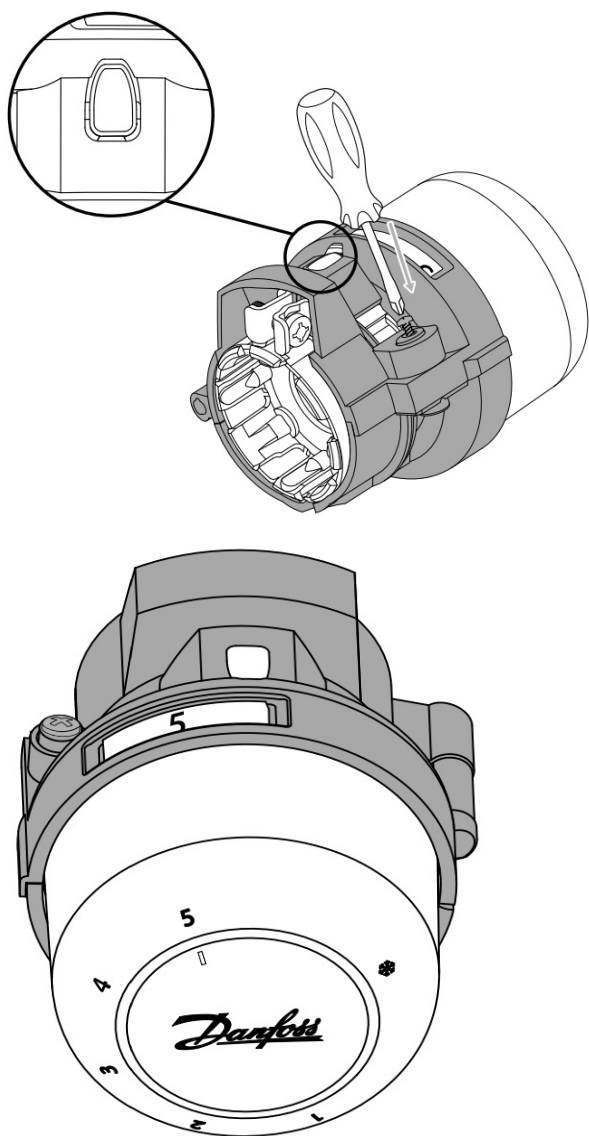

Danfoss A/S Climate Solutions danfoss.com +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved. A .-1-;.,n1-e, Ai; rt.



Documents / Resources



[Danfoss Aero RA-V Series Remote Sensor](#) [pdf] Installation Guide
013G1246, 015G4951, Aero RA-V Series Remote Sensor, Aero RA-V Series, Remote Sensor, Sensor