



## Danfoss Aero RA-VL Thermostatic Sensors Installation Guide

[Home](#) » [Danfoss](#) » Danfoss Aero RA-VL Thermostatic Sensors Installation Guide 



Aero RA-VL Thermostatic Sensors




Installation Guide

## Contents


- [1 Installation](#)
- [2 Temperature Limitation](#)
- [3 Blind mark](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

## Installation

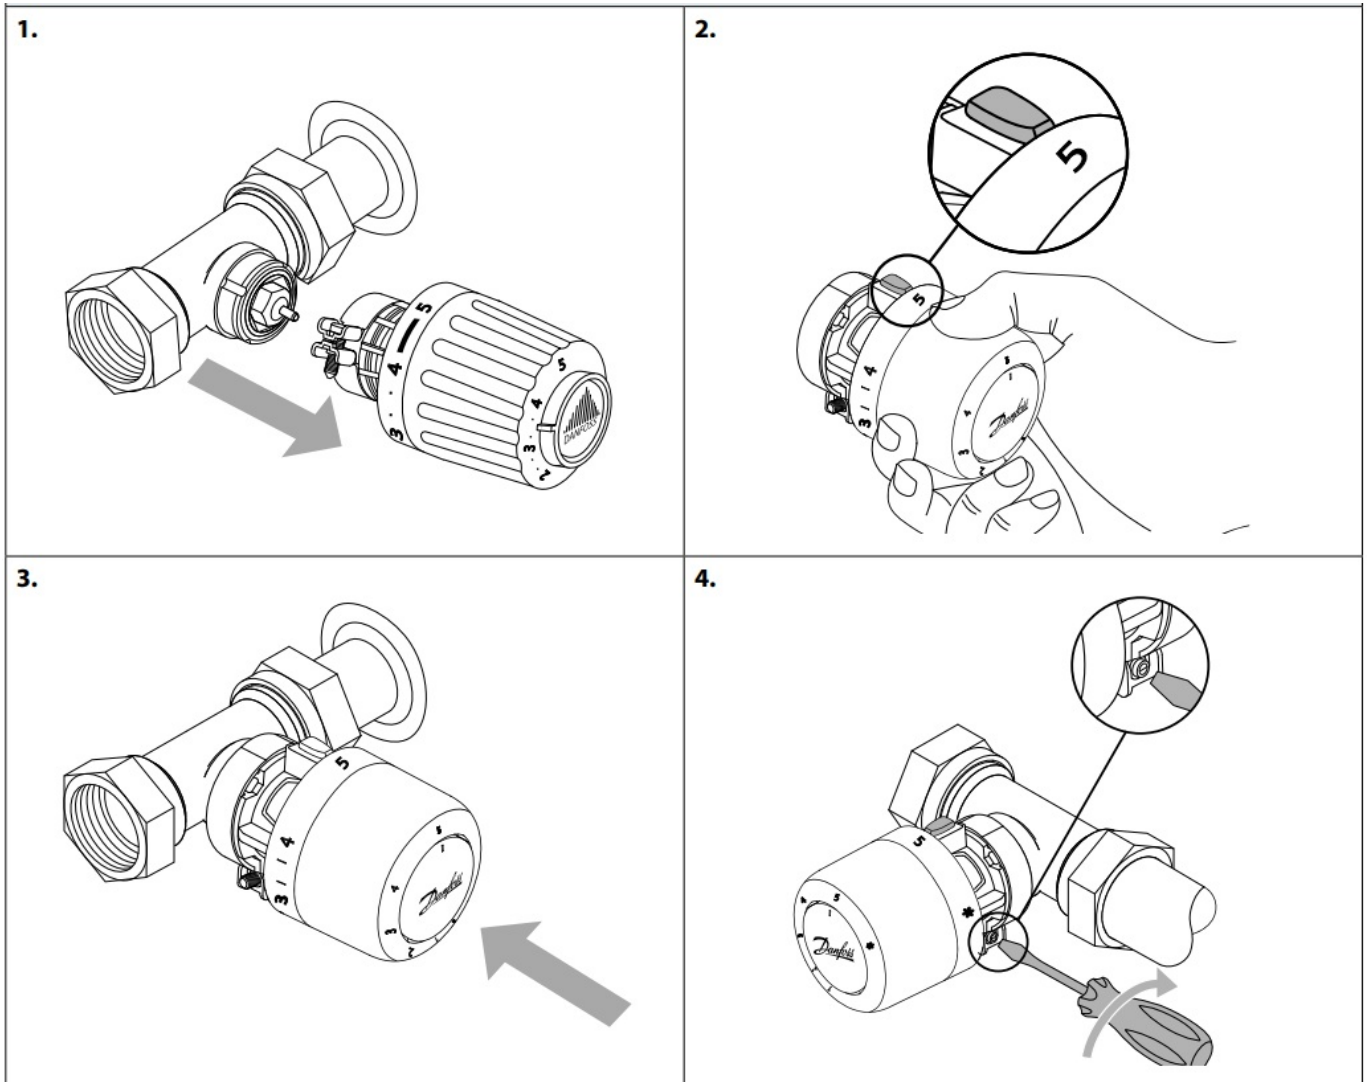


## Temperature Limitation


1.

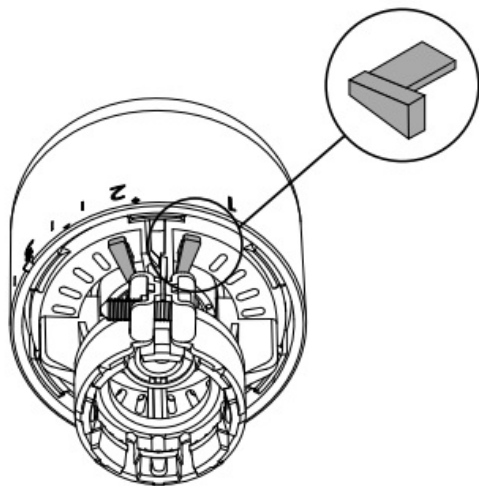


2.

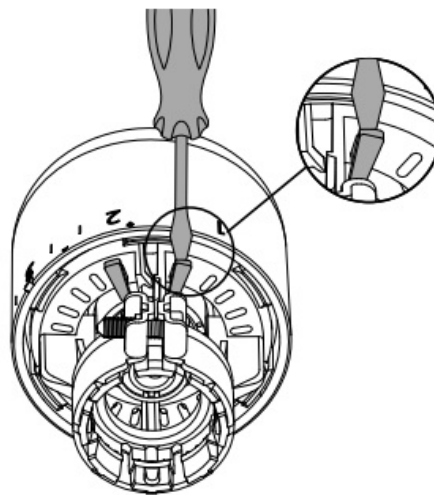


e.g.  
MAX = 4

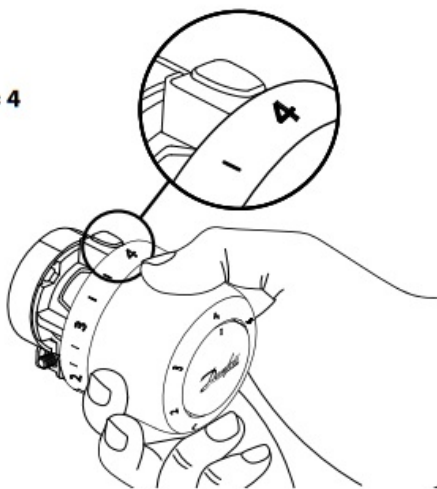


4.

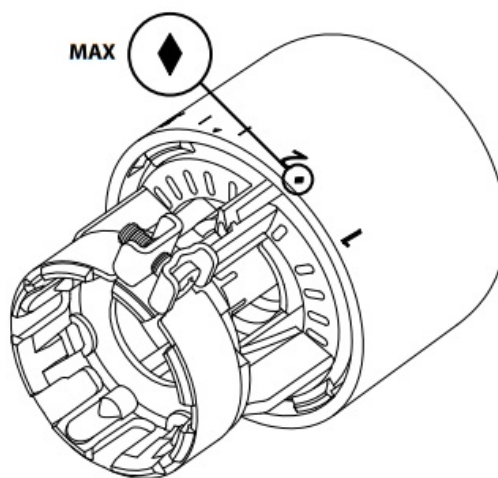



5.




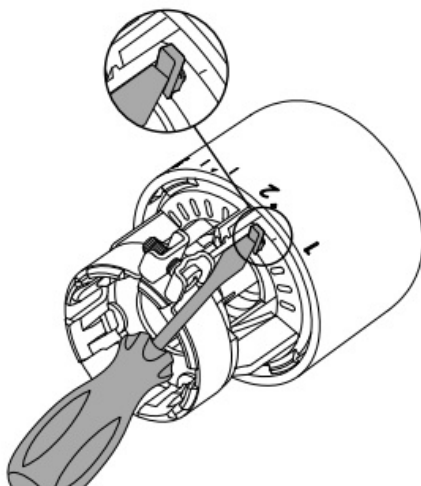


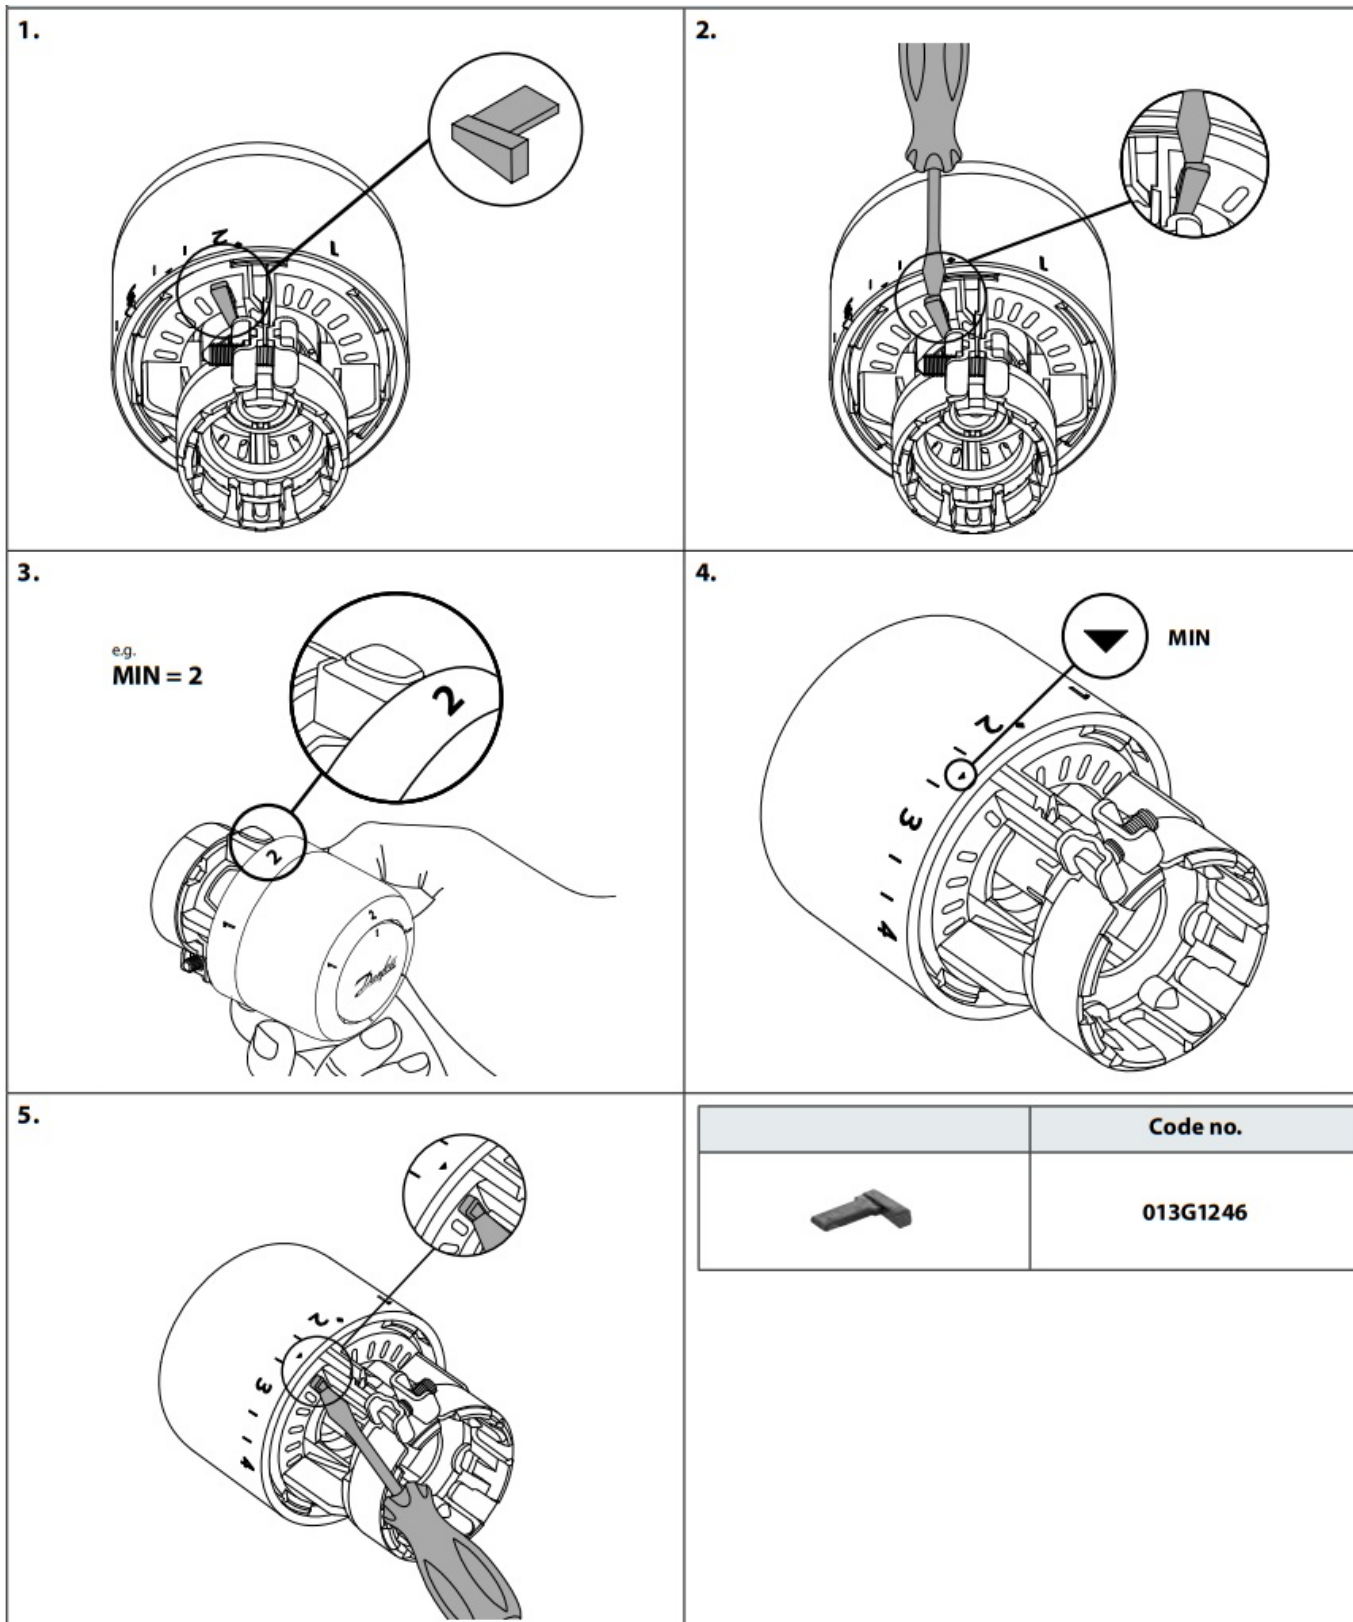

Blind mark

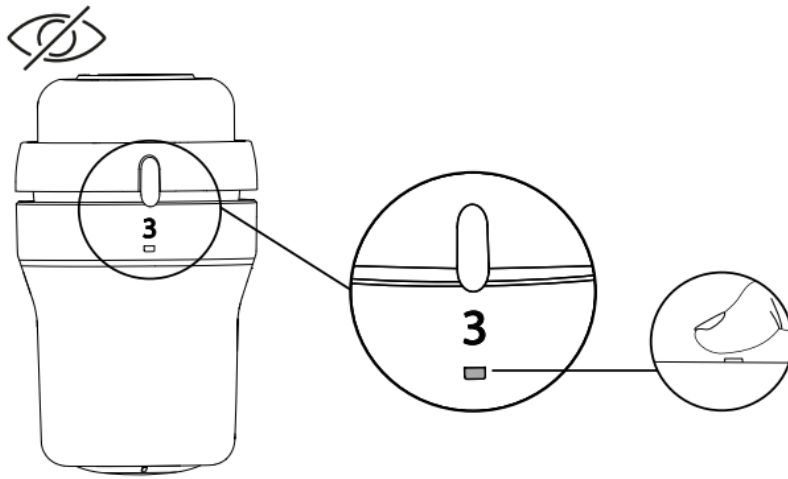

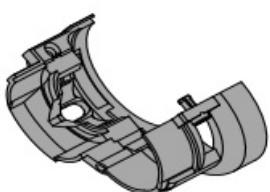	Code no.
	015G4951
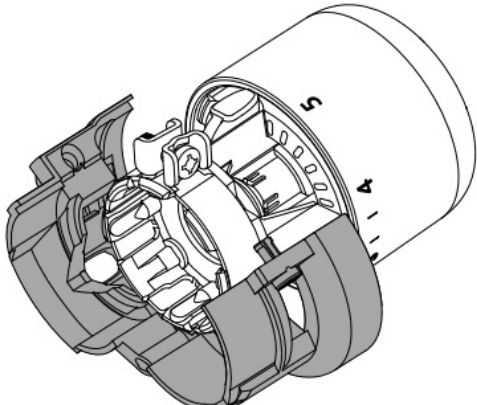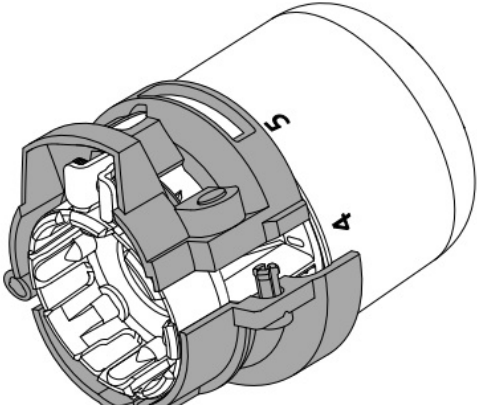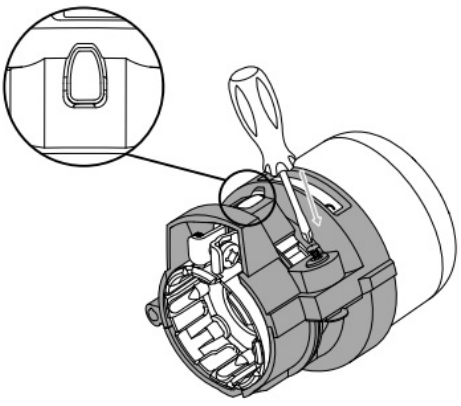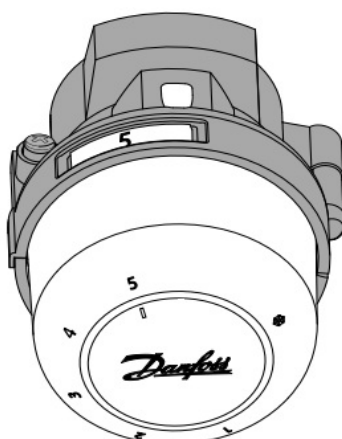
<p>1.</p> 	<p>2.</p> 
<p>3.</p> 	<p>4.</p> 



Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material.

Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

© Danfoss Climate Solutions  
2023.03 AN446855296018en-00010

Documents / Resources

	<p><a href="#">Danfoss Aero RA-VL Thermostatic Sensors</a> [pdf] Installation Guide Aero RA-VL Thermostatic Sensors, Aero RA-VL, Thermostatic Sensors, Sensors</p>
	<p><a href="#">Danfoss Aero RA-VL Thermostatic Sensors</a> [pdf] Installation Guide Aero RA-VL Thermostatic Sensors, Aero RA-VL, Thermostatic Sensors, Sensors</p>