

Danfoss Aero Series Tamperproof Remote Sensor Installation Guide

Home » Danfoss » Danfoss Aero Series Tamperproof Remote Sensor Installation Guide 🖺



Contents

- 1 Danfoss Aero Series Tamperproof Remote Sensor
- **2 Product Information**
- 3 Installation Guide
- 4 Installation
- **5 Remote sensor**
- **6 Temperature Limitation**
- 7 Theft protection
- 8 Scale cover
- 9 Documents / Resources
- **10 Related Posts**



Danfoss Aero Series Tamperproof Remote Sensor



Product Information

Thermostatic Sensors Series


The thermostatic sensors series is a set of sensors designed to control the temperature in different applications. The package includes 20 pieces of code no. 013G1232 and 20 pieces of code no. 015G4952 scale covers.

Installation Guide


- 1. Start by mounting the thermostatic sensor on the surface where you want to control the temperature.
- 2. Ensure that the sensor is properly secured by clicking it into place.
- 3. Attach the scale cover to the sensor by clicking it into place.
- 4. Adjust the temperature settings by rotating the knob on the sensor. The MAX setting corresponds to the highest temperature level, while the MIN setting corresponds to the lowest temperature level.

Note: The thermostatic sensors series has a range of 0-2m. The scale cover code no. is 015G4952 (20 pcs) and the thermostatic sensor code no. is 013G1232 (20 pcs).


Installation

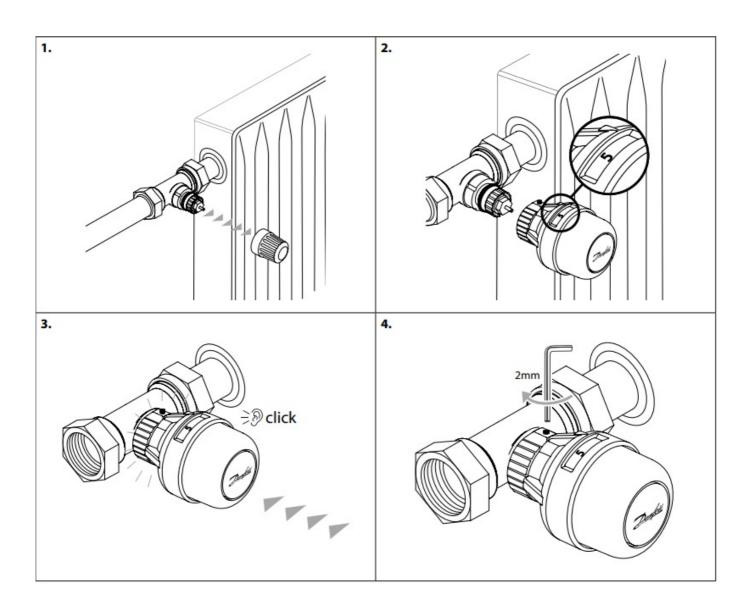


Remote sensor

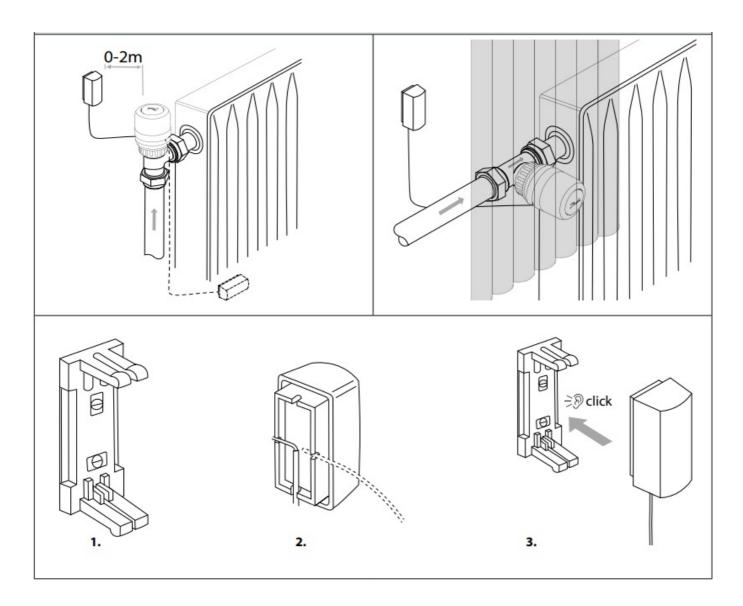


Temperature Limitation

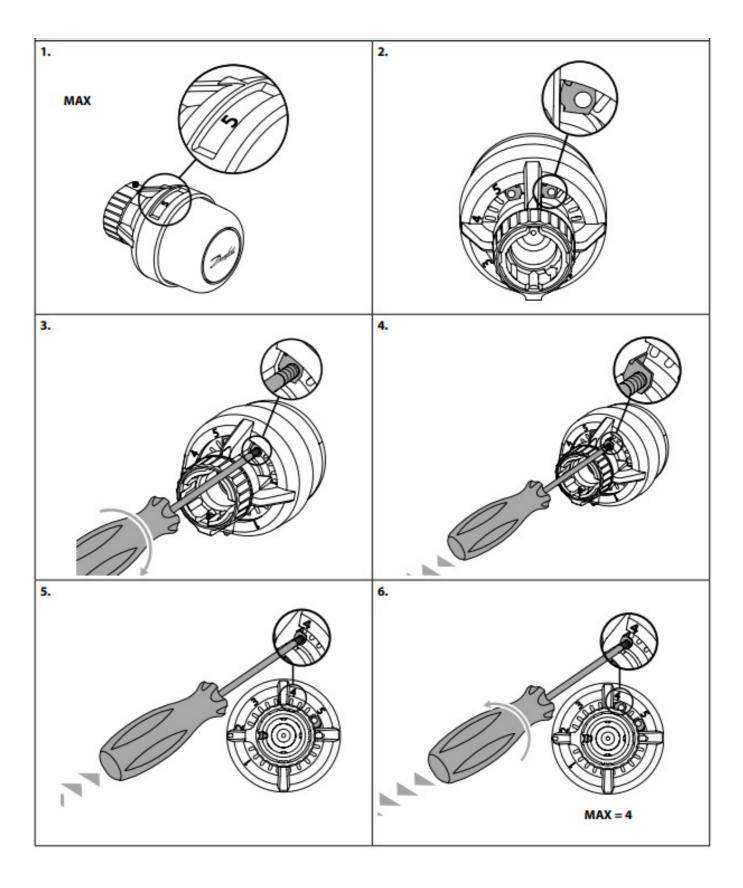

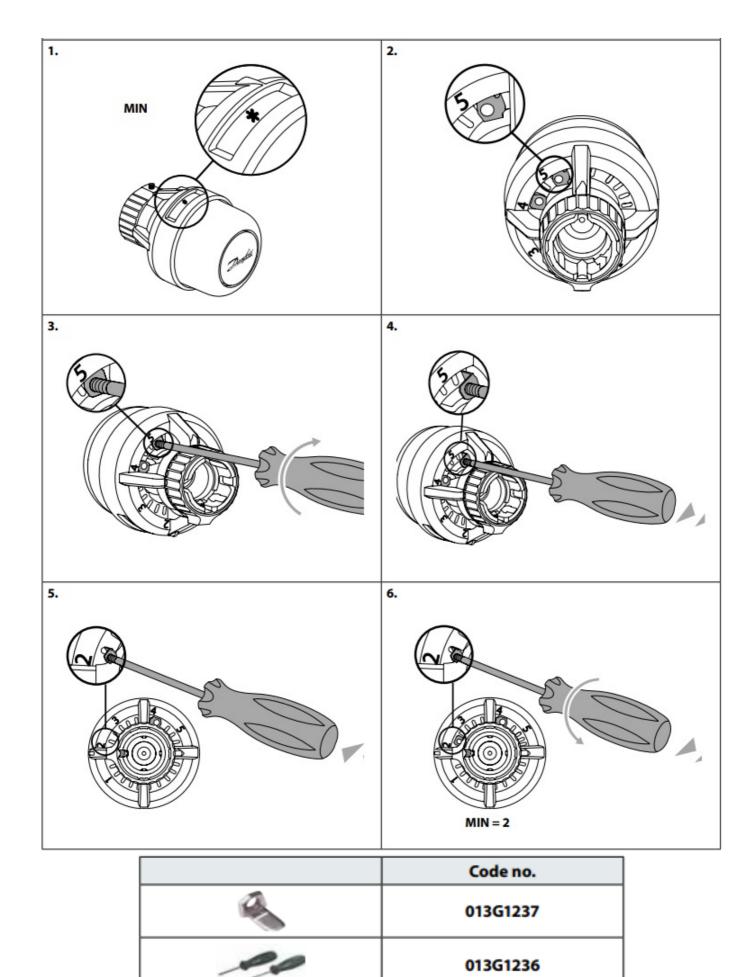


Theft protection

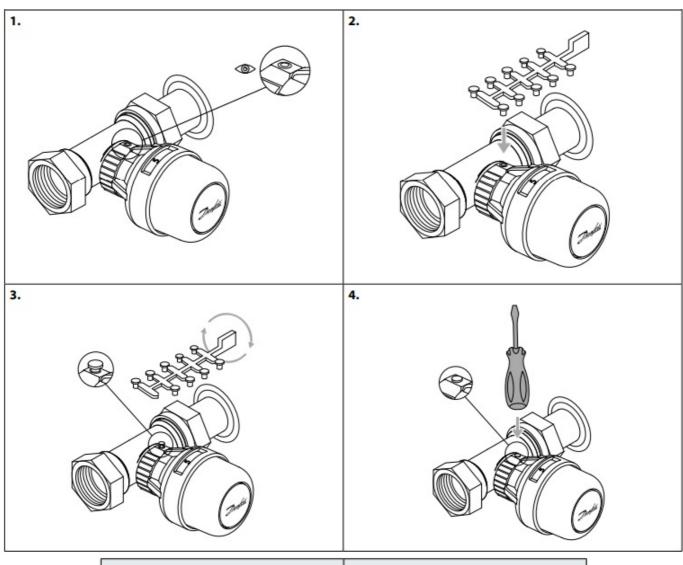

	Code no.
ETT T	013G1232 (20 pcs.)
	013G1236


Scale cover

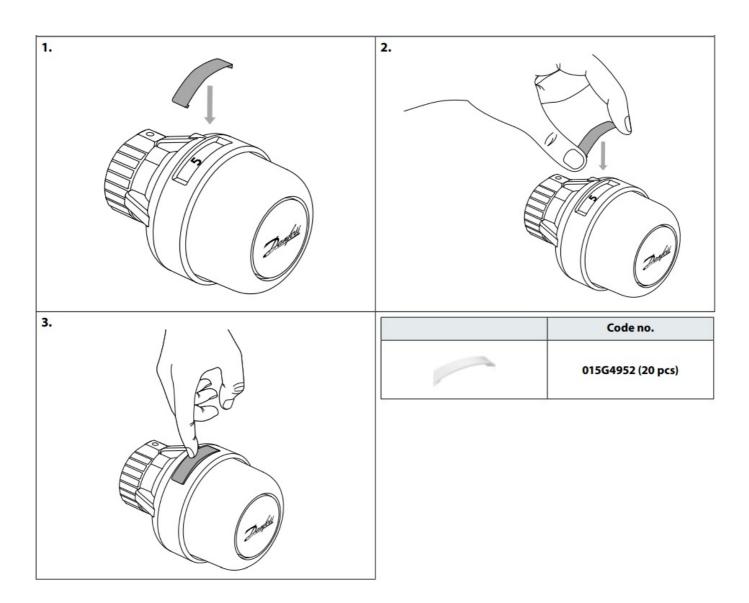

Danfoss A/S

Climate Solutions <u>danfoss.com</u> +45 7488 2222 Any information, including, but not limited to information on the selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, oraly, electronically, online or via download, shall be considered informative, and is only binding it and to the extent, explcit reference Is made in a quotation or order connection. Danross cannot accept any responsidiyTor posSIDe errors in cataogues, Drocnures, Vlaeos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to the form, fht or function of the product. All trademarks in this material are property of Danfos5s A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

 Documents / Resources



<u>Danfoss Aero Series Tamperproof Remote Sensor</u> [pdf] Installation Guide 013G1232, 013G1236, 015G4952, Aero Series Tamperproof Remote Sensor, Aero Series, Tamperproof Remote Sensor, Remote Sensor, Sensor